



HP 3000/3600/3800 Fuser and ETB Installation Instructions

- 1 Fusing Assembly – RM1-2665
- 1 ETB Assembly – RM1-2759 (Simplex)
- 1 ETB Assembly – RM1-2752 (Duplex)
- 1 Tray 1 Pickup Roller – RM1-2741
- 1 Tray 1 Separation Pad – RM1-2699
- 1 Tray 2 Pickup Roller – RM1-2702
- 1 Tray 2 Separation Pad – RM1-2709

CAUTION: Fuser may be hot. Turn off printer, unplug it and allow it to sit for 20 to 30 minutes before performing these maintenance procedures.

NOTE:



Fusing Assembly Removal and Replacement

1. Open top cover assembly (fuser access cover)
2. Pinch blue tabs in the direction of the blue arrows and lift fuser straight up and out of printer.





Replacement of transfer belt ETB

1. Open toner access cover (front door)
2. Push in on the blue locking buttons, left and right side (callout 1) and remove transfer belt.

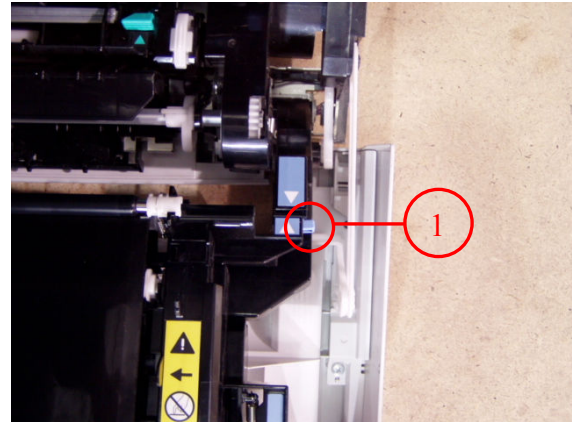
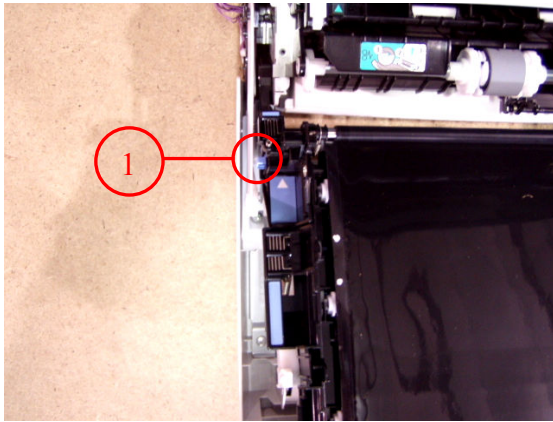


Replacing Tray 1 Pickup Roller and Separation Pad

1. Remove transfer belt
2. Remove one screw (callout 2) from tray one separation pad assembly. Pull separation pad assembly straight out the front of printer. **NOTE:** be careful when pulling separation pad assembly out to clear tray one paper sensor flag (callout 3).

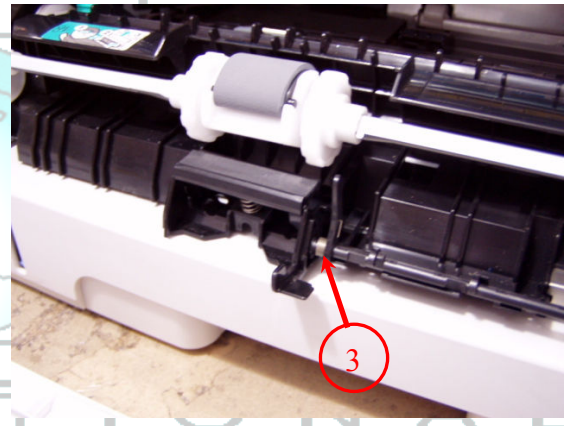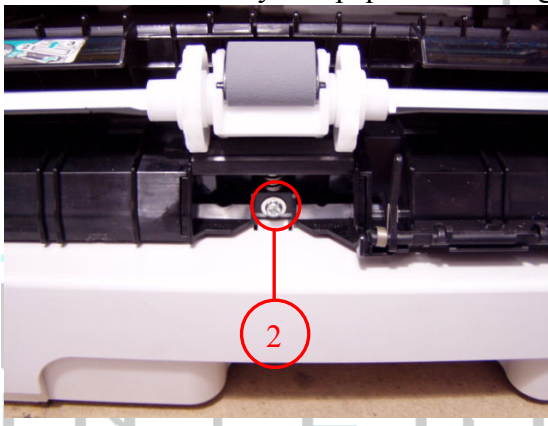


3. Push locking tabs away from gray roller (callout 4) and lift roller out. *Reinstallation tip,* replace roller by locking the round nubs (callout 5) on the pickup roller into the **front** part of the roller holder and then push roller into place.

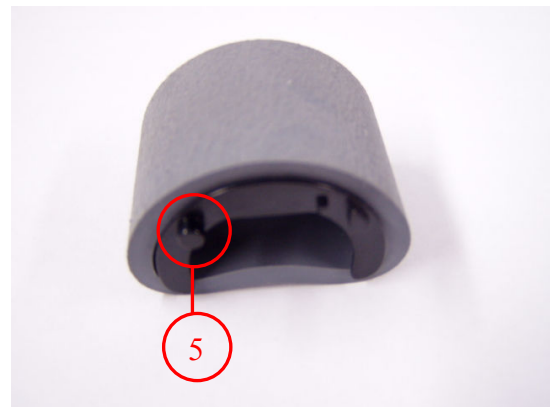
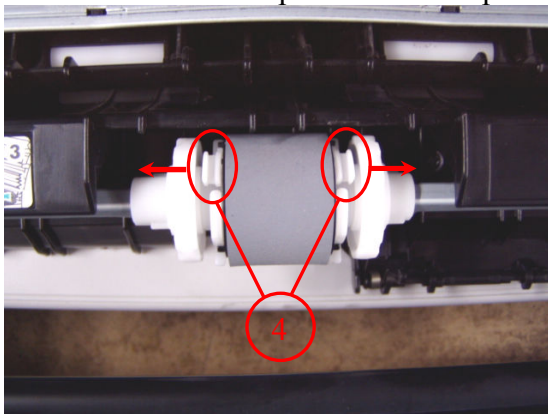


Replacing Tray 2 Pickup Roller and Separation Pad

1. Remove tray 2 and then remove two screws (callout 6) from separation pad assembly. Lift separation up and out of tray 2 and replace pad assembly.

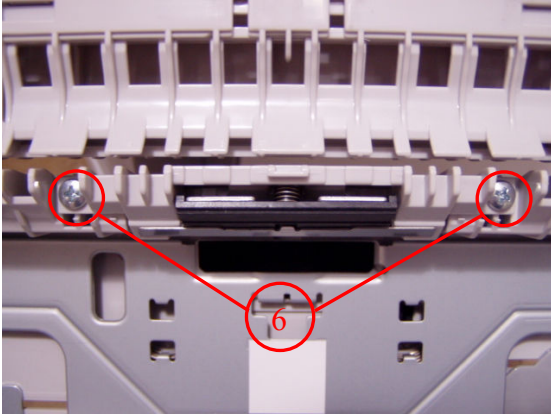

2. Lift open tray two pickup roller access cover and push locking tabs away from gray roller (callout 7) and lift roller up and out. *Reinstallation tip*, replace roller by locking the round nubs (callout 8) on the pickup roller into the **back** part of the roller holder and then push roller into place.

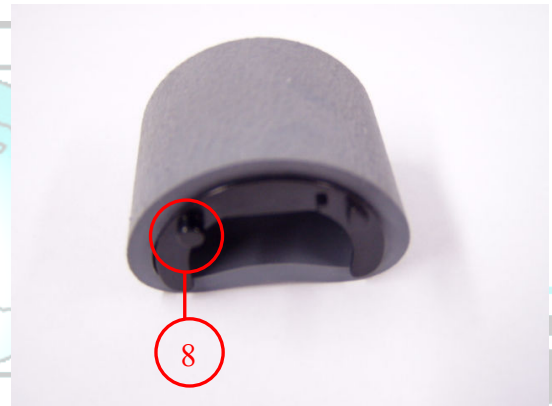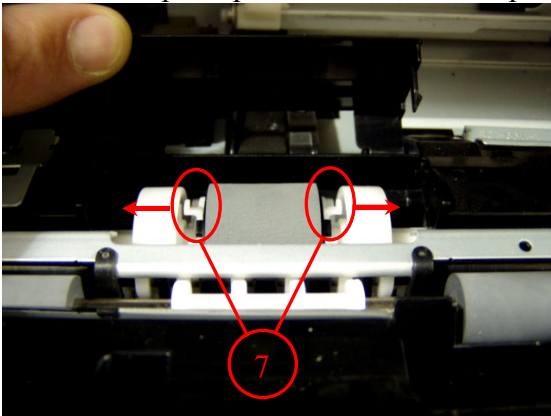

I N T E R N A T I O N A L