


For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).

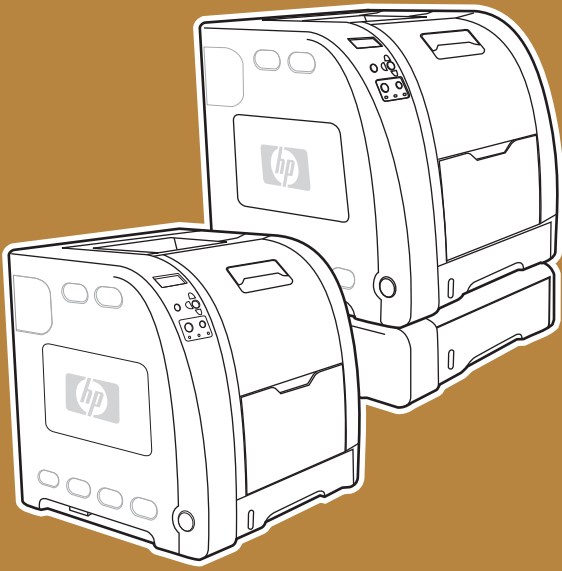

**hp** color LaserJet  
3500/3550 and 3700  
series printer

**service**



# HP Color LaserJet 3500/3550 and 3700 series printers

**Service Manual** \_\_\_\_\_

© 2004 Copyright Hewlett-Packard  
Development Company, L.P.

Reproduction, adaptation or translation  
without prior written permission is  
prohibited, except as allowed under the  
copyright laws.

The information contained herein is subject  
to change without notice.

The only warranties for HP products and  
services are set forth in the express  
warranty statements accompanying such  
products and services. Nothing herein  
should be construed as constituting an  
additional warranty. HP shall not be liable  
for technical or editorial errors or omissions  
contained herein.

Part number: Q5990-90939

Edition 1, 10/2004

#### **Trademark Credits**

Microsoft® is a U.S. registered trademark  
of Microsoft Corporation.

MS-DOS® is a U.S. registered trademark  
of the Microsoft Corporation.

\*Pantone®, Inc.'s check-standard  
trademark for color.

PostScript® is a trademark of Adobe  
Systems Incorporated.

TrueType™ is a U.S. trademark of Apple  
Computer, Inc.

UNIX® is a registered trademark of The  
Open Group.

Windows, MS Windows, and Windows NT  
are U.S. registered trademarks of Microsoft  
Corporation.

## Conventions

This manual uses the following conventions:

Color is used to emphasize items that are important to the material under discussion.

**Bold** is used for menu items to click and for emphasis, particularly in situations where italic type would be confusing.

*Italic* type is used to indicate related documents or emphasis.

DISPLAY type indicates text as seen on the printer control panel display.

Commands you use on a computer keyboard or on the printer control panel are shown in Keycap. Two examples are MENU and STOP.

COURIER type indicates text that you type on a computer keyboard exactly as shown.

---

### NOTE

---

Notes contain important information set off from the text.

---

### CAUTION

---

Caution messages alert you to the possibility of damage to equipment or loss of data.

---

### WARNING!

---

Warning messages alert you to the possibility of personal injury.



# Table of contents

## 1 Printer description

Chapter contents .....	1
Printer configurations .....	3
HP Color LaserJet 3500/3550 printer .....	3
HP Color LaserJet 3500n/3550n printer .....	3
HP Color LaserJet 3700 printer .....	4
HP Color LaserJet 3700n printer .....	4
HP Color LaserJet 3700dn printer .....	5
HP Color LaserJet 3700dtn printer .....	5
Printer features .....	6
Printer assemblies .....	9
Front and rear features .....	9
Site requirements .....	11
Space requirements .....	11
Electrical specifications .....	12
Environmental specifications .....	13
Printer specifications .....	15
Duty cycle .....	15
Print media specifications .....	16
Supported media weights and sizes .....	16
Hewlett-Packard warranty statement .....	19
HP's Premium Protection Print Cartridge Warranty Limited Warranty Statement .....	20
Premium Protection Warranty Color LaserJet Image Fuser Kit and Image Transfer Kit Limited Warranty Statement .....	21
Identification .....	22
Model and serial numbers .....	22
Power and regulatory information .....	22
Selecting paper .....	24
Paper to avoid .....	24
Paper that can damage the printer .....	24
Printing on special media .....	26
Transparencies .....	26
Glossy paper .....	26
Colored paper .....	26
Envelopes .....	27
Labels .....	27
Heavy paper .....	28
HP LaserJet Tough paper .....	28
Preprinted forms and letterhead .....	28
Recycled paper .....	29
Media weight .....	29
Environmental product stewardship program .....	31
Protecting the environment .....	31
Declaration of Conformities .....	34
Safety statements .....	37
Laser safety statement .....	37

Canadian DOC regulations .....	37
EMI statement (Korea) .....	37
VCCI statement (Japan) .....	37
Laser statement for Finland .....	38
FCC Regulations .....	39

## 2 Service approach

Chapter contents .....	41
Search approach .....	42
Parts and supplies .....	43
Ordering parts .....	43
Ordering supplies .....	43
Exchange program .....	44
Supplies .....	44
World Wide Web .....	44
HP service parts information CD-ROM .....	44
HP support assistant CD-ROM .....	44
Customer care reseller sales and service support center .....	44
Ordering related documentation and software .....	45
HP maintenance agreements .....	46
On-site service agreements .....	46

## 3 Installation and configuration

Chapter contents .....	47
Checking the package contents .....	48
Unpacking the printer .....	50
Installing the print cartridge .....	55
Loading paper into Tray 3 (optional) .....	57
Loading paper into Tray 2 .....	59
Loading paper into Tray 1 (optional procedure) .....	61
Connecting power .....	62
Installing a new control panel overlay (optional) .....	63
Testing the printer operation .....	64
Using PowerSave Time .....	65
To set PowerSave Time .....	65
To disable/enable PowerSave .....	65
USB configuration .....	66
Connecting the USB cable .....	66
Parallel configuration (HP Color LaserJet 3700 series printer only) .....	67
Network configuration .....	68
Enhanced I/O (EIO) configuration (HP color LaserJet 3700 series printer only) .....	69
HP Jetdirect print servers .....	69
Available enhanced I/O interfaces .....	69
NetWare networks .....	70
Windows and Windows NT networks .....	70
AppleTalk networks .....	70
UNIX/Linux networks .....	70
Printer software .....	71
Printer drivers .....	71
Software for networks .....	72
Utilities .....	73
Setting security on the printer .....	76
Locking the control panel .....	76
Using an ASCII PJI escape sequence to set security .....	77
Printer memory for the HP Color LaserJet 3700 series printer .....	78

Installing memory and font DIMMs .....	79
Enabling memory .....	83
Enabling the language font DIMM (HP color LaserJet 3700 only) .....	83
Checking DIMM installation (HP color LaserJet 3700 only) .....	84
Installing an HP Jetdirect print server card in the HP color LaserJet 3700 series printer .....	85
To install the HP Jetdirect print server card .....	85
Installing an HP Jetdirect en3700 external print server .....	88

## 4 Printer maintenance

Chapter contents .....	91
Cleaning the printer and accessories .....	92
Cleaning spilled toner .....	92
Managing supplies .....	94
Supplies life .....	94
Approximate replacement intervals for supplies for the HP Color LaserJet 3500 series printer .....	94
Approximate replacement intervals for supplies for the HP Color LaserJet 3550/3700 series printer .....	94
Locating supplies and parts .....	96
Replacing supply items .....	97
Replacing the transfer unit .....	99
Replacing the fuser and pickup roller .....	103

## 5 Theory of operation

Chapter contents .....	113
Basic operation .....	114
Operation sequence .....	114
Power-on sequences .....	116
Engine control system .....	119
DC controller PCB .....	119
Low-voltage power supply circuit .....	126
Low-voltage power supply circuit .....	131
Laser/scanner system .....	139
Laser control .....	140
Scanner motor control .....	144
Image formation system .....	146
Print process .....	147
Developing section .....	156
Cartridge cleaning control .....	163
Transfer section .....	164
ITB cleaning control .....	167
Waste toner full detection .....	167
Transfer (ITB) unit detection .....	168
Transfer unit life detection .....	169
ITB self-aligning mechanism .....	170
Primary transfer roller engaging/disengaging control .....	171
Secondary transfer roller engaging/disengaging control .....	172
Secondary transfer roller engaging/disengaging detection .....	173
Color misregistration control .....	174
Image stabilization control .....	177
Pickup/feed system .....	182
Pickup/feed unit .....	184
Fuser/delivery unit .....	189
Duplexing feed unit (HP 3700 printer only) .....	192
Jam detection .....	195

Paper feeder .....	197
Pickup/delivery sequence .....	198
Paper jam detection .....	199
<b>6 Removal and replacement</b>	
Chapter contents .....	201
Introduction .....	204
Removal and replacement strategy .....	204
Repair notices .....	204
Caution regarding electrostatic discharge (ESD) .....	204
Required tools .....	204
Types of screws .....	205
Supplies .....	207
Print cartridges and transfer unit .....	208
Covers .....	209
Front door removal .....	209
Left cover removal .....	210
Left front cover removal .....	211
Right cover removal .....	213
Top cover removal .....	214
Upper rear door removal .....	214
Rear cover removal .....	215
Lower rear door (rear output bin) removal .....	215
Tray 1 (multipurpose) removal .....	216
Main Assemblies .....	217
Transfer unit removal .....	218
Print cartridge removal .....	219
Fuser removal .....	220
Face-down delivery assembly removal .....	221
Laser/scanner assembly removal .....	222
Image drive assembly removal .....	223
Developing engaging drive assembly removal .....	225
Pick-up/feed assembly removal .....	225
Main assembly parts .....	236
Tray 1 pick-up roller removal .....	237
Tray 1 separation pad removal .....	237
Tray 2 pick-up roller removal .....	238
Tray 2 separation pad removal .....	238
Secondary transfer charging roller removal .....	239
Fuser sleeve unit removal .....	239
Pressure roller removal .....	239
Main thermistor/sub-thermistor removal .....	239
Thermoswitch removal .....	239
Feed guide unit removal .....	240
Swing guide removal, right .....	242
Swing guide removal, left .....	245
Switches .....	250
Door Switch (SW1) removal .....	250
Test print switch (SW1001) removal .....	251
Power switch (SW3001) removal .....	251
Sensors .....	252
Tray 1 (multipurpose tray) paper sensor (PS1) removal .....	253
Tray 2 (cassette) paper sensor (PS2) removal .....	253
Registration paper sensor (PS4) removal .....	254
Media sensor (PS5) removal .....	255

Fuser front paper sensor (PS6) removal .....	256
Fuser delivery paper sensor (PS7) removal .....	256
Face-down delivery paper sensor (PS8) removal .....	257
Reversed paper sensor (PS9) removal (HP 3700 only) .....	257
Duplex feed delivery paper sensor (PS10) removal (HP 3700 only) .....	258
Rear output bin paper sensor (PS11) removal .....	259
Color misregistration sensor (PS12) removal .....	260
Waste toner level sensor (PS13) removal .....	260
Developing engaging sensor (PS14) removal .....	261
Environment sensor (PS15) removal .....	261
Secondary transfer roller engaging sensor (PS16) removal .....	262
Solenoids and Clutches .....	263
Tray 1 (multipurpose tray) pick-up solenoid (SL1) removal .....	263
Tray 2 pick-up solenoid (SL2) removal .....	264
Secondary transfer roller engaging solenoid (SL4) removal .....	265
Duplex feed solenoid (SL5) removal (HP 3700 only) .....	266
Registration clutch (CL1) removal .....	266
Black (K) development clutch (CL2 - image drive) removal .....	267
Developing engaging drive clutch (CL3) removal .....	268
Motor and fans .....	269
Feed motor (M1) removal .....	269
Delivery motor (M2) removal .....	271
Drum motor (M3) removal .....	271
Developing motor (M4) removal .....	273
Primary transfer roller engaging motor (M5) removal .....	274
Exhaust fan (FAN1) removal .....	277
Circuit Boards .....	278
DC controller PCB removal .....	278
Formatter PCB removal .....	279
High-voltage power supply PCB removal .....	281
Low-voltage power supply PCB removal .....	285
Memory controller PCB removal .....	286
Control Panel PCB removal .....	287
Miscellaneous parts .....	288
Swing rod guide, left removal .....	288
Swing rod/lock guide, right removal .....	288
Transfer contact assembly removal .....	288
Developing contact assembly .....	288
Tray 2 (cassette) parts removal .....	291
Tray 2 (cassette) .....	291
Cassette (Tray 2) guide, right, removal .....	291
500-Sheet paper feeder (Tray 3) covers .....	296
Front cover removal - 500-sheet paper feeder .....	296
Right cover removal - 500-sheet paper feeder .....	297
Left cover removal - 500-sheet paper feeder .....	297
500-Sheet paper feeder internal parts .....	298
Pick-up roller removal - 500-sheet paper feeder .....	298
Separation pad removal - 500-sheet paper feeder .....	299
Pick-up drive unit removal - 500-sheet paper feeder .....	299
500-Sheet paper feeder sensor/solenoid/motor/PCB .....	300
500-Sheet paper feeder PCB removal - 500-sheet feeder .....	300
Pick-up clutch (CL4) removal - 500-sheet feeder .....	301
Pick-up solenoid (SL3) removal - 500-sheet feeder .....	301
Paper sensor (PS3) removal - 500-sheet feeder .....	302

## 7 Troubleshooting

Chapter contents .....	303
Introduction .....	306
Troubleshooting process .....	307
Pre-troubleshooting checklist .....	307
Troubleshooting flowchart .....	308
Troubleshooting power-on .....	310
Printer error troubleshooting .....	312
Status messages .....	312
Warning messages .....	312
Error messages .....	312
Critical error messages .....	312
Alphabetical printer messages .....	312
Numerical printer messages .....	327
Replacement parts configuration .....	352
Formatter and DC Controller replaced at the same time .....	352
Formatter (New) replacement configuration .....	352
Formatter (previously installed in another printer) replacement configuration .....	353
DC Controller (New) replacement configuration .....	353
DC Controller (previously installed in another printer) replacement configuration .....	354
Media sensor (PS5) replacement configuration .....	354
Color Misregistration Sensor (PS12) replacement configuration .....	355
Laser/scanner Assembly replacement configuration .....	355
Fuser replacement configuration .....	355
Transfer unit (ITB assembly) replacement configuration .....	355
Paper path troubleshooting .....	356
Paper path jam areas .....	357
Paper jam error message .....	357
Paper path areas jam troubleshooting .....	360
Paper jam recovery feature .....	377
Avoiding paper jams .....	377
General paper path troubleshooting .....	379
Persistent jams .....	380
Image formation troubleshooting .....	381
Print quality problems associated with media .....	381
Overhead transparency defect .....	381
Print quality problems associated with the environment .....	382
Print quality problems associated with paper jams .....	382
Print quality problems associated with toner buildup .....	382
Print quality troubleshooting pages .....	383
Calibrating the printer .....	383
Using Color .....	384
HP ImageREt 2400 .....	384
Paper selection .....	384
Color options (available for the HP Color LaserJet 3700 series printer) .....	384
Standard red-green-blue (sRGB) .....	384
Printing in four-colors [CMYK (available for the HP Color LaserJet 3700 series printer) .....	385
CMYK ink set emulation (PostScript only) .....	385
Managing color .....	386
Print in Grayscale .....	386
Automatic or manual color adjustment .....	386
Manual color options .....	386
Matching colors .....	388
Swatch book color matching (HP Color LaserJet 3700 series printer only) .....	388
Adjusting color balance .....	389

Image defects .....	390
Light image .....	391
Light color .....	392
Dark image .....	392
Dark color .....	393
Completely blank image .....	393
All black or solid color .....	393
Dots in vertical lines .....	394
Dirt on back of paper .....	394
Dirt on front of paper .....	394
Vertical lines .....	395
White vertical lines .....	395
Horizontal line .....	396
White horizontal line .....	396
Color missing .....	397
Blank spots .....	397
Poor fusing .....	397
Image distortion .....	398
Color misregistration .....	398
Smearing .....	399
Misplaced image .....	399
Reversed color .....	400
Snail tracks .....	400
Repetitive defects troubleshooting .....	401
Interface troubleshooting .....	403
Communications checks .....	403
EIO troubleshooting .....	403
AUTOEXEC.BAT standard configurations .....	404
Printer Job Language (PJL) commands .....	404
@PJL COMMENT .....	405
@PJL INFO CONFIG .....	405
@PJL INFO ID .....	405
@PJL INFO USTATUS .....	405
@PJL INFO PAGECOUNT .....	405
@PJL JOB .....	406
@PJL EOJ .....	406
@PJL ECHO .....	406
@PJL USTATUS JOB=ON/OFF .....	406
@PJL USTATUSOFF .....	406
Control panel troubleshooting .....	407
Printing a menu map .....	407
Information menu .....	407
Paper handling menu .....	408
Configure device menu .....	409
Print quality menu .....	411
System setup menu .....	414
I/O menu .....	418
Resets menu .....	419
Diagnostics menu .....	419
Service menu .....	420
Tools for troubleshooting .....	422
Embedded Web server (HP Color LaserJet 3700 series printer only) .....	422
HP Toolbox .....	424
Printer configuration page .....	428
Supplies status page .....	429
Usage page (HP 3700 only) .....	430

Event log .....	431
Diagnostics .....	433
Diagnostics flowchart .....	433
Engine diagnostics .....	434
Diagnostics from the Control Panel .....	436
Printer display menu .....	436
Diagnostics test menu .....	436
Paper Path Test .....	439
Component Test – special mode test .....	439
Print/Stop Test .....	442
Information menu .....	443
Configure device menu/printing menu .....	443
Configure device menu/resets menu .....	443
Configure device menu/print quality menu .....	443
Test pages .....	445
Engine test page .....	445
Formatter test page .....	445
Engine resets .....	446
Cold reset .....	446
NVRAM initialization .....	446
Calibration bypass .....	447
Calibrate Now .....	447
Service menu .....	448
Accessing the Service menu .....	448
Diagrams .....	450
Main parts .....	451
Switches .....	452
Sensors .....	453
Solenoids and clutches .....	454
Motors and fans .....	455
PCBs .....	456
Connector locations .....	458
500-sheet paper feeder connectors .....	462
General circuit diagram .....	463

## 8 Parts and diagrams

Chapter contents .....	465
Introduction .....	466
Ordering parts .....	467
Supplies and accessories .....	467
Replacement parts configuration .....	473
Illustrations and parts lists .....	478
Alphabetical parts list.....	538
Numerical parts list.....	551

## Index

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).