


HP Color LaserJet CM6030 and CM6040 MFP Series

Service Manual




For the complete service manual
please visit www.LaserPros.com.

**CM6030 MFP
CM6040 MFP**

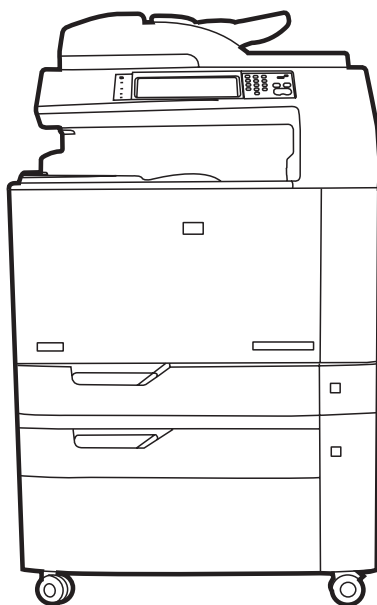

**CM6030f MFP
CM6040f MFP**

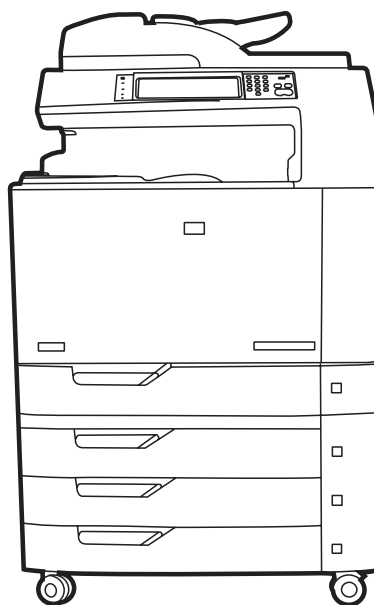

HP Color LaserJet CM6040 MFP Series Service Manual



Copyright and License

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: Q3938-90953

Edition 1, 04/2008

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Windows Vista™ is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

PANTONE® is Pantone, Inc's check-standard trademark for color.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.

Table of contents

1 Product basics

Product comparison	2
Product features	4
Product walkaround	7
Front view	7
HP Color LaserJet CM6040 MFP Series	7
Back view	8
Interface ports	9
Serial number and model number location	9
Supported operating systems	11

2 Control panel

Use the control panel	14
Control-panel layout	14
Home screen	15
Buttons on the touchscreen	16
Control-panel help system	16
Navigate the Administration menu	17
Information menu	18
Default Job Options menu	20
Default Options for Originals	20
Image adjustment	21
Default Copy Options	22
Default Fax Options	23
Default E-mail Options	24
Default Send to Folder Options	25
Default Print Options	26
Time/Scheduling menu	27
Management menu	29
Initial Setup menu	31
Networking and I/O	31
Fax Setup	38
E-mail Setup	41
Send Setup menu	41

Device Behavior menu	42
Print Quality menu	49
Troubleshooting menu	53
Resets menu	59
Service menu	60

3 Paper and print media

Understand paper and print media use	62
Supported paper and print media sizes	63
Supported paper types	66
Special paper or print media guidelines	68
Load paper and print media	69
Load Tray 1	69
Print envelopes	70
Load trays 2, 3, 4, or 5	70
Load standard-sized media into trays 2, 3, 4, or 5	70
Load undetectable standard-sized media into Tray 2, 3, 4, and 5	72
Load custom-size media into tray 2, 3, 4, or 5	73
Load large size paper into Tray 3, 4, or 5	74
Load letterhead, pre-printed, or pre-punched paper	74
Change the Image Rotation setting	75
Choose the correct orientation for loading letterhead, pre-printed, or pre-punched paper	75
Configure trays	79
Configure a tray when loading paper	79
Configure a tray to match print job settings	79
Automatic media type sensing (auto sense mode)	79
Auto sense settings	80
Select the paper by source, type, or size	80
Source	80
Type and Size	81
Choose an output location	82
Standard output bins	82
Optional output accessories	82
3-bin stapler/stacker features	82
Booklet maker finisher features	83
Accessory workaround	83
Use the booklet-making feature	84
Create a booklet from the print driver	85
Create a booklet from a copy	85
Configure the accessory operation mode	86
Select the operating mode at the control panel	86
Select the operating mode in the printer driver	86
Select the operating mode in the printer driver (Mac OS X)	86

4 Manage and maintain the product

Information pages	90
HP Easy Printer Care	92
Open the HP Easy Printer Care software	92
HP Easy Printer Care software sections	92
Embedded Web server	95
Open the embedded Web server by using a network connection	95
Embedded Web server sections	96
Use HP Web Jetadmin software	99
Security features	100
Secure the embedded Web server	100
Foreign Interface Harness (FIH)	100
Requirements	100
Use the FIH	100
Enable the FIH portal	100
Disable the FIH portal	101
Secure Disk Erase	101
Data affected	101
Gain access to Secure Disk Erase	102
Additional Information	102
DSS authentication	102
Lock the control-panel menus	102
Manage supplies	103
Print-cartridge storage	103
HP policy on non-HP print cartridges	103
HP fraud hotline and Web site	103
Replace supplies	104
Locate supplies	104
Supply replacement guidelines	104
Approximate replacement intervals for supplies	105
Change print cartridges	105
Change image drums	108
Install memory	111
Install DDR memory DIMMs	111
Enable memory	114
Enable memory for Windows 2000 and XP	114
Install an HP Jetdirect or EIO print server card or EIO hard disk	115
Replace the staple cartridge	117
Replace saddle stitch staple cartridges in the booklet maker	119
Clean the product	122
Clean the outside of the product	122
Clean the product interior	122

Clean the 3X500 sheet input tray	124
Clean the IPTU	125
Clean the touchscreen	125
Clean the scanner glass	125
Cleaning the ADF delivery system	126
Clean the ADF delivery system	126
Clean the ADF rollers	127
ADF maintenance kit	129
Calibrate the scanner	130
Upgrade the firmware	131
Determine the current firmware version	131
Download new firmware from the HP Web site	131
Transfer the new firmware to the product	131
Use FTP to upload the firmware through a browser	131
Use FTP to upgrade the firmware on a network connection	132
Use HP Web Jetadmin to upgrade the firmware	133
Use MS-DOS commands to upgrade the firmware	133
Use the HP Jetdirect firmware	133
Set the real-time clock	135
Set the date format	135
Set the date	135
Set the time format	135
Set the time	135

5 Theory of operation

Basic operation	138
Sequence of operation	138
Formatter system	140
Sleep mode	140
Resolution Enhancement technology (REt)	140
Input/output	141
CPU	141
Memory	141
Hard disk	141
Random-access memory	141
DIMM slot	141
Nonvolatile memory	141
PJL overview	141
PML	142
Control panel	142
Engine-control system	143
DC controller	144
Solenoids	144

Switches	145
Sensors	146
Motors and fans	147
Fuser control	149
Fuser temperature-control circuit	151
Fuser over-temperature protection	152
Fuser-failure detection	153
Fuser identification	153
Fuser-life detection	154
Relay-failure detection	154
Low-voltage power supply	154
Overcurrent/overvoltage protection	155
Safety	155
Voltage detection	155
Sleep (powersave) mode	155
High-voltage power supply	155
Laser/scanner system	158
Image-formation system	160
Image-formation process	161
Step 1: Pre-exposure	162
Step 2: Primary charging	162
Step 3: Laser-beam exposure	163
Step 4: Development	163
Step 5: Primary transfer	164
Step 6: Secondary transfer	164
Step 7: Separation	165
Step 8: Fusing	165
Step 9: ITB cleaning	166
Step 10: Drum cleaning	166
Print cartridge	167
Imaging drum	168
Developing roller engagement and disengagement	170
Intermediate transfer belt (ITB) unit	171
Primary-transfer-roller engagement and disengagement	171
ITB unit detection	173
Secondary-transfer-roller unit	175
Calibration	175
Color-misregistration control	176
Image stabilization control	177
Pickup, feed, and delivery system	178
Pickup-and-feed unit	181
Cassette pickup	183
Cassette paper-size and cassette-presence detection	183
Cassette lift operation	185

Cassette paper-level and paper-presence detection	186
Multifeed prevention	187
Multipurpose tray pickup	188
Multipurpose tray last-paper detection	189
Paper feed	190
Skew-feed prevention	191
Paper-type detection	192
Feed-speed control	193
Fusing and delivery unit	195
Loop control	195
Pressure-roller pressurization control	196
Duplexing unit	197
Duplexing reverse and feed control	198
Jam detection	199
Optional input trays	201
Paper-feeder pickup and feed operation	204
Scanner component	206
Product boards	207
Scanner system block diagram	208
Scanner image-data path	209
Scanner power topology	210
Scanner power states	211
Sensor topology	212
Boards I/Os	215
Scanner operation flow	217
ADF	221
Input tray	221
ADF simplex-printing operation sequence	221
ADF duplex-printing operation sequence	222
Multifeed operation	223
End of a scan job operation	224
Paper pick and separation operation	224
Deskew	225

6 Removal and replacement

Removal and replacement strategy	228
Introduction	228
Required tools	229
Types of screws	229
Service approach	230
Before performing service	230
After performing service	230
Parts removal order	231

User-replaceable parts	232
Fuser	233
Transfer roller	236
Intermediate transfer belt (ITB)	238
Tray 1 pickup and separation rollers	241
Tray 2, 3, 4, and 5 pickup rollers	243
Formatter	245
Tray 2	248
Trays 3, 4, and 5	248
Service-replaceable parts	249
Secondary transfer unit	249
Multipurpose drive unit	254
Multipurpose-tray guide (Tray 1) unit	258
Cassette (Tray 2) pickup unit	259
Rear-left cover	260
Rear-right cover	261
Rear cover	262
Low-voltage power-supply unit	263
High-voltage power supply PCA (A)	264
Lifter-drive unit	266
Fuser motor	269
Intermediate-transfer belt (ITB) motor	270
Face-down output bin	271
Left cover	272
Laser/scanner fan duct	273
Print-cartridge driver PCA	275
High-voltage power supply PCA (B)	277
Formatter case	279
DC controller PCA	281
Environmental sensor	283
Image-drum motor	284
Fuser fan	286
Print-cartridge feed motor (black)	287
Print-cartridge feed motor (yellow, magenta, and cyan)	288
Cartridge fan unit	289
Laser/scanner fan unit	290
Fuser power-supply unit	291
Primary transfer-roller disengagement motor	292
Print-cartridge drive unit (yellow and magenta)	293
Print-cartridge drive unit (cyan and black)	298
Print-cartridge interface PCA (cyan and black)	299
Print-cartridge interface PCA (yellow and magenta)	300
Main drive unit	301
Cartridge fan duct	303

Duplex switchback tray	304
Front lower cover	305
Inner cover	306
Rear scanner cover	308
Right upper cover	309
Front door	310
Front door assembly	311
Color-misregistration and image-density sensor unit	312
Pressure-release sensor unit	313
Scanner cover	315
Laser/scanner assembly (yellow and magenta)	316
Laser/scanner assembly (cyan and black)	319
VOC fan	322
Duplexing reverse unit	323
Face-down delivery unit	324
Face-down cover	326
Right-door assembly	327
Duplexing feed unit	329
Multipurpose-tray (Tray 1) pickup unit	331
Thermopile unit	334
Front-lower cover	335
ITB duct	336
Optional input trays	337
1x500-sheet input tray	337
Right door	337
Lower-rear cover	339
Front-right cover	340
Right cover	341
Front-upper cover	342
Lower-left cover	343
Front-lower door	344
Box	345
Pickup unit	346
Input tray is attached	346
Paper feeder is not attached	347
Auto-close unit	349
Pickup motor	350
Paper-feeder driver PCA	351
3x500-sheet input tray	352
Right door	352
Lower-rear cover	352
Front-right cover	352
Right cover	352
Front-upper cover	352

Left cover	352
Pickup unit (middle cassette)	353
Pickup unit (lower cassette)	354
Pickup unit (upper cassette)	354
Paper feeder is attached	354
Paper feeder is not attached	355
Auto-close unit	357
Pickup motor	357
Paper-feeder driver PCA	357
Scanner	358
Optical scanner	358
Upper-left scanner cover	362
Upper-right scanner cover	363
Control panel	364
Front scanner cover	366
Lower-left scanner cover	368
Lower-right scanner cover	370
Top scanner cover	371
Glass assembly	372
Carriage unit	373
Configure the SCB when replacing the carriage unit, inverter, SCB, or optical scanner	378
Pulley assembly and motor unit	380
Rail	383
Inverter	384
Inverter unit	384
Lid sensor	386
SCB, CPB, and SCUID	388
Power-supply unit	391
Scanner fan	393
SCB fan	394
Control panel fan	395
Fan filter	396
ADF	397
ADF assembly	397
ADF input tray sensors	399
Separation floor assembly	401
Diverter	403
Jam cover	404
Hinge assemblies	406
Float assembly	407
White backing	410
Front end cover (cap)	412
Rear end cover (cap)	414

ADF PCA and wire harness	417
Input tray	419

7 Solve problems

Introduction	422
Troubleshooting process	423
Determine the problem source	423
Pre-troubleshooting checklist	423
Troubleshooting checklist	424
Troubleshooting flowchart	426
Power subsystem	427
Power-on checks	427
Power-on troubleshooting overview	427
Tools for troubleshooting	429
Internal print-quality test pages	429
Print-quality-troubleshooting pages	429
Diagnostics page	429
Cleaning page	430
Configuration pages	431
Configuration page	431
HP embedded Jetdirect page	433
Embedded protocol page	434
Finding important information on the configuration pages	435
Solve performance problems	436
Solve connectivity problems	437
Solve direct-connect problems	437
Solve network connectivity problems	437
Solve network printing problems	437
Verify communication over the network	438
Control-panel message types	439
Control-panel messages	440
Event log messages	511
Print an event log	511
Show an event log	511
Clear the event log	511
Event log message	512
Paper-handling problems	519
Jams	519
Common causes of jams	519
Jam locations	520
Clear jams	520
Jam sensors	521
AREA 1: Jams in the output bin	522

AREA 2 and 3: Jams in the fuser and transfer area	524
AREA 4: Jams in the duplex area	531
AREA 5: Jams in Tray 2 and the internal paper path	535
AREA 6: Jams in Tray 1	539
AREA 7: Jams in optional Trays 3, 4, and 5	543
AREA 8: Jams in the optional finishing devices	547
AREA 9: Jams in the ADF	552
Clear staple jams	553
Jam recovery	557
Product feeds multiple sheets	558
Product pulls from incorrect tray	558
Product feeds incorrect page size	558
Paper does not feed automatically	559
Paper does not feed from Tray 2, 3, 4, or 5	559
Transparencies or glossy paper will not feed	560
Envelopes jam or will not feed in the product	561
Output is curled or wrinkled	561
Product will not duplex or duplexes incorrectly	562
Solve image quality problems	563
Example print quality problems	563
Repetitive defects ruler	563
Overhead transparency defects	565
Print quality problems associated with the environment	565
Print quality problems associated with jams	565
Optimize and improve image quality	565
Use supported paper	566
Calibrate the product	566
Specify the correct paper type	566
Clean the fuser	567
Respond to control-panel error messages	568
Clean the registration second transfer assembly	568
Use manual print modes	570
Print-quality-troubleshooting pages	571
Image-quality issues	574
Interface troubleshooting	579
Communication checks	579
EIO troubleshooting	579
Engine diagnostics	580
LED diagnostics	580
Understand lights on the formatter	580
HP Jetdirect LEDs	580
Heartbeat LED	581
Understand lights on the SCB	581
Understand lights on the copy-process board (CPB)	583

Engine-test button	583
Troubleshooting menu	584
Diagnostics mode	585
Diagnostics that put the engine into the special diagnostics mode	585
Diagnostic tests	586
Disable cartridge check	587
Paper-path sensors test	587
Paper-path test	589
Manual sensor test (special-mode test)	590
Component tests	592
Component test (special-mode test)	592
Transfer-motors test	592
Belt-only test	592
Image-drum motors test	592
CMYK-laser test	593
Fuser-motor test	593
Fuser pressure-release motor test	593
Color-alienation motor test	593
ITB-contact/alienation test	593
Paper-transport motor test	594
Tray-1 pickup-solenoid test	594
Tray-2 pickup-motor test	594
Duplexer reverse-motor test	594
Duplexer refeed-motor test	594
Print/stop test	596
Color-band test	597
Scanner tests	597
Service-mode functions	598
Service menu	598
Product resets	600
NVRAM initialization	600
Solve scanner problems	601
Solve fax problems	602
Solve e-mail problems	603
Validate the SMTP gateway address	603
Validate the LDAP gateway address	603
Diagrams	604
Connectors	604
DC controller PCA	604
PCAs	604
Product base	606
1 x 500 input tray	609
3 x 500 input tray	610
IPTU	611

Fans	611
Product base	611
Sensors	612
Product base	612
1 x 500 input tray	614
3 x 500 input tray	615
IPTU	616
Motors	617
Product base	617
1 x 500 input tray	618
3 x 500 input tray	619
IPTU	620
Solenoids	620
Product base	620
1 x 500 input tray	621
3 x 500 input tray	621
Switches	622
Product base	622
1 x 500 input tray	623
3 x 500 input tray	623
Block diagrams	625
Main assemblies	625
Main parts	628
PCAs	629
1 x 500 input tray	630
3 x 500 input tray	631
Intermediate paper-transfer unit (IPTU)	632
Scanner	632
Components (scanner)	632
ADF	633
Sensors (ADF)	633
General timing chart	634
General circuit diagrams	634
Signals	639

8 Output accessories and intermediate paper transfer unit (IPTU)

Theory of operation	668
Intermediate paper transfer unit (IPTU)	668
Basic operation	668
Feed operation	670
Jam detection	670
3-bin stapler/stacker	671
Basic operation	671

Electrical circuitry	672
Feed drive system	672
Construction of the control system	673
Paper delivery path (stapler/stacker and booklet maker)	675
Intermediate-process output-bin assembly (stapler/stacker and booklet maker)	679
Stack job offset	679
Process output bin paper-stacking operation	681
Offset operation	681
Stack trailing-edge assist operation	682
Stack delivery operation	682
Staple operation (stapler/stacker and booklet maker)	683
Staple unit	686
Shift the staple unit	687
Stack operation (stapler/stacker and booklet maker)	689
Output bin operation	689
Shutter operation	691
Jam detection	692
Power supply	693
Power-supply route	693
Protection function	693
HP Booklet Maker/Finisher accessory	694
Basic operation	694
Basic operation of the stacker unit	694
Electrical circuitry of the stacker unit	694
Basic operation of the booklet maker unit	695
Electrical circuitry for the booklet maker unit	696
Feed drive system	696
Paper-delivery path (booklet maker only)	701
Basic operation for the booklet maker	702
Control of the inlet flappers	706
Control of paper movement	709
Alignment of paper	711
Control the phase of the crescent roller	713
Overview of folding	715
Control of stack movement	716
Fold the stack	716
Double folding a stack	719
Intermediate-process-tray assembly	720
Staple operation	721
Stapler unit	721
Stapling operation	722
Stitcher (stapler) unit	722
Stack operation	723

Jam detection	723
Detect jams in the stacker unit	724
Detect jams in the booklet maker unit	724
Power supply	725
Power-supply route for the stacker unit	725
Protective function for the stacker unit	726
Power-supply route for the booklet maker unit	726
Protective function for the booklet maker unit	726
Specifications	727
Accessory specifications	727
Stapler/stacker output-bin capacities	732
Booklet-maker output-bin capacities	733
Removal and replacement	734
Intermediate paper transfer unit (IPTU)	734
IPTU	734
Upper guide assembly	736
Rear cover	738
Fan unit	742
Right belt-drive unit	743
Left belt-drive unit	746
Finisher lock-assembly	748
IPTU paper-feed motor 1	750
IPTU paper-feed motor 2	751
IPTU driver PCA	752
Stapler/stacker and Booklet maker	753
Identify the booklet maker and stapler/stacker	753
Remove the booklet maker and stapler/stacker from the printer	754
External covers	757
Entrance lower-guide assembly	757
Front door	758
Rear cover	759
Front-foot cover	760
Rear-foot cover	760
Front inside-upper cover	761
Front inside-lower cover (booklet maker only)	762
Left-upper cover	763
Top door	765
Grate-shaped upper guide	767
Move output bins 1 and 2	768
Grate-shaped lower guide	770
PCA cover	771
Drive system	772
Stapler	772
Stapler assembly	774

Swing unit	777
Upper crossmember unit	781
Saddle unit (booklet maker only)	784
Saddle-stapler assembly (booklet maker only)	788
Positioning plate unit (inner side-plate assembly) (booklet maker only)	789
Document feed system	792
Operation-tray assembly	792
Output-bin 1	797
Output-bin 2	799
Upper output bin (stapler-stacker only)	801
Buffer rollers	802
Booklet-delivery output bin (booklet maker only)	803
Booklet-delivery output bin unit (booklet maker only)	804
Return roller unit	805
Pressure roller unit	807
Entrance upper guide unit	812
Upper-delivery guide (booklet maker only)	814
Inlet feed unit (stapler-stacker only)	815
Inlet feed unit (booklet maker only)	818
Paper-folding roller (booklet maker only)	821
Electrical system	826
Stacker controller PCA	826
Saddle-stitcher controller PCA (booklet maker only)	827
Solve problems	828
Intermediate paper-transfer unit (IPTU)	828
.....	828
Stapler/stacker and booklet maker	828
Individual component diagnostics	828
Manual sensor test	828
Component test	829
LED diagnostics	830
Diagrams	832
Cross sections	832
Sensors	835
Microswitches	839
Solenoids	841
Motors	843
Clutches	845
PCA	846
Variable resistors, LED, and check pins	849
Circuit diagrams	852
Adjustments	857
Adjust the alignment position	857

Adjust the staple position	857
Adjust the folding position to the stitch position (Booklet maker only)	859
Adjust the stitcher unit	862

9 Parts and diagrams

Order parts, accessories, and supplies	866
Order directly from HP	866
Order directly through the software	866
Orderable and non-orderable parts	866
Replacement kits	868
Printer supplies and accessories	868
Printer	872
Printer parts	872
Input-accessory devices	916
Input trays	916
Output-accessory devices	934
Intermediate paper-transfer unit (IPTU)	934
Stapler/stacker and booklet-maker	945
Automatic document-feeder (ADF)	1016
Automatic document feeder (ADF) assemblies	1016
Scanner	1032
Scanner assemblies	1032
Alphabetical parts list	1066
Numerical parts list	1094

Appendix A Service and support

Hewlett-Packard limited warranty statement	1124
Print cartridge limited warranty statement	1126
Color LaserJet Fuser Kit, Transfer Kit, and Roller Kit Limited Warranty Statement	1127
Customer self repair warranty service	1128
Customer support	1129
Availability of support and service	1130
HP maintenance agreements	1131
On-site service agreements	1131
Priority onsite service	1131
Next-day onsite service	1131
Weekly (volume) on-site service	1131

Appendix B Product specifications

Physical specifications	1134
Electrical specifications	1135
Acoustic specifications	1136

Environmental specifications	1137
------------------------------------	------

Appendix C Regulatory information

Compliance with FCC regulations	1140
Declaration of Conformity	1141
Declaration of Conformity	1142
Environmental product stewardship program	1143
Protecting the environment	1143
Ozone production	1143
Power consumption	1143
Toner consumption	1143
Paper use	1143
Plastics	1143
HP LaserJet print supplies	1143
Return and recycling instructions	1144
United States and Puerto Rico	1144
Multiple returns (more than one cartridge)	1144
Single returns	1144
Shipping	1144
Non-U.S. returns	1144
Paper	1144
Material restrictions	1144
Disposal of waste equipment by users in private households in the European Union	1145
Material Safety Data Sheet (MSDS)	1145
For more information	1146
Certificate of volatility	1147
Types of memory	1147
Volatile memory	1147
Non-volatile memory	1147
Hard-disk-drive memory	1147
Safety statements	1148
Laser safety	1148
Canadian DOC regulations	1148
VCCI statement (Japan)	1148
Power cord statement (Japan)	1148
EMI statement (Korea)	1148
EMI statement (Taiwan)	1149
General telecom statement	1149
Laser statement for Finland	1149
Substances Table (China)	1150

Index	1151
-------------	------

List of tables

Table 1-1	Product models	2
Table 1-2	Features	4
Table 2-1	Information menu	18
Table 2-2	Default Options for Originals menu	20
Table 2-3	Image Adjustment menu	21
Table 2-4	Default Copy Options menu	22
Table 2-5	Fax Send menu	23
Table 2-6	Fax Receive menu	23
Table 2-7	Default Print Options menu	26
Table 2-8	Time/Scheduling menu	27
Table 2-9	Management menu	29
Table 2-10	Networking and I/O	31
Table 2-11	Jetdirect menus	31
Table 2-12	Fax Setup menu	38
Table 2-13	E-mail Setup menu	41
Table 2-14	Send Setup menu	41
Table 2-15	Device Behavior menu	42
Table 2-16	Print Quality menu	49
Table 2-17	Troubleshooting menu	53
Table 2-18	Resets menu	59
Table 3-1	Supported paper and print media sizes	63
Table 3-2	Supported envelopes and postcards	63
Table 3-3	Supported paper and print media sizes for the optional HP 3-bin Stapler/Stacker and HP Booklet Maker/Finisher accessories	64
Table 3-4	Tray 1 paper information	66
Table 3-5	Trays 2, 3, 4, and 5 paper information	66
Table 3-6	Load letterhead, pre-printed, or pre-punched paper — Image Rotation = Left to right	76
Table 3-7	Load letterhead, pre-printed, or pre-punched paper — Image Rotation = Right to left	77
Table 3-8	3-bin stapler/stacker features	82
Table 3-9	Booklet-maker finisher features	83
Table 5-1	Sequence of operation	138
Table 5-2	Solenoids	145
Table 5-3	Switches	145
Table 5-4	Sensors	146

Table 5-5	Motors	147
Table 5-6	Fans	149
Table 5-7	Fuser components	150
Table 5-8	Converted DC voltages	155
Table 5-9	High-voltage power supply circuits	156
Table 5-10	Primary-transfer-roller engagement states	172
Table 5-11	ITB unit detection	173
Table 5-12	Image stabilization controls	177
Table 5-13	Switches and sensors for the pickup, feed, and delivery system	178
Table 5-14	Motors and solenoids for the pickup, feed, and delivery system	180
Table 5-15	Main operations within the pickup-and-feed system	182
Table 5-16	Switch states for paper-size detection	184
Table 5-17	Duplexing-unit components	197
Table 5-18	Jams that the product detects	199
Table 5-19	Electrical components for the optional input trays	202
Table 5-20	Scanner power states	211
Table 5-21	Sensors	213
Table 5-22	SCB connectors	216
Table 5-23	CCD map	216
Table 7-1	Pre-troubleshooting checklist	423
Table 7-2	Troubleshooting flowchart	426
Table 7-3	Important information on the configuration pages	435
Table 7-4	Control-panel messages	440
Table 7-5	Causes and solutions for delivery-delay jam	522
Table 7-6	Causes and solutions for fuser delivery-delay jams	524
Table 7-7	Causes and solutions for wrapping jams	524
Table 7-8	Causes and solutions for fuser delivery stationary jams	525
Table 7-9	Causes and solutions for residual media jams	525
Table 7-10	Causes and solutions for pickup delay jams 2	525
Table 7-11	Causes and solutions for pickup-stationary jam	526
Table 7-12	Causes and solutions for fuser delivery-stationary jam	526
Table 7-13	Causes and solutions for duplexing reverse jams 1	531
Table 7-14	Causes and solutions for duplexing reverse jams 2	531
Table 7-15	Causes and solutions for duplexing-repickup jams 1	532
Table 7-16	Causes and solutions for duplexing-repickup jams 2	532
Table 7-17	Causes and solutions for pickup-delay jam 1: tray pickup	535
Table 7-18	Causes and solutions for pickup stationary jams	536
Table 7-19	Causes and solutions for pickup-delay jam s1; MP-tray pickup	539
Table 7-20	Causes and solutions for pickup stationary jams	540
Table 7-21	Causes and solutions for pickup-delay jam	543
Table 7-22	Causes and solutions for delivery delay jams 1	547
Table 7-23	Causes and solutions for delivery delay jams 2	548
Table 7-24	Causes and solutions for delivery stationary jams	548
Table 7-25	Communication check	579

Table 7-26	Paper-path sensors diagnostic tests	588
Table 7-27	N-Media sensor test values	588
Table 7-28	Manual sensor diagnostic tests	590
Table 7-29	Component test details	595
Table 7-30	Scanner problems	601
Table 7-31	Components (scanner)	632
Table 7-32	Sensors (ADF)	633
Table 7-33	Input/output signals to and from DC Controller PCA	639
Table 8-1	Components of the IPTU	669
Table 8-2	IPTU components	670
Table 8-3	Motors for the stack job offset	680
Table 8-4	Sensors for the stack job offset	680
Table 8-5	Sensors used in stapling	684
Table 8-6	Motors used in stapling	684
Table 8-7	Output-bin-1-shift area sensor PCA	691
Table 8-8	Output-bin-2-shift area sensor PCA	691
Table 8-9	Sensors and paper sizes	706
Table 8-10	Solenoids and paper sizes	707
Table 8-11	Stapling and stacking specifications (stapler/stacker and booklet maker)	727
Table 8-12	Specifications for booklet making (Booklet maker only)	730
Table 8-13	Stapler/stacker output-bin capacities	732
Table 8-14	Booklet-maker output-bin capacities	733
Table 8-15	Manual sensor test letter designations	828
Table 8-16	Component test motors and solenoids	829
Table 8-17	LED	830
Table 8-18	Stapler/stacker cross-sectional view	832
Table 8-19	Booklet maker cross-sectional view highlighting the stapling/stacking paper path	833
Table 8-20	Booklet maker cross-sectional view highlighting the booklet-making paper path	834
Table 8-21	Sensors (booklet maker)	837
Table 8-22	Microswitches (stapler/stacker)	839
Table 8-23	Microswitches (booklet maker)	840
Table 8-24	Solenoids (stapler/stacker)	841
Table 8-25	Solenoids (booklet maker)	842
Table 8-26	Motors (stapler/stacker)	843
Table 8-27	Motors (booklet maker)	844
Table 8-28	Clutches (stapler/stacker)	845
Table 8-29	PCA (stapler/stacker)	846
Table 8-30	PCA (booklet maker)	848
Table 8-31	SW504 settings	861
Table 8-32	Do not use the following setting.	861
Table 9-1	Printer external covers and panels	873
Table 9-2	Printer front-door assembly	875
Table 9-3	Printer right-door assembly	877
Table 9-4	Printer internal components (1 of 7)	879

Table 9-5	Printer internal components (2 of 7)	881
Table 9-6	Printer internal components (3 of 7)	883
Table 9-7	Printer internal components (4 of 7)	885
Table 9-8	Printer internal components (5 of 7)	889
Table 9-9	Printer internal components (6 of 7)	891
Table 9-10	Printer internal components (7 of 7)	893
Table 9-11	Printer multi-purpose-drive assembly	895
Table 9-12	Printer lifter-drive assembly	897
Table 9-13	Printer cassette	899
Table 9-14	Printer cassette paper-pickup assembly	901
Table 9-15	Printer multi-purpose paper-pickup assembly	903
Table 9-16	Printer multi-purpose-tray assembly	905
Table 9-17	Printer multi-purpose-guide assembly	907
Table 9-18	Printer face-down paper-delivery assembly	909
Table 9-19	Printer duplexing-reverse assembly	911
Table 9-20	Printer duplexing-feed assembly	913
Table 9-21	Printer PCA assembly location	915
Table 9-22	Input-tray main body (1x500-sheet)	919
Table 9-23	Input-tray main body (3x500-sheet)	923
Table 9-24	Input-tray auto-close assembly	927
Table 9-25	Input-tray cassette	929
Table 9-26	Input-tray paper-pickup assembly	931
Table 9-27	Input-tray PCA assembly	933
Table 9-28	Intermediate-feed main body	935
Table 9-29	Intermediate-feed lower-guide assembly	937
Table 9-30	Intermediate-feed upper-guide assembly	939
Table 9-31	Left-assist assembly	941
Table 9-32	Right-assist assembly	943
Table 9-33	PCA assembly	945
Table 9-34	Stapler/stacker unit	946
Table 9-35	Booklet-maker unit	949
Table 9-36	External panels and covers (stapler/stacker)	951
Table 9-37	External panels and covers (booklet-maker)	953
Table 9-38	Finisher (stapler/stacker and booklet-maker)	959
Table 9-39	Output bin 1 (stack upper-tray assembly) (stapler/stacker)	963
Table 9-40	Output bin 1 (stack upper-tray assembly) (booklet-maker)	967
Table 9-41	Output bin 2 (stack lower-tray assembly) (stapler/stacker and booklet-maker)	971
Table 9-42	Top output bin (stack sub-tray assembly) (stapler/stacker)	973
Table 9-43	Operation-tray assembly (stapler/stacker and booklet-maker)	975
Table 9-44	Paper-feeder motor assembly (stapler/stacker and booklet-maker)	977
Table 9-45	Return-roller assembly (stapler/stacker and booklet-maker)	979
Table 9-46	Pressure-roller assembly (stapler/stacker and booklet-maker)	981
Table 9-47	Swing-guide assembly (stapler/stacker and booklet-maker)	983
Table 9-48	Entrance upper-guide assembly (stapler/stacker and booklet-maker)	985

Table 9-49	Staple assembly (stapler/stacker and booklet-maker)	987
Table 9-50	Saddle assembly (booklet-maker)	993
Table 9-51	Saddle-tray assembly (booklet-maker)	997
Table 9-52	Saddle-guide assembly (booklet-maker)	999
Table 9-53	Saddle-stapler assembly (booklet-maker)	1001
Table 9-54	Saddle paper-feeder assembly (stapler/stacker)	1003
Table 9-55	Saddle paper-feeder assembly (booklet-maker)	1005
Table 9-56	Pass lower-guide assembly (booklet-maker)	1007
Table 9-57	Inner side-plate assembly (booklet-maker)	1009
Table 9-58	Saddle paper-delivery assembly (booklet-maker)	1011
Table 9-59	Motor-mount assembly (booklet-maker)	1013
Table 9-60	PCA assembly	1015
Table 9-61	ADF unit	1017
Table 9-62	Front-end cover	1019
Table 9-63	Hinge assembly	1021
Table 9-64	Backbone assembly	1023
Table 9-65	Jam-cover assembly	1025
Table 9-66	Pickup-roller assembly	1027
Table 9-67	Separation-pad assembly	1029
Table 9-68	Separation-floor assembly	1031
Table 9-69	Scanner unit	1033
Table 9-70	Carriage assembly	1035
Table 9-71	Scanner controller-board (SCB) assembly	1037
Table 9-72	Large-pin assembly	1039
Table 9-73	Small-pin assembly	1041
Table 9-74	Inverter assembly	1043
Table 9-75	Glass assembly	1045
Table 9-76	Lid-sensor assembly	1047
Table 9-77	Motor assembly	1049
Table 9-78	Pulley assembly	1051
Table 9-79	Power-supply assembly	1053
Table 9-80	Main-frame assembly	1055
Table 9-81	Plastic-parts assembly	1059
Table 9-82	Transmission assembly	1061
Table 9-83	Fan-system assembly	1063
Table 9-84	Havic assembly	1065
Table 9-85	Alphabetical parts list	1066
Table 9-86	Numerical parts list	1094
Table B-1	Product dimensions	1134
Table B-2	Product dimensions, with all doors and trays fully opened	1134
Table B-3	Power requirements (HP Color LaserJet CM6040 MFP Series)	1135
Table B-4	Power consumption HP Color LaserJet CM6030 and CM6040 MFP Series (average, in watts)	1135
Table B-5	Sound power and pressure level (HP Color LaserJet CM6040 MFP Series)	1136

List of figures

Figure 3-1	3-bin stapler/stacker accessory	83
Figure 3-2	Booklet-maker finisher accessory	84
Figure 4-1	Supply item locations	104
Figure 4-2	Location of product components that require cleaning	123
Figure 4-3	Location of components that require cleaning	124
Figure 4-4	Location of IPTU components that require cleaning	125
Figure 5-1	Relationship between the main product systems	138
Figure 5-2	Engine-control system	143
Figure 5-3	DC controller block diagram	144
Figure 5-4	Fuser components	150
Figure 5-5	Fuser temperature-control circuit	151
Figure 5-6	Low-voltage power-supply circuit	154
Figure 5-7	High-voltage power supply circuits	156
Figure 5-8	Laser/scanner system	158
Figure 5-9	Image-formation system	160
Figure 5-10	Image-formation process	161
Figure 5-11	Pre-exposure	162
Figure 5-12	Primary charging	162
Figure 5-13	Laser-beam exposure	163
Figure 5-14	Development	163
Figure 5-15	Primary transfer	164
Figure 5-16	Secondary transfer	164
Figure 5-17	Separation	165
Figure 5-18	Fusing	165
Figure 5-19	ITB cleaning	166
Figure 5-20	Drum cleaning	166
Figure 5-21	Print-cartridge system	167
Figure 5-22	Imaging-drum system	169
Figure 5-23	Developing roller engagement and disengagement control	170
Figure 5-24	ITB unit	171
Figure 5-25	Three states of primary-transfer-roller engagement and disengagement	173
Figure 5-26	Secondary-transfer-roller unit	175
Figure 5-27	Toner patterns for calibration	176
Figure 5-28	Switches and sensors for the pickup, feed, and delivery system	178

Figure 5-29	Motors and solenoids for the pickup, feed, and delivery system	180
Figure 5-30	Three main units of the pickup, feed, and delivery system	181
Figure 5-31	Cassette-pickup mechanism	183
Figure 5-32	Cassette paper-size detection switches	184
Figure 5-33	Cassette lift mechanism	186
Figure 5-34	Paper-level-detection mechanism	187
Figure 5-35	Multifeed prevention	188
Figure 5-36	Multipurpose tray pickup mechanism	189
Figure 5-37	Multipurpose tray last-paper detection	190
Figure 5-38	Paper-feed mechanism	191
Figure 5-39	Skew-feed prevention	192
Figure 5-40	Media sensor unit	193
Figure 5-41	Loop-control mechanism	195
Figure 5-42	Pressure-roller pressurization control	196
Figure 5-43	Duplexing unit	197
Figure 5-44	Optional input trays	201
Figure 5-45	Signals for the input trays	202
Figure 5-46	Paper-feeder pickup and feed operation	204
Figure 5-47	Scanner components (1 of 2)	206
Figure 5-48	Scanner components (2 of 3)	206
Figure 5-49	Scanner components (3 of 3)	207
Figure 5-50	Scanner	208
Figure 5-51	Scanner system block diagram	209
Figure 5-52	Scanner system image-data path	210
Figure 5-53	Scanner power topology	210
Figure 5-54	Sleep-state power topology	211
Figure 5-55	Deep-sleep-state power topology	212
Figure 5-56	Sensor topology	213
Figure 5-57	SCB map	215
Figure 5-58	CCD map	216
Figure 5-59	Power-on initialization-operation flow (1 of 2)	217
Figure 5-60	Power-on initialization-operation flow (2 of 2)	218
Figure 5-61	FB scan-operation flow	219
Figure 5-62	ADF scan-operation flow	219
Figure 5-63	ADF operation	221
Figure 5-64	Simplex scanning document path	222
Figure 5-65	Duplex scanning document path	223
Figure 5-66	ADF paper pick and separation	225
Figure 6-1	Screwdrivers	229
Figure 6-2	Remove the secondary transfer unit (1 of 9)	249
Figure 6-3	Remove the secondary transfer unit (2 of 9)	250
Figure 6-4	Remove the secondary transfer unit (3 of 9)	250
Figure 6-5	Remove the secondary transfer unit (4 of 9)	251
Figure 6-6	Remove the secondary transfer unit (5 of 9)	251

Figure 6-7	Remove the secondary transfer unit (6 of 9)	252
Figure 6-8	Remove the secondary transfer unit (7 of 9)	252
Figure 6-9	Remove the secondary transfer unit (8 of 9)	253
Figure 6-10	Remove the secondary transfer unit (9 of 9)	253
Figure 6-11	Remove the multipurpose drive unit (1 of 7)	254
Figure 6-12	Remove the multipurpose drive unit (2 of 7)	254
Figure 6-13	Remove the multipurpose drive unit (3 of 7)	255
Figure 6-14	Remove the multipurpose drive unit (4 of 7)	255
Figure 6-15	Remove the multipurpose drive unit (5 of 7)	256
Figure 6-16	Remove the multipurpose drive unit (6 of 7)	256
Figure 6-17	Remove the multipurpose drive unit (7 of 7)	257
Figure 6-18	Remove the multipurpose tray guide unit	258
Figure 6-19	Remove the cassette (Tray 2) pickup unit	259
Figure 6-20	Remove rear left cover	260
Figure 6-21	Remove rear right cover	261
Figure 6-22	Remove rear cover (1 of 2)	262
Figure 6-23	Remove rear cover (2 of 2)	262
Figure 6-24	Remove the low-voltage power-supply unit	263
Figure 6-25	Remove the high-voltage power supply PCA (A) (1 of 3)	264
Figure 6-26	Remove the high-voltage power supply PCA (A) (2 of 3)	265
Figure 6-27	Remove the high-voltage power supply PCA (A) (3 of 3)	265
Figure 6-28	Remove the lifter-drive unit (1 of 2)	266
Figure 6-29	Remove the lifter-drive unit (2 of 2)	267
Figure 6-30	Unlocked position of the lifter-drive unit (correct)	267
Figure 6-31	Locked position of the lifter-drive unit (incorrect)	268
Figure 6-32	Remove the fuser motor	269
Figure 6-33	Remove the intermediate-transfer belt (ITB) motor	270
Figure 6-34	Remove face-down output bin	271
Figure 6-35	Remove left cover (1 of 2)	272
Figure 6-36	Remove left cover (2 of 2)	272
Figure 6-37	Remove the laser/scanner fan duct (1 of 3)	273
Figure 6-38	Remove the laser/scanner fan duct (2 of 3)	273
Figure 6-39	Remove the laser/scanner fan duct (3 of 3)	274
Figure 6-40	Remove the print-cartridge driver PCA (1 of 3)	275
Figure 6-41	Remove the print-cartridge driver PCA (2 of 3)	276
Figure 6-42	Remove the print-cartridge driver PCA (3 of 3)	276
Figure 6-43	Remove the high-voltage power supply PCA (B) (1 of 3)	277
Figure 6-44	Remove the high-voltage power supply PCA (B) (2 of 3)	277
Figure 6-45	Remove the high-voltage power supply PCA (B) (3 of 3)	278
Figure 6-46	Remove the formatter case (1 of 3)	279
Figure 6-47	Remove the formatter case (2 of 3)	279
Figure 6-48	Remove the formatter case (3 of 3)	280
Figure 6-49	Remove the DC controller PCA (1 of 2)	281
Figure 6-50	Remove the DC controller PCA (2 of 2)	282

Figure 6-51	Remove the environmental sensors	283
Figure 6-52	Remove the image-drum motor (1 of 3)	284
Figure 6-53	Remove the image-drum motor (2 of 3)	284
Figure 6-54	Remove the image-drum motor (3 of 3)	285
Figure 6-55	Remove the fuser fan	286
Figure 6-56	Remove the print-cartridge feed motor (black)	287
Figure 6-57	Remove the print-cartridge feed motor (yellow, magenta, and cyan)	288
Figure 6-58	Remove the cartridge fan unit (1 of 2)	289
Figure 6-59	Remove the cartridge fan unit (2 of 2)	289
Figure 6-60	Remove the laser/scanner fan unit (1 of 2)	290
Figure 6-61	Remove the laser/scanner fan unit (2 of 2)	290
Figure 6-62	Remove the fuser power-supply unit (1 of 2)	291
Figure 6-63	Remove the fuser power-supply unit (2 of 2)	291
Figure 6-64	Remove the primary transfer-roller disengagement motor (1 of 2)	292
Figure 6-65	Remove the primary transfer-roller disengagement motor (2 of 2)	292
Figure 6-66	Remove the print-cartridge drive unit (yellow and magenta)	293
Figure 6-67	Gear alignment (1 of 7)	294
Figure 6-68	Gear alignment (2 of 7)	294
Figure 6-69	Gear alignment (3 of 7)	295
Figure 6-70	Gear alignment (4 of 7)	295
Figure 6-71	Correct position of print-cartridge drive unit (5 of 7)	296
Figure 6-72	Incorrect position of print-cartridge drive unit (6 of 7)	296
Figure 6-73	Gear alignment (7 of 7)	297
Figure 6-74	Remove the print-cartridge drive unit (cyan and black)	298
Figure 6-75	Remove the print-cartridge interface PCA (cyan and black)	299
Figure 6-76	Print-cartridge interface PCA (yellow and magenta)	300
Figure 6-77	Remove the main drive unit (1 of 3)	301
Figure 6-78	Remove the main drive unit (2 of 3)	302
Figure 6-79	Remove the cartridge fan duct	303
Figure 6-80	Remove front lower cover (1 of 2)	305
Figure 6-81	Remove front lower cover (2 of 2)	305
Figure 6-82	Remove inner cover (1 of 4)	306
Figure 6-83	Remove inner cover (2 of 4)	306
Figure 6-84	Remove inner cover (3 of 4)	307
Figure 6-85	Remove inner cover (4 of 4)	307
Figure 6-86	Remove rear-scanner cover	308
Figure 6-87	Remove right upper cover	309
Figure 6-88	Remove front door	310
Figure 6-89	Remove front door assembly	311
Figure 6-90	Remove the color-misregistration and image-density sensor unit (1 of 3)	312
Figure 6-91	Remove the color-misregistration and image-density sensor unit (2 of 3)	313
Figure 6-92	Remove the color-misregistration and image-density sensor unit (3 of 3)	313
Figure 6-93	Remove the pressure-release sensor unit (1 of 2)	314
Figure 6-94	Remove the pressure-release sensor unit (2 of 2)	314

Figure 6-95	Remove the laser/scanner assembly (yellow and magenta) (1 of 3)	316
Figure 6-96	Remove the laser/scanner assembly (yellow and magenta) (2 of 3)	317
Figure 6-97	Remove the laser/scanner assembly (yellow and magenta) (3 of 3)	318
Figure 6-98	Replace cables	318
Figure 6-99	Remove the laser/scanner assembly (cyan and black) (1 of 3)	319
Figure 6-100	Remove the laser/scanner assembly (cyan and black) (2 of 3)	320
Figure 6-101	Remove the laser/scanner assembly (cyan and black) (3 of 3)	321
Figure 6-102	Replace cables	321
Figure 6-103	Remove the VOC fan	322
Figure 6-104	Remove the duplexing reverse unit	323
Figure 6-105	Remove the face-down delivery unit (1 of 3)	324
Figure 6-106	Remove the face-down delivery unit (2 of 3)	325
Figure 6-107	Remove the face-down delivery unit (3 of 3)	325
Figure 6-108	Remove face-down cover	326
Figure 6-109	Remove right-door assembly (1 of 4)	327
Figure 6-110	Remove right-door assembly (2 of 4)	327
Figure 6-111	Remove right-door assembly (3 of 4)	328
Figure 6-112	Remove right-door assembly (4 of 4)	328
Figure 6-113	Remove the duplexing feed unit (1 of 3)	329
Figure 6-114	Remove the duplexing feed unit (2 of 3)	329
Figure 6-115	Remove the duplexing feed unit	330
Figure 6-116	Remove the multipurpose tray (1 of 5)	331
Figure 6-117	Remove the multipurpose tray (2 of 5)	332
Figure 6-118	Remove the multipurpose tray (3 of 5)	332
Figure 6-119	Remove the multipurpose tray (4 of 5)	333
Figure 6-120	Remove the multipurpose tray (5 of 5)	333
Figure 6-121	Remove the thermopile unit (1 of 2)	334
Figure 6-122	Remove the thermopile unit (2 of 2)	334
Figure 6-123	Remove front-lower cover	335
Figure 6-124	Remove the ITB duct (1 of 2)	336
Figure 6-125	Remove the ITB duct (2 of 2)	336
Figure 6-126	Remove the right door (1 of 2)	337
Figure 6-127	Remove the right door (2 of 2)	338
Figure 6-128	Remove the lower-rear cover (1 of 2)	339
Figure 6-129	Remove the lower rear cover (2 of 2)	339
Figure 6-130	Remove the front-right cover (1 of 2)	340
Figure 6-131	Remove the front-right cover (2 of 2)	340
Figure 6-132	Remove the right cover	341
Figure 6-133	Remove the front-upper cover	342
Figure 6-134	Remove the lower-left cover	343
Figure 6-135	Remove the front-lower cover (1 of 2)	344
Figure 6-136	Remove the front-lower cover (2 of 2)	344
Figure 6-137	Remove the box (1 of 2)	345
Figure 6-138	Remove the box (2 of 2)	345

Figure 6-139	Remove the pickup unit	346
Figure 6-140	Remove the pickup unit (1 of 3)	347
Figure 6-141	Remove the pickup unit (2 of 3)	347
Figure 6-142	Remove the pickup unit (2 of 3)	348
Figure 6-143	Remove the auto-close unit (1 of 2)	349
Figure 6-144	Remove the auto-close unit (2 of 2)	349
Figure 6-145	Remove the pickup motor	350
Figure 6-146	Remove the paper-feeder driver PCA	351
Figure 6-147	Remove the pickup unit (middle cassette) (1 of 2)	353
Figure 6-148	Remove the pickup unit (middle cassette) (2 of 2)	353
Figure 6-149	Remove the pickup unit (upper cassette)	354
Figure 6-150	Remove the pickup unit (upper cassette) (1 of 3)	355
Figure 6-151	Remove the pickup unit (upper cassette) (2 of 3)	355
Figure 6-152	Remove the pickup unit (upper cassette) (3 of 3)	356
Figure 6-153	Remove optical scanner (1 of 7)	358
Figure 6-154	Remove optical scanner (2 of 7)	359
Figure 6-155	Remove optical scanner (3 of 7)	359
Figure 6-156	Remove optical scanner (4 of 7)	360
Figure 6-157	Remove optical scanner (5 of 7)	360
Figure 6-158	Remove optical scanner (6 of 7)	361
Figure 6-159	Remove optical scanner (7 of 7)	361
Figure 6-160	Upper-left scanner cover	362
Figure 6-161	Remove upper-right scanner cover	363
Figure 6-162	Remove control panel (1 of 3)	364
Figure 6-163	Remove control panel (2 of 3)	364
Figure 6-164	Remove control panel (3 of 3)	365
Figure 6-165	Remove front cover (1 of 2)	366
Figure 6-166	Remove front cover (2 of 2)	367
Figure 6-167	Remove lower left cover (1 of 2)	368
Figure 6-168	Remove lower left cover (2 of 2)	369
Figure 6-169	Remove lower right cover	370
Figure 6-170	Remove top cover (1 of 2)	371
Figure 6-171	Remove top cover (2 of 2)	371
Figure 6-172	Remove glass assembly	372
Figure 6-173	Remove carriage unit (1 of 8)	373
Figure 6-174	Remove carriage unit (2 of 8)	374
Figure 6-175	Remove carriage unit (3 of 8)	374
Figure 6-176	Remove carriage unit (4 of 8)	375
Figure 6-177	Remove carriage unit (5 of 8)	375
Figure 6-178	Remove carriage unit (6 of 8)	376
Figure 6-179	Remove carriage unit (7 of 8)	376
Figure 6-180	Remove carriage unit (8 of 8)	377
Figure 6-181	Lamp cable	378
Figure 6-182	Jumpers on the SCB	378

Figure 6-183	Remove pulley assembly and motor unit (1 of 5)	380
Figure 6-184	Remove pulley assembly and motor unit (2 of 5)	381
Figure 6-185	Remove pulley assembly and motor unit (3 of 5)	381
Figure 6-186	Remove pulley assembly and motor unit (4 of 5)	382
Figure 6-187	Remove pulley assembly and motor unit (5 of 5)	382
Figure 6-188	Remove rail	383
Figure 6-189	Remove inverter (1 of 3)	384
Figure 6-190	Remove inverter (2 of 3)	385
Figure 6-191	Remove inverter (3 of 3)	385
Figure 6-192	Remove lid sensor (1 of 3)	386
Figure 6-193	Remove lid sensor (2 of 3)	387
Figure 6-194	Remove lid sensor (3 of 3)	387
Figure 6-195	Remove SCB and CPB (1 of 5)	388
Figure 6-196	Remove SCB and CPB (2 of 5)	388
Figure 6-197	Remove SCB, CPB, and SCUID (3 of 5)	389
Figure 6-198	Remove SCB, CPB, and SCUID (4 of 5)	389
Figure 6-199	Remove SCB, CPB, and SCUID (5 of 5)	390
Figure 6-200	Remove power supply unit (1 of 3)	391
Figure 6-201	Remove power supply unit (2 of 3)	391
Figure 6-202	Remove power supply unit (3 of 3)	392
Figure 6-203	Remove scanner fan	393
Figure 6-204	Remove the SCB fan	394
Figure 6-205	Remove control panel fan	395
Figure 6-206	Remove fan filter	396
Figure 6-207	Remove the ADF assembly (1 of 4)	397
Figure 6-208	Remove the ADF assembly (2 of 4)	397
Figure 6-209	Remove the ADF assembly (3 of 4)	398
Figure 6-210	Remove the ADF assembly (4 of 4)	398
Figure 6-211	Remove the ADF sensors (1 of 2)	399
Figure 6-212	Remove the ADF sensors (2 of 2)	400
Figure 6-213	Remove the ADF separation floor assembly (1 of 4)	401
Figure 6-214	Remove the ADF separation floor assembly (2 of 4)	401
Figure 6-215	Remove the ADF separation floor assembly (3 of 4)	402
Figure 6-216	Remove the ADF separation floor assembly (4 of 4)	402
Figure 6-217	Remove the ADF diverter (1 of 2)	403
Figure 6-218	Remove the ADF diverter (2 of 2)	403
Figure 6-219	Remove the ADF jam cover (1 of 3)	404
Figure 6-220	Remove the ADF jam cover (2 of 3)	404
Figure 6-221	Remove the ADF jam cover (3 of 3)	405
Figure 6-222	Remove the ADF hinges	406
Figure 6-223	Remove the ADF float assembly (1 of 5)	407
Figure 6-224	Remove the ADF float assembly (2 of 5)	407
Figure 6-225	Remove the ADF float assembly (3 of 5)	408
Figure 6-226	Remove the ADF float assembly (4 of 5)	408

Figure 6-227	Remove the ADF float assembly (5 of 5)	409
Figure 6-228	Remove the ADF white backing (1 of 4)	410
Figure 6-229	Remove the ADF white backing (2 of 4)	410
Figure 6-230	Remove the ADF white backing (3 of 4)	411
Figure 6-231	Remove the ADF white backing (4 of 4)	411
Figure 6-232	Remove the ADF front end cover (1 of 4)	412
Figure 6-233	Remove the ADF front end cover (2 of 4)	412
Figure 6-234	Remove the ADF front end cover (3 of 4)	413
Figure 6-235	Remove the ADF front end cover (4 of 4)	413
Figure 6-236	Remove the ADF rear end cover (1 of 5)	414
Figure 6-237	Remove the ADF rear end cover (2 of 5)	414
Figure 6-238	Remove the ADF rear end cover (3 of 5)	415
Figure 6-239	Remove the ADF rear end cover (4 of 5)	415
Figure 6-240	Remove the ADF rear end cover (5 of 5)	416
Figure 6-241	Reinstall the ADF rear end cover	416
Figure 6-242	Remove the ADF PCA and wire harness (1 of 3)	417
Figure 6-243	Remove the ADF PCA and wire harness (2 of 3)	417
Figure 6-244	Remove the ADF PCA and wire harness (3 of 3)	418
Figure 6-245	Remove the ADF input tray (1 of 2)	419
Figure 6-246	Remove the ADF input tray (2 of 2)	419
Figure 7-1	Configuration page	432
Figure 7-2	HP embedded Jetdirect page	433
Figure 7-3	Embedded protocol page	434
Figure 7-4	Paper-path sensors	512
Figure 7-5	Jam locations	520
Figure 7-6	Locations of jam sensors	522
Figure 7-7	Paper deck sensors	543
Figure 7-8	Print-quality troubleshooting procedure	572
Figure 7-9	Yellow print-quality troubleshooting page	572
Figure 7-10	Yellow comparison page	573
Figure 7-11	Black print-quality troubleshooting page	574
Figure 7-12	SCB LEDs	581
Figure 7-13	CPB LEDs	583
Figure 7-14	Engine-test button	584
Figure 7-15	Front- and right-door switch on the right side	586
Figure 7-16	Front-door switch on the left side	587
Figure 7-17	DC controller PCA	604
Figure 7-18	Cartridge driver PCA	604
Figure 7-19	Fuser control PCA	605
Figure 7-20	Duplexing driver PCA	605
Figure 7-21	Input tray driver PCA	605
Figure 7-22	IPTU driver PCA	606
Figure 7-23	Product connector locations (1 of 6)	606
Figure 7-24	Product connector locations (2 of 6)	607

Figure 7-25	Product connector locations (3 of 6)	607
Figure 7-26	Product connector locations (4 of 6)	608
Figure 7-27	Product connector locations (5 of 6)	608
Figure 7-28	Product connector locations (6 of 6)	609
Figure 7-29	1 x 500 input tray	609
Figure 7-30	3 x 500 input tray (1 of 2)	610
Figure 7-31	3 x 500 input tray (2 of 2)	610
Figure 7-32	IPTU	611
Figure 7-33	Product fan locations	611
Figure 7-34	Product sensor locations (1 of 3)	612
Figure 7-35	Product sensor locations (2 of 3)	613
Figure 7-36	Product sensor locations (3 of 3)	613
Figure 7-37	1 x 500 input tray sensor locations	615
Figure 7-38	3 x 500 input tray sensor locations (1 of 2)	615
Figure 7-39	3 x 500 input tray sensor locations (2 of 2)	616
Figure 7-40	IPTU sensor locations	616
Figure 7-41	Product motor locations (1 of 2)	617
Figure 7-42	Product motor locations (2 of 2)	617
Figure 7-43	1 x 500 input tray motor locations	619
Figure 7-44	3 x 500 input tray motor locations	619
Figure 7-45	IPTU motor locations	620
Figure 7-46	Product solenoid locations	620
Figure 7-47	1 x 500 input-tray solenoid locations	621
Figure 7-48	3 x 500 input-tray solenoid locations	621
Figure 7-49	Product switch locations	622
Figure 7-50	1 x 500 input tray switch locations	623
Figure 7-51	3 x 500 input tray switch locations (1 of 2)	623
Figure 7-52	3 x 500 input tray switch locations (2 of 2)	624
Figure 7-53	Main assemblies (1 of 2)	625
Figure 7-54	Main assemblies (2 of 2)	627
Figure 7-55	Main parts	628
Figure 7-56	PCAs	629
Figure 7-57	1 x 500 input tray	630
Figure 7-58	3 x 500 input tray	631
Figure 7-59	IPTU	632
Figure 7-60	Components (scanner)	632
Figure 7-61	Sensors (ADF)	633
Figure 7-62	General timing chart	634
Figure 7-63	General circuit diagram (1 of 4)	635
Figure 7-64	General circuit diagram (2 of 4)	635
Figure 7-65	General circuit diagram (3 of 4)	636
Figure 7-66	General circuit diagram (4 of 4)	637
Figure 8-1	Paper path of the IPTU	668
Figure 8-2	Signal flow in the IPTU	669

Figure 8-3	Motors and sensors of the IPTU	670
Figure 8-4	Basic operation of the stapler/stacker	671
Figure 8-5	Electrical circuitry of the stapler/stacker	672
Figure 8-6	Electrical circuitry of the stapler/stacker	672
Figure 8-7	Output bins of the stapler/stacker	673
Figure 8-8	Stacker controller PCA (1 of 2)	674
Figure 8-9	Stacker controller PCA (2 of 2)	675
Figure 8-10	Paper path when set to non-sort	676
Figure 8-11	Paper path for sizes other than A4, B5, or LTR	677
Figure 8-12	Paper path (1 of 5)	678
Figure 8-13	Paper path (2 of 5)	678
Figure 8-14	Paper path (3 of 5)	678
Figure 8-15	Paper path (4 of 5)	679
Figure 8-16	Paper path (5 of 5)	679
Figure 8-17	Motors and sensors for stack job offset	680
Figure 8-18	Stack job offset example	680
Figure 8-19	Process output bin	681
Figure 8-20	Job offset operation (1 of 2)	681
Figure 8-21	Job offset operation (2 of 2)	682
Figure 8-22	Stack trailing-edge assist operation	682
Figure 8-23	Stack delivery	683
Figure 8-24	Stapler unit	683
Figure 8-25	Staple location	684
Figure 8-26	Paper path for stapling	685
Figure 8-27	Rollers and sensors for stapling	685
Figure 8-28	Paper path	686
Figure 8-29	Shift process for the staple unit	686
Figure 8-30	Stapling operation (1 of 2)	687
Figure 8-31	Stapling operation (2 of 2)	687
Figure 8-32	Front 1-point stapling	688
Figure 8-33	Rear 1-point stapling	688
Figure 8-34	2-point stapling	689
Figure 8-35	Items detected by the area sensors (PS981, PS982, PS983)	690
Figure 8-36	Output-bin components	691
Figure 8-37	Shutter location	692
Figure 8-38	Jam detection sensors	693
Figure 8-39	Power-supply route	693
Figure 8-40	Stacker unit basics	694
Figure 8-41	Electrical circuitry of the stacker unit	695
Figure 8-42	Booklet maker unit basics	695
Figure 8-43	Electrical circuitry for the booklet maker unit	696
Figure 8-44	Feed drive for the stacker unit	696
Figure 8-45	Feed drive for the booklet maker unit	697
Figure 8-46	Components of the stacker unit control system (1 of 2)	698

Figure 8-47	Components of the stacker unit control system (2 of 2)	698
Figure 8-48	Components of the booklet-maker-unit control system	700
Figure 8-49	Components of the booklet-maker control system	701
Figure 8-50	Booklet-maker-unit paper path	702
Figure 8-51	Paper delivery for booklet maker	703
Figure 8-52	Alignment plates	703
Figure 8-53	Stitching the stack	704
Figure 8-54	Position the stack	705
Figure 8-55	Fold and deliver the stack	706
Figure 8-56	A3/279 mm x 432 mm 11 x 17 paper path (3 sheets)	707
Figure 8-57	B4/LGL paper path (3 sheets)	708
Figure 8-58	A4R/LTRR Paper Path (3 sheets)	708
Figure 8-59	Paper movement (1 of 3)	710
Figure 8-60	Paper movement (2 of 3)	710
Figure 8-61	Paper movement (3 of 3)	710
Figure 8-62	Paper alignment (1 of 8)	711
Figure 8-63	Paper alignment (2 of 8)	711
Figure 8-64	Paper alignment (3 of 8)	711
Figure 8-65	Paper alignment (4 of 8)	712
Figure 8-66	Paper alignment (5 of 8)	712
Figure 8-67	Paper alignment (6 of 8)	713
Figure 8-68	Paper alignment (7 of 8)	713
Figure 8-69	Paper alignment (8 of 8)	713
Figure 8-70	Crescent-roller process (1 of 4)	714
Figure 8-71	Crescent-roller process (2 of 4)	714
Figure 8-72	Crescent-roller process (3 of 4)	715
Figure 8-73	Crescent-roller process (4 of 4)	715
Figure 8-74	Movement of the stack	716
Figure 8-75	Stack sequence	716
Figure 8-76	Folding position (1 of 5)	717
Figure 8-77	Folding process (2 of 5)	717
Figure 8-78	Folding start position (3 of 5)	718
Figure 8-79	Folding start position (4 of 5)	718
Figure 8-80	Folding stop position (5 of 5)	718
Figure 8-81	Double-folding process (1 of 5)	719
Figure 8-82	Double-folding process (2 of 5)	719
Figure 8-83	Double-folding process (3 of 5)	719
Figure 8-84	Double-folding process (4 of 5)	720
Figure 8-85	Double-folding process (5 of 5)	720
Figure 8-86	Location of the staplers	721
Figure 8-87	Stapling operation (1 of 2)	721
Figure 8-88	Stapling operation (2 of 2)	722
Figure 8-89	Stitcher unit	723
Figure 8-90	Sequence of stitching	723

Figure 8-91	Rotation of the cam	723
Figure 8-92	Jams in the stacker unit	724
Figure 8-93	Jams in the booklet maker unit	725
Figure 8-94	Power-supply route for the stacker unit	725
Figure 8-95	Power supply route for the booklet maker unit	726
Figure 8-96	Stapling position	730
Figure 8-97	Staple and folding position	732
Figure 8-98	Remove IPTU (1 of 2)	734
Figure 8-99	Remove IPTU (2 of 2)	734
Figure 8-100	Correct placement of the IPTU (1 of 2)	735
Figure 8-101	Incorrect placement of the IPTU (2 of 2)	735
Figure 8-102	Remove upper guide assembly (1 of 5)	736
Figure 8-103	Remove upper guide assembly (2 of 5)	736
Figure 8-104	Remove upper guide assembly (3 of 5)	737
Figure 8-105	Remove upper guide assembly (4 of 5)	737
Figure 8-106	Remove upper guide assembly (5 of 5)	738
Figure 8-107	Remove the rear cover (1 of 4)	738
Figure 8-108	Remove the rear cover (2 of 4)	739
Figure 8-109	Remove the rear cover (3 of 4)	740
Figure 8-110	Remove the rear cover (4 of 4)	740
Figure 8-111	Reassemble the rear cover	741
Figure 8-112	Remove the damper unit	742
Figure 8-113	Remove the right belt-drive unit (1 of 6)	743
Figure 8-114	Remove the right belt-drive unit (2 of 6)	743
Figure 8-115	Remove the right belt-drive unit (3 of 6)	744
Figure 8-116	Remove the right belt-drive unit (4 of 6)	744
Figure 8-117	Remove the right belt-drive unit (5 of 6)	745
Figure 8-118	Remove the right belt-drive unit (6 of 6)	745
Figure 8-119	Remove the left belt-drive unit (1 of 3)	746
Figure 8-120	Remove the left belt-drive unit (2 of 3)	747
Figure 8-121	Remove the left belt-drive unit (3 of 3)	747
Figure 8-122	Remove finisher lock-assembly (1 of 4)	748
Figure 8-123	Remove the finisher lock-assembly (2 of 4)	748
Figure 8-124	Remove the finisher lock-assembly (3 of 4)	749
Figure 8-125	Remove the finisher lock-assembly (4 of 4)	749
Figure 8-126	Remove the IPTU paper-feed motor 1	750
Figure 8-127	Remove the IPTU paper-feed motor 2	751
Figure 8-128	Remove the IPTU driver PCA	752
Figure 8-129	Booklet maker and stapler/stacker (1 of 2)	753
Figure 8-130	Booklet maker and stapler/stacker (2 of 2)	753
Figure 8-131	Remove output accessory (1 of 5)	754
Figure 8-132	Remove output accessory (2 of 5)	754
Figure 8-133	Remove output accessory (3 of 5)	755
Figure 8-134	Remove output accessory (4 of 5)	755

Figure 8-135	Remove output accessory (5 of 5)	756
Figure 8-136	Remove entrance lower-guide assembly (1 of 2)	757
Figure 8-137	Remove entrance lower-guide assembly (2 of 2)	757
Figure 8-138	Remove the front door	758
Figure 8-139	Remove the rear cover (1 of 2)	759
Figure 8-140	Remove the rear cover (2 of 2)	759
Figure 8-141	Remove the front-foot cover	760
Figure 8-142	Remove the rear-foot cover	760
Figure 8-143	Remove the front inside-upper cover	761
Figure 8-144	Remove the front inside-lower cover (1 of 2)	762
Figure 8-145	Remove the front inside-lower cover (2 of 2)	762
Figure 8-146	Remove the left-upper cover (1 of 3)	763
Figure 8-147	Remove the left-upper cover (2 of 3)	764
Figure 8-148	Remove the left-upper cover (3 of 3)	764
Figure 8-149	Remove the top door (1 of 3)	765
Figure 8-150	Remove the top door (2 of 3)	765
Figure 8-151	Remove the top door (3 of 3)	766
Figure 8-152	Remove the grate-shaped upper guide	767
Figure 8-153	Move output bins (1 of 3)	768
Figure 8-154	Move output bins (2 of 3)	768
Figure 8-155	Move output bins (3 of 3)	769
Figure 8-156	Remove grate-shaped lower guide	770
Figure 8-157	Remove the PCA cover	771
Figure 8-158	Remove stapler (1 of 3)	772
Figure 8-159	Remove stapler (2 of 3)	773
Figure 8-160	Remove stapler (3 of 3)	773
Figure 8-161	Remove stapler assembly (1 of 5)	774
Figure 8-162	Remove stapler assembly (2 of 5)	774
Figure 8-163	Remove stapler assembly (3 of 5)	775
Figure 8-164	Remove stapler assembly (4 of 5)	775
Figure 8-165	Remove stapler assembly (5 of 5)	776
Figure 8-166	Remove the swing unit (1 of 6)	777
Figure 8-167	Remove the swing unit (2 of 6)	778
Figure 8-168	Remove the swing unit (3 of 6)	778
Figure 8-169	Remove the swing unit (4 of 6)	779
Figure 8-170	Remove the swing unit (5 of 6)	779
Figure 8-171	Remove the swing unit (6 of 6)	780
Figure 8-172	Remove the upper crossmember unit (1 of 5)	781
Figure 8-173	Remove the upper crossmember unit (2 of 5)	782
Figure 8-174	Remove the upper crossmember unit (3 of 5)	782
Figure 8-175	Remove the upper crossmember unit (4 of 5)	783
Figure 8-176	Remove the upper crossmember unit (5 of 5)	783
Figure 8-177	Remove the saddle unit (1 of 7)	784
Figure 8-178	Remove the saddle unit (2 of 7)	785

Figure 8-179	Remove the saddle unit (3 of 7)	785
Figure 8-180	Remove the saddle unit (4 of 7)	786
Figure 8-181	Remove the saddle unit (5 of 7)	786
Figure 8-182	Remove the saddle unit (6 of 7)	787
Figure 8-183	Remove the saddle unit (7 of 7)	787
Figure 8-184	Remove the saddle-stapler assembly	788
Figure 8-185	Remove the positioning plate unit (1 of 5)	789
Figure 8-186	Remove the positioning plate unit (2 of 5)	790
Figure 8-187	Remove the positioning plate unit (3 of 5)	790
Figure 8-188	Remove the positioning plate unit (4 of 5)	791
Figure 8-189	Remove the positioning plate unit (5 of 5)	791
Figure 8-190	Remove the operation-tray assembly (1 of 6)	793
Figure 8-191	Remove the operation-tray assembly (2 of 6)	793
Figure 8-192	Remove the operation-tray assembly (3 of 6)	794
Figure 8-193	Remove the operation-tray assembly (4 of 6)	794
Figure 8-194	Remove the operation-tray assembly (5 of 6)	795
Figure 8-195	Remove the operation-tray assembly (6 of 6)	796
Figure 8-196	Correct position of sheet	796
Figure 8-197	Remove output-bin 1 (1 of 3)	797
Figure 8-198	Remove output-bin 1 (2 of 3)	798
Figure 8-199	Remove output-bin 1 (3 of 3)	798
Figure 8-200	Remove output-bin 2 (1 of 3)	799
Figure 8-201	Remove output-bin 2 (2 of 3)	800
Figure 8-202	Remove output-bin 2 (3 of 3)	800
Figure 8-203	Remove the upper output bin	801
Figure 8-204	Remove buffer rollers	802
Figure 8-205	Remove booklet-delivery output bin (1 of 2)	803
Figure 8-206	Remove booklet-delivery output bin (2 of 2)	803
Figure 8-207	Remove the saddle-delivery output bin (1 of 3)	804
Figure 8-208	Remove the saddle delivery output bin (2 of 3)	804
Figure 8-209	Remove the saddle delivery output bin (3 of 3)	805
Figure 8-210	Remove the return roller unit (1 of 2)	806
Figure 8-211	Remove the return roller unit (2 of 2)	806
Figure 8-212	Remove the pressure roller unit (1 of 8)	807
Figure 8-213	Remove the pressure roller unit (2 of 8)	808
Figure 8-214	Remove the pressure roller unit (3 of 8)	808
Figure 8-215	Remove the pressure roller unit (4 of 8)	809
Figure 8-216	Remove the pressure roller unit (5 of 8)	809
Figure 8-217	Remove the pressure roller unit (6 of 8)	810
Figure 8-218	Remove the pressure roller unit (7 of 8)	810
Figure 8-219	Remove the pressure roller unit (8 of 8)	811
Figure 8-220	Remove the entrance upper guide unit (1 of 3)	812
Figure 8-221	Remove the entrance upper guide unit (2 of 3)	813
Figure 8-222	Remove the entrance upper guide unit (3 of 3)	813

Figure 8-223	Remove the upper-delivery guide	814
Figure 8-224	Remove the inlet feed unit (1 of 4)	815
Figure 8-225	Remove the inlet feed unit (2 of 4)	816
Figure 8-226	Remove the inlet feed unit (3 of 4)	816
Figure 8-227	Remove the inlet feed unit (4 of 4)	817
Figure 8-228	Remove the inlet feed unit (1 of 4)	818
Figure 8-229	Remove the inlet feed unit (2 of 4)	819
Figure 8-230	Remove the inlet feed unit (3 of 4)	819
Figure 8-231	Remove the inlet feed unit (4 of 4)	820
Figure 8-232	Remove the paper-folding roller (1 of 9)	821
Figure 8-233	Remove the paper-folding roller (2 of 9)	822
Figure 8-234	Remove the paper-folding roller (3 of 9)	822
Figure 8-235	Remove the paper-folding roller (4 of 9)	823
Figure 8-236	Remove the paper-folding roller (5 of 9)	823
Figure 8-237	Remove the paper-folding roller (6 of 9)	824
Figure 8-238	Remove the paper-folding roller (7 of 9)	824
Figure 8-239	Remove the paper-folding roller (8 of 9)	825
Figure 8-240	Remove the paper-folding roller (9 of 9)	825
Figure 8-241	Remove the stacker controller PCA	826
Figure 8-242	Remove the saddle-stitcher controller PCA	827
Figure 8-243	LEDs on the output accessories	830
Figure 8-244	Stapler/stacker cross-sectional view	832
Figure 8-245	Booklet maker cross-sectional view highlighting the stapling/stacking paper path	833
Figure 8-246	Booklet maker cross-sectional view highlighting the booklet-making paper path	834
Figure 8-247	Sensors (stapler/stacker)	835
Figure 8-248	Sensors (booklet maker)	837
Figure 8-249	Microswitches (stapler/stacker)	839
Figure 8-250	Microswitches (booklet maker)	840
Figure 8-251	Solenoids (stapler/stacker)	841
Figure 8-252	Solenoids (booklet maker)	842
Figure 8-253	Motors (stapler/stacker)	843
Figure 8-254	Motors (booklet maker)	844
Figure 8-255	Clutches (stapler/stacker)	845
Figure 8-256	PCA (stapler/stacker)	846
Figure 8-257	Stacker controller PCA	847
Figure 8-258	PCA (booklet maker)	847
Figure 8-259	Saddle-stitcher controller PCA	849
Figure 8-260	Stacker controller PCA switches	850
Figure 8-261	Saddle-stitcher controller PCA switches	850
Figure 8-262	Stapler/stacker stacker controller PCA circuit diagram (1 of 2)	852
Figure 8-263	Stacker controller PCA circuit diagram (2 of 2)	852
Figure 8-264	Saddle-stitcher controller PCA circuit diagram (1 of 2)	854
Figure 8-265	Saddle-stitcher controller PCA circuit diagram (2 of 2)	854
Figure 8-266	Saddle-stitcher controller PCA circuit diagram	855

Figure 8-267	SW4 settings	857
Figure 8-268	SW4 settings	858
Figure 8-269	SW504 settings	859
Figure 8-270	Mark the paper	859
Figure 8-271	Folding position adjustment (1 of 2)	860
Figure 8-272	Folding position adjustment (2 of 2)	860
Figure 8-273	Positive and negative width adjustment	861
Figure 8-274	Adjust the stitcher (1 of 6)	862
Figure 8-275	Adjust the stitcher (1 of 6)	862
Figure 8-276	Adjust the stitcher (2 of 6)	863
Figure 8-277	Adjust the stitcher (3 of 6)	863
Figure 8-278	Adjust the stitcher (5 of 6)	863
Figure 8-279	Adjust the stitcher (6 of 6)	864
Figure 9-1	Printer external covers and panels	872
Figure 9-2	Printer front-door assembly	874
Figure 9-3	Printer right-door assembly	876
Figure 9-4	Printer internal components (1 of 7)	878
Figure 9-5	Printer internal components (2 of 7)	880
Figure 9-6	Printer internal components (3 of 7)	882
Figure 9-7	Printer internal components (4 of 7)	884
Figure 9-8	Printer internal components (5 of 7)	888
Figure 9-9	Printer internal components (6 of 7)	890
Figure 9-10	Printer internal components (7 of 7)	892
Figure 9-11	Printer multi-purpose-drive assembly	894
Figure 9-12	Printer lifter-drive assembly	896
Figure 9-13	Printer cassette	898
Figure 9-14	Printer cassette paper-pickup assembly	900
Figure 9-15	Printer multi-purpose paper-pickup assembly	902
Figure 9-16	Printer multi-purpose-tray assembly	904
Figure 9-17	Printer multi-purpose-guide assembly	906
Figure 9-18	Printer face-down paper-delivery assembly	908
Figure 9-19	Printer duplexing-reverse assembly	910
Figure 9-20	Printer duplexing-feed assembly	912
Figure 9-21	Printer PCA assembly location	914
Figure 9-22	Input-tray units (1x500-sheet and 3x500-sheet)	916
Figure 9-23	Input-tray main body (1x500-sheet)	918
Figure 9-24	Input-tray main body (3x500-sheet)	922
Figure 9-25	Input-tray auto-close assembly	926
Figure 9-26	Input-tray cassette	928
Figure 9-27	Input-tray paper-pickup assembly	930
Figure 9-28	Input-tray PCA assembly	932
Figure 9-29	Intermediate-feed main body	934
Figure 9-30	Intermediate-feed lower-guide assembly	936
Figure 9-31	Intermediate-feed upper-guide assembly	938

Figure 9-32	Left-assist assembly	940
Figure 9-33	Right-assist assembly	942
Figure 9-34	PCA assembly	944
Figure 9-35	Stapler/stacker unit	945
Figure 9-36	Booklet-maker unit	948
Figure 9-37	External panels and covers (stapler/stacker)	950
Figure 9-38	External panels and covers (booklet-maker)	952
Figure 9-39	Finisher (1 of 5) (stapler/stacker and booklet-maker)	954
Figure 9-40	Finisher (2 of 5) (stapler/stacker and booklet-maker)	954
Figure 9-41	Finisher (3 of 5) (stapler/stacker and booklet-maker)	955
Figure 9-42	Finisher (4 of 5) (stapler/stacker and booklet-maker)	957
Figure 9-43	Finisher (5 of 5) (stapler/stacker and booklet-maker)	958
Figure 9-44	Output bin 1 (stack upper-tray assembly) (1 of 2) (stapler/stacker)	961
Figure 9-45	Output bin 1 (stack upper-tray assembly) (2 of 2) (stapler/stacker)	962
Figure 9-46	Output bin 1 (stack upper-tray assembly) (1 of 2) (booklet-maker)	964
Figure 9-47	Output bin 1 (stack upper-tray assembly) (2 of 2) (booklet-maker)	966
Figure 9-48	Output bin 2 (stack lower-tray assembly) (1 of 2) (stapler/stacker and booklet-maker)	968
Figure 9-49	Output bin 2 (stack lower-tray assembly) (2 of 2) (stapler/stacker and booklet-maker)	970
Figure 9-50	Top output bin (stack sub-tray assembly) (stapler/stacker)	972
Figure 9-51	Operation-tray assembly (1 of 2) (stapler/stacker and booklet-maker)	973
Figure 9-52	Operation-tray assembly (2 of 2) (stapler/stacker and booklet-maker)	974
Figure 9-53	Paper-feeder motor assembly (stapler/stacker and booklet-maker)	976
Figure 9-54	Return-roller assembly (stapler/stacker and booklet-maker)	978
Figure 9-55	Pressure-roller assembly (stapler/stacker and booklet-maker)	980
Figure 9-56	Swing-guide assembly (stapler/stacker and booklet-maker)	982
Figure 9-57	Entrance upper-guide assembly (stapler/stacker and booklet-maker)	984
Figure 9-58	Staple assembly (stapler/stacker and booklet-maker)	986
Figure 9-59	Saddle assembly (1 of 4) (booklet-maker)	988
Figure 9-60	Saddle assembly (2 of 4) (booklet-maker)	988
Figure 9-61	Saddle assembly (3 of 4) (booklet-maker)	989
Figure 9-62	Saddle assembly (4 of 4) (booklet-maker)	992
Figure 9-63	Saddle-tray assembly (booklet-maker)	996
Figure 9-64	Saddle-guide assembly (booklet-maker)	998
Figure 9-65	Saddle-stapler assembly (booklet-maker)	1000
Figure 9-66	Saddle paper-feeder assembly (stapler/stacker)	1002
Figure 9-67	Saddle paper-feeder assembly (booklet-maker)	1004
Figure 9-68	Pass lower-guide assembly (booklet-maker)	1006
Figure 9-69	Inner side-plate assembly (booklet-maker)	1008
Figure 9-70	Saddle paper-delivery assembly (booklet-maker)	1010
Figure 9-71	Motor-mount assembly (booklet-maker)	1012
Figure 9-72	PCA assembly	1014
Figure 9-73	ADF unit	1016
Figure 9-74	Front-end cover	1018
Figure 9-75	Hinge assembly	1020

Figure 9-76	Base assembly	1021
Figure 9-77	Backbone assembly	1022
Figure 9-78	Jam-cover assembly	1024
Figure 9-79	Pickup-roller assembly	1026
Figure 9-80	Separation-pad assembly	1028
Figure 9-81	Separation-floor assembly	1030
Figure 9-82	Scanner unit	1032
Figure 9-83	Carriage assembly	1034
Figure 9-84	Scanner controller-board (SCB) assembly	1036
Figure 9-85	Large-pin assembly	1038
Figure 9-86	Small-pin assembly	1040
Figure 9-87	Inverter assembly	1042
Figure 9-88	Glass assembly	1044
Figure 9-89	Lid-sensor assembly	1046
Figure 9-90	Motor assembly	1048
Figure 9-91	Pulley assembly	1050
Figure 9-92	Power-supply assembly	1052
Figure 9-93	Main-frame assembly	1054
Figure 9-94	Support-frame assembly	1055
Figure 9-95	Plastic-parts assembly (1 of 2)	1056
Figure 9-96	Plastic-parts assembly (2 of 2)	1058
Figure 9-97	Scanner controller board (SCB)-cage assembly	1059
Figure 9-98	Transmission assembly	1060
Figure 9-99	Fan-system assembly	1062
Figure 9-100	Havic assembly	1064

For the complete service manual
please visit www.LaserPros.com.

© 2008 Hewlett-Packard Development Company, L.P.

www.hp.com



Q3938-90953