


# HP Color LaserJet CP2020 Series Service Manual



For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).



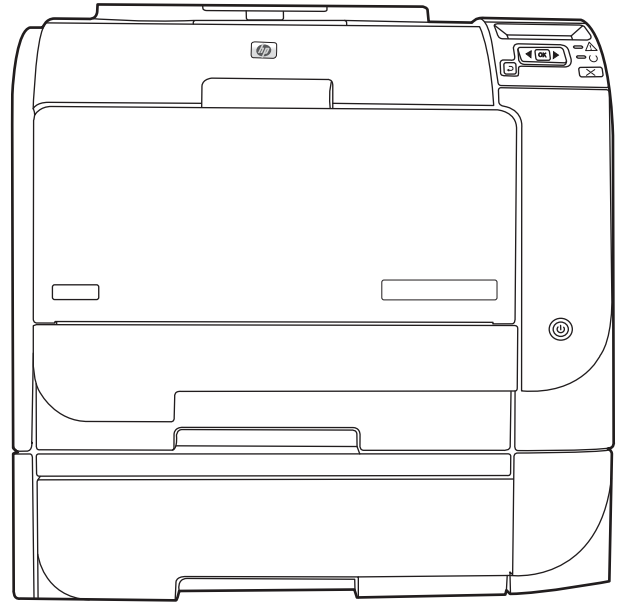

HP Color LaserJet CP2020 Series  
Service Manual



## Copyright information

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number CB493-90948

Edition 1, 09/2008

## Safety information

**WARNING!**

Potential Shock Hazard

Always follow basic safety precautions when using the product to reduce risk of injury from fire or electric shock.

Read and understand all instructions in the user guide.

Observe all warnings and instructions marked on the product.

Use only a grounded electrical outlet when connecting the product to a power source. If you do not know whether the outlet is grounded, check with a qualified electrician.

Do not touch the contacts on the end of any of the sockets on the product. Replace damaged cords immediately.

Unplug the product from wall outlets before cleaning.

Do not install or use the product near water or when you are wet.

Install the product securely on a stable surface.

Install the product in a protected place where no one can step on or trip over the power cord and where the power cord will not be damaged.

If the product does not operate normally, see the online user guide.

Refer all servicing questions to qualified personnel.

Information regarding FCC Class B, Parts 15 and 68 requirements can be found in the user guide.

## Trademark credits

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries or regions.

Linux is a U.S. registered trademark of Linus Torvalds.

UNIX® is a registered trademark of The Open Group.

PostScript® is a trademark of Adobe Systems Incorporated.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

---

# Table of contents

## 1 Product basics

Quick access to product information .....	2
Product comparison .....	3
Product features .....	3
Walkaround .....	4
Front and side view .....	4
Back view .....	5
Model and serial numbers .....	5
Supported operating systems .....	6
Supported product software .....	7
Software included with the product .....	7
Recommended Installation for Windows .....	7
Express Installation .....	7
Macintosh software .....	7
Printer driver .....	7
Other software provided .....	8
Software for Windows .....	8
HP ToolboxFX .....	8
Software for Macintosh .....	8
PostScript Printer Description (PPD) files .....	8
Configure the product using a Macintosh .....	8
Status Alerts software .....	8
Software for networks .....	8
HP Web Jetadmin .....	8
Embedded Web server .....	9
Linux .....	9
System requirements .....	9
Windows requirements .....	9
Macintosh requirements .....	9
Connectivity .....	10
Supported network operating systems .....	10
Printer sharing disclaimer .....	10
Supported network protocols .....	10

## 2 Control panel

Control-panel walkaround .....	14
Control-panel menus .....	15
Use the menus .....	15
Reports menu .....	16
System setup menu .....	17
Service menu .....	19
Network config. menu .....	20

## 3 Paper and print media

Understand paper and print media use .....	22
Supported paper and print media sizes .....	23
Supported paper types and tray capacity .....	25
Special paper or print media guidelines .....	27
Load paper and print media .....	28

## 4 Manage and maintain

Information pages .....	32
HP ToolboxFX .....	33
Open HP ToolboxFX .....	33
Status .....	33
Event log .....	33
Alerts .....	34
Set up Status Alerts .....	34
Set up E-mail Alerts .....	34
Product information .....	34
Set password .....	34
Help .....	35
Device Settings .....	36
Device Information .....	36
Paper Handling .....	37
Printing .....	37
PCL5c .....	37
PostScript .....	37
Print Quality .....	38
Print Density .....	38
Paper Types .....	38
System Setup .....	38
Save/Restore Settings .....	38
Password .....	38
Service .....	39
Network Settings .....	39
Shop for Supplies .....	39

Other Links .....	39
Embedded Web server .....	40
View the HP embedded Web server .....	40
Embedded Web server sections .....	41
HP Web Jetadmin .....	43
Manage supplies .....	44
Supplies life .....	44
Print-cartridge storage .....	44
HP policy on non-HP print cartridges .....	44
HP fraud hotline and Web site .....	44
Print when cartridge is out .....	45
Replace print cartridges .....	46
Memory and font DIMMs .....	50
Product memory .....	50
Install memory and font DIMMs .....	50
Enable memory .....	54
Enable memory for Windows .....	54
Check DIMM installation .....	54
Clean the product .....	54
Firmware updates .....	55

## 5 Theory of operation

Basic operation .....	58
Major product systems .....	58
Product components .....	59
Sequence of operation .....	60
Engine control system .....	61
DC controller .....	62
Low-voltage power supply .....	62
High-voltage power supply .....	63
Laser/scanner system .....	65
Laser failure detection .....	65
Image-formation system .....	66
Image-formation process .....	66
Latent-image formation stage .....	67
Step 1: primary charging .....	67
Step 2: laser-beam exposure .....	68
Developing stage .....	68
Step 3: development .....	68
Transfer stage .....	69
Step 4: primary transfer .....	69
Step 5: secondary transfer .....	69
Step 6: separation from the drum .....	70

Fusing stage .....	70
Step 7: fusing .....	70
ITB cleaning stage .....	71
Step 8: ITB cleaning .....	71
Drum cleaning stage .....	72
Step 9: drum cleaning .....	72
Pickup-and-feed system .....	73
Jam detection .....	75

## 6 Removal and replacement

Removal and replacement strategy .....	78
General cautions during removal and replacement .....	78
Electrostatic discharge .....	78
Required tools .....	79
Types of screws .....	79
Before performing service .....	80
After performing service .....	80
Post-service test .....	81
Print-quality test .....	81
Print cartridges .....	82
Tray 2 cassette .....	83
Rollers and pads .....	84
Transfer roller .....	84
Paper-pickup roller .....	85
Separation roller .....	87
Reinstall the separation roller .....	89
Paper-pickup roller (Tray 1) .....	90
Separation pad (Tray 1) .....	92
Components and major assemblies .....	93
Link guide .....	93
DIMM cover .....	94
Print-cartridge drawer .....	95
Intermediate transfer belt (ITB) .....	97
Reinstall the ITB .....	100
Paper-feed guide assembly .....	101
Rear-door stopper and link caps (simplex product) .....	103
Rear door (simplex product) .....	104
Rear door (duplex product) .....	106
Right cover .....	108
Reinstall the right cover .....	110
Rear-upper cover (duplex product) .....	111
Rear cover and feed guide (simplex product) .....	112
Rear-lower cover and rear-door links (duplex product) .....	116

Rear-door rib assembly (duplex product) .....	119
Upper-cover assembly .....	121
Reinstall the upper cover .....	123
Control-panel assembly .....	124
Left cover .....	126
Reinstall the left cover .....	127
High-voltage power-supply PCA .....	129
Color-misregistration sensor assembly PCA .....	132
Reinstall the color-misregistration sensor assembly .....	135
Right panel .....	136
Motors (M1 and M2) .....	140
DC controller PCA .....	142
Special considerations .....	142
Remove the DC controller PCA .....	142
Formatter PCA .....	144
Special considerations .....	144
Remove the formatter PCA .....	144
Fan .....	146
Intermediate PCA .....	147
Right-front cover and power button .....	148
Power-supply sub PCA .....	150
Fuser motor assembly .....	154
Reinstall the fuser motor assembly .....	158
Duplex reverse-drive assembly .....	159
Fuser .....	162
Reinstall the fuser .....	167
Paper-delivery assembly .....	168
Front-door assembly .....	171
Reinstall the front-door assembly .....	176

## 7 Problem solve

Introduction .....	180
Solve problems checklist .....	181
Menu map .....	181
Troubleshooting process .....	182
Pretroubleshooting checklist .....	182
Power-on checks .....	184
Tools for troubleshooting .....	185
Print-quality troubleshooting tools .....	185
Calibrate the product .....	185
Problem-solve diagrams .....	186
Repetitive image defects .....	186
Interface ports .....	187

DC controller PCA .....	188
Major components .....	190
Solenoids, clutches, and sensors .....	191
Rollers .....	192
Motors and fans .....	193
PCAs .....	194
Timing diagram .....	195
Circuit diagram .....	195
Control-panel messages .....	197
Pages and reports .....	201
Diagnostic page .....	201
Configuration page .....	201
Supplies status page .....	201
Event log .....	202
Paper-handling problems .....	204
Clear jams .....	204
Common causes of jams .....	204
Jam locations .....	205
Change Jam Recovery setting .....	205
Clear jams in Tray 1 .....	206
Clear jams in Tray 2 .....	208
Clear jams in Tray 3 .....	209
Clear jams in fuser area .....	210
Clear jams in output bin .....	211
Clear jams in duplexer (duplexing models only) .....	212
Image defects .....	214
General print quality issues .....	214
Solve issues with color documents .....	218
Solve connectivity problems .....	220
Solve direct-connection problems .....	220
Solve network problems .....	220
Service mode functions .....	222
Service menu .....	222
Service menu settings .....	222
Restore the factory-set defaults .....	222
Secondary service menu .....	222
Open the secondary service menu .....	222
Secondary service menu structure .....	222
Engine resets .....	224
Engine test page .....	224
Cold reset .....	224
NVRAM initialization .....	225
Performance problems .....	226
Print speeds .....	227

## 8 Parts and diagrams

Order parts, accessories, and supplies .....	230
Order directly from HP .....	230
Part numbers .....	230
Supplies .....	230
Memory .....	230
Cable and interface accessories .....	231
Paper-handling accessories .....	231
User-replaceable parts .....	231
Whole unit replacement .....	231
Screws .....	232
How to use the parts lists and diagrams .....	233
External components .....	234
Covers, panels, and doors .....	234
Internal components .....	236
Internal components (1 of 7) .....	236
Internal components (2 of 7) .....	238
Internal components (3 of 7) .....	240
Internal components (4 of 7) .....	242
Internal components (5 of 7) .....	244
Internal components, simplex products (6 of 7) .....	246
Internal components, duplex products (7 of 7) .....	248
Major assemblies .....	250
Cassette (Tray 2) .....	250
Fuser assembly .....	252
PCAs .....	254
Optional 250-sheet paper cassette .....	256
Alphabetical parts list .....	258
Numerical parts list .....	261

## Appendix A Service and support

Hewlett-Packard limited warranty statement .....	266
Customer self repair warranty service .....	267
Print cartridge limited warranty statement .....	268
Customer support .....	269
Repack the product .....	270
Service information form .....	271

## Appendix B Specifications

Physical specifications .....	274
Electrical specifications .....	275
Acoustic emissions .....	276
Environmental specifications .....	276

## Appendix C Regulatory information

FCC regulations .....	278
Declaration of conformity .....	279
Safety statements .....	280
Laser safety .....	280
Canadian DOC regulations .....	280
VCCI statement (Japan) .....	280
Power cord statement (Japan) .....	280
EMI statement (Korea) .....	280
Laser statement for Finland .....	281
Substances Table (China) .....	282
Certificate of Volatility .....	283
Types of memory .....	283
Volatile memory .....	283
Non-volatile memory .....	283
<b>Index .....</b>	<b>285</b>

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).