



LASERJET ENTERPRISE 500 COLOR

For the complete PDF manual
please visit www.LaserPros.com.

Service Manual



M551n



M551dn



M551xh



HP LaserJet Enterprise 500 color M551 Printers

Service Manual

Copyright and License

© 2011 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.


Part number: CF079-90942

Edition 1, 10/2011


Trademark Credits

ENERGY STAR® and the ENERGY STAR® mark are registered U.S. marks.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.


 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Theory of operation	1
Basic operation	2
Sequence of operation	3
Engine control system	4
DC controller	5
Solenoids	6
Clutches	6
Switches	6
Sensors	7
Motors and fans	7
High voltage power supply	10
Low voltage power supply	12
Overcurrent/overvoltage protection	14
Safety	14
Sleep (powersave) mode	14
Power supply voltage detection	14
Low voltage power supply failure	14
Power off condition	15
Fuser control	15
Fuser temperature control circuit	16
Fuser over temperature protection	17
Fuser failure detection	18
Laser/scanner system	19
Image formation system	21
Image formation process	22
Step 1: Pre-exposure	23
Step 2: Primary charging	23
Step 3: Laser-beam exposure	24
Step 4: Development	24
Step 5: Primary transfer	25
Step 6: Secondary transfer	25
Step 7: Separation	26

Step 8: Fusing	26
Step 9: ITB cleaning	27
Step 10: Drum cleaning	27
Print cartridge	27
Developing roller engagement and disengagement	29
Intermediate transfer belt (ITB) unit	31
Primary-transfer-roller engagement and disengagement	32
ITB cleaning	35
Calibration	36
Color misregistration control	36
Image stabilization control	37
Pickup, feed, and delivery system	38
Pickup-and-feed unit	42
Cassette pickup	43
Cassette presence detection	44
Cassette lift operation	45
Cassette paper presence detection	46
Cassette media width detection	47
Multifeed prevention	48
Multipurpose tray pickup	49
Paper feed	50
Skew-feed prevention	51
OHT detection	52
Fusing and delivery unit	52
Loop control	53
Pressure-roller pressurization control	54
Duplexing unit (duplex models)	55
Duplexing reverse and feed control	56
Duplex pickup operation	56
Jam detection	57
Optional paper feeder	59
Paper-feeder pickup and feed operation	61
Paper size detection and cassette presence detection	62
Paper feeder cassette lift operation	64
Paper feeder presence detection	66
Paper-feeder multiple feed prevention	67
Paper feeder jam detection	68

2 Removal and replacement 69

Introduction	70
Removal and replacement strategy	70

Cautions during removal and replacement	70
Electrostatic discharge	71
Required tools	72
Service approach	73
Before performing service	73
After performing service	73
Post service test	73
Print-quality test	73
Parts removal order	74
Customer self repair (CSR) components	76
Print cartridges	76
Duplex reverse guide	78
Toner collection unit	79
Formatter PCA	81
Disk drives	82
Remove the HDD	82
Remove the SSM	84
Install a replacement hard drive	85
Reload the firmware	85
Tray cassette	86
Fuser	87
Pickup roller (Tray 1)	88
Pickup roller (Tray 2)	89
Pickup and feed rollers (Tray 3)	91
Separation roller (Tray 2)	93
Secondary transfer roller	94
Reinstall the transfer roller	95
Secondary transfer assembly	96
Reinstall the secondary transfer assembly	97
Intermediate transfer belt (ITB)	98
Right door (optional paper feeder)	100
Covers	102
Identification and location	102
Front door assembly	103
Right door assembly	105
Right rear cover	109
Left cover	111
Remove the left cover	111
Left bottom cover	113
Remove the left bottom cover	113
Left bottom handle	114

Remove the left bottom handle	114
Hardware integration pocket (HIP) (dn and xh models only)	115
Control panel assembly	116
Right front cover	118
Remove the right front cover	118
Reinstall the power button	121
Front top cover	122
Remove the front top cover	122
Rear cover and upper rear cover	124
Remove the rear cover and upper rear cover	124
Rear top cover	127
Remove the rear top cover	127
Right bottom handle	129
Remove the right bottom handle	129
Rear bottom handle	130
Remove the rear bottom handle	130
Internal assemblies	131
Delivery fan, cartridge fan, and environmental sensor	131
Remove the delivery fan, cartridge fan, and environmental sensor	131
Toner collection sensor	136
Remove the toner collection sensor	136
Residual toner feed motor	138
Remove the residual toner feed motor	138
Reinstall the residual toner collection door	142
Registration density (RD) sensor assembly	143
Remove the RD sensor assembly	143
Power supply fan and fan duct	147
Remove the power supply fan and fan duct	147
Registration assembly	150
Remove the registration assembly	150
Lower pickup guide	155
Remove the lower pickup guide	155
Reinstall the lower pickup guide	157
Interconnect board (ICB)	158
Remove the ICB	158
DC controller PCA and tray	160
Remove the DC controller PCA	160
Low voltage power supply	163
Remove the low voltage power supply	163
High voltage power supply lower (HVPS-D)	167
Remove the high voltage power supply lower	167

Reinstall the high voltage power supply lower	169
Developing disengagement motor	170
Remove the developing disengagement motor	170
Pickup motor	172
Remove the pickup motor	172
Lifter drive assembly	173
Remove the lifter drive assembly	173
Automatic close assembly	175
Remove the automatic close assembly	175
Cassette pickup drive assembly	176
Remove the cassette pickup drive assembly	176
Reinstall the cassette pickup drive assembly	181
Cassette pickup assembly	183
Remove the cassette pickup assembly	184
Laser/scanner assembly (Y/M)	186
Remove the laser/scanner assembly (Y/M)	186
Laser/scanner assembly (C/Bk)	193
Remove the laser/scanner assembly (C/Bk)	194
Reinstall the protective glass cleaner (PGC) actuators	198
High voltage power supply upper (HVPS-T)	201
Remove the high voltage power supply upper	202
Reinstall the high voltage power supply upper	205
Drum motor 1	206
Remove the drum motor 1	207
Drum motor 2 or drum motor 3	208
Remove the drum motor 2 or drum motor 3	209
Fuser motor	210
Remove the fuser motor	211
Main drive assembly	212
Remove the main drive assembly	213
Reinstall the main drive assembly	217
Fuser drive assembly	223
Remove the fuser drive assembly	224
Reinstall the fuser drive assembly	227
Delivery assembly	228
Remove the delivery assembly	229
Reinstall the delivery assembly	232
Duplex drive assembly	233
Remove the duplex drive assembly	234
Optional paper feeder assembly (Tray 3)	235
Drawer connector	235

3 Solve problems	237
Solve problems checklist	238
Menu map	240
Current settings pages	241
Preboot menu options	242
Troubleshooting process	243
Determine the problem source	243
Troubleshooting flowchart	243
Power subsystem	244
Power-on checks	244
Power-on troubleshooting overview	244
Tools for troubleshooting	246
Individual component diagnostics	246
LED diagnostics	246
Understand lights on the formatter	246
Engine diagnostics	254
Defeating interlocks	254
Disable cartridge check	256
Engine test button	257
Paper path test	258
Paper path sensors test	258
Manual sensor test	260
Registration sensor	261
Fuser loop sensors	262
Fuser output sensor	263
Duplexer refeed sensor	264
Output-bin full sensor	265
Fuser pressure-release sensor	266
ITB alienation sensor	267
Right- and front-door interlock switches	269
Tray/bin manual sensor test	271
Print/stop test	279
Component tests	280
Component test (special-mode test)	280
Diagrams	282
Block diagrams	282
Location of connectors	284
DC controller PCA	284
Paper feeder driver PCA	285
Plug/jack locations	286
Locations of major components	286

Base product	286
1 x 500 paper feeder	293
General timing chart	294
Circuit diagrams	295
Internal print-quality test pages	297
Print quality troubleshooting pages	297
Print quality assessment page	300
Cleaning page	302
Set up an auto cleaning page	302
Configuration page	303
Configuration page	303
HP embedded Jetdirect page	305
Finding important information on the configuration pages	306
Color band test	307
Print quality troubleshooting tools	308
Repetitive defects ruler	308
Calibrate the product	309
Control panel menus	310
Sign In menu	310
Retrieve Job From USB menu	311
Retrieve Job From Device Memory menu	312
Supplies menu	316
Trays menu	324
Administration menu	329
Reports menu	329
General Settings menu	331
Retrieve From USB Settings menu	349
General Print Settings menu	349
Default Print Options menu	352
Display Settings menu	355
Manage Supplies menu	356
Manage Trays menu	363
Network Settings menu	365
Troubleshooting menu	382
Device Maintenance menu	388
Backup/Restore menu	388
Calibrate/Cleaning menu	388
USB Firmware Upgrade menu	391
Interpret control panel messages, status-alert messages, and event code errors	392
10.OX.YO Supply memory error	392
10.22.50	393

10.22.51	393
10.22.52	393
10.23.50	393
10.23.51	394
10.23.52	394
10.23.60	394
10.23.70 Printing past very low	394
10.XX.34 Used supply in use	395
10.XX.40 Genuine HP supplies installed	395
10.XX.41 Unsupported supply in use	396
10.XX.70 Printing past very low	396
10.YY.15 Install <supply>	397
10.YY.25 Wrong cartridge in <color> slot	397
10.YY.35 Incompatible <supply>	398
11.00.YY Internal clock error	399
13.00.00	399
13.A3.D3	399
13.A3.FF	399
13.B2.9C	399
13.B2.A1	400
13.B2.A2	400
13.B2.A3	400
13.B2.D1	400
13.B2.D2	400
13.B2.D3	400
13.D3.DZ	401
13.WX.EE	401
13.WX.FF	401
13.WX.YZ Fuser area jam	402
13.WX.YZ Fuser wrap jam	403
13.WX.YZ Jam below control panel	404
13.WX.YZ Jam in middle right door	404
13.WX.YZ Jam in right door	405
13.WX.YZ Jam in Tray 1	405
13.WX.YZ Jam in Tray <X>	406
20.00.00 Insufficient memory To continue, press OK	406
21.00.00 Page too complex	406
32.08.XX	407
32.1C.XX	407
32.21.00	411
33.XX.YY	412

33.XX.YY Used board/disk	412
41.02.00 Error	412
41.03.YZ Unexpected size in tray <X>	413
41.05.YZ Unexpected type in tray <X>	413
41.07.YZ Error To continue, press OK	415
42.XX.YY	417
47.00.XX	417
47.01.XX	417
47.02.XX	417
47.03.XX	418
47.04.XX	418
47.05.00	418
47.06.XX	418
47.WX.YZ Printer calibration error To continue, press OK	418
49.XX.YY To continue, turn off then on	420
50.WX.YZ Fuser error To continue, turn off then on	421
51.00.YY Error	424
52.00.XX To continue, turn off then on	424
54.XX.YY Error	425
55.00.YY DC controller error To continue, turn off then on	427
55.0X.YY DC controller error To continue, turn off then on	427
56.00.YY Error To continue, turn off then on	427
57.00.0Y Error To continue, turn off then on	428
58.00.04	428
59.00.YY Error To continue, turn off then on	429
59.05.XX	429
60.00.0Y Tray <Y> lifting error	430
61.00.01	431
62.00.00 No system To continue, turn off then on	431
70.00.00 Error To continue, turn off then on	431
81.0X.YY Embedded JetDirect error	432
98.00.01 Corrupt data in firmware volume	432
98.00.02 Corrupt data in solutions volume	433
98.00.03 Corrupt data in configuration volume	433
98.00.04 Corrupt data in job data volume	433
99.00.01 Upgrade not performed file is corrupt	433
99.00.02 Upgrade not performed timeout during receive	434
99.00.03 Upgrade not performed error writing to disk	434
99.00.04 Upgrade not performed timeout during receive	434
99.00.05 Upgrade not performed timeout during receive	434
99.00.06 Upgrade not performed error reading upgrade	435

99.00.07 Upgrade not performed error reading upgrade	435
99.00.08 Upgrade not performed error reading upgrade	435
99.00.09 Upgrade canceled by user	435
99.00.10 Upgrade canceled by user	436
99.00.11 Upgrade canceled by user	436
99.00.12 Upgrade not performed the file is invalid	436
99.00.13 Upgrade not performed the file is invalid	436
99.00.14 Upgrade not performed the file is invalid	437
99.00.2X	437
99.09.60 Unsupported disk	438
99.09.61 Unsupported disk	438
99.09.62 Unknown disk	438
99.09.63 Incorrect disk	438
99.09.64 Disk malfunction	438
99.09.65 Disk data error	439
99.09.66 No disk data installed	439
99.09.67 Disk is not bootable please download firmware	439
99.XX.YY	439
99.XX.YY	440
<Binname> Full Remove all paper from bin	440
<Supply> almost full	440
<Supply> low OR Supplies low	440
<Supply> very low OR Supplies very low	441
<Tray X> lifting	442
[File System] device failure To clear, press OK	442
[File System] file operation failed To clear, press OK	442
[File System] file system is full To clear, press OK	442
[File System] is not initialized	443
[File System] is write protected	443
Accept bad signature	443
Bad optional tray connection	443
Calibration reset pending	444
Canceling	444
Canceling... <jobname>	444
Checking engine	444
Checking paper path	444
Chosen personality not available To continue, press OK	445
Cleaning do not grab paper	445
Cleaning... ..	445
Clearing event log	445
Clearing paper path	445

Close front door	446
Close lower right door	446
Close upper right door	446
Creating cleaning page	446
Data received To print last page, press OK	447
EIO <X> disk initializing	447
Event log is empty	447
Expected drive missing	447
HP Secure Hard Drive disabled	447
Incompatible <supply>	448
Incompatible supplies	448
Install <supply>	449
Install <supply> Close rear door	449
Install Fuser Unit	449
Install supplies	450
Install Transfer Unit	450
Internal disk not functional	450
Internal disk spinning up	451
Load Tray <X>: [Type], [Size]	451
Load Tray <X>: [Type], [Size] To use another tray, press OK	451
Manually feed output stack Then press OK to print second sides	452
Manually feed: [Type], [Size]	452
Manually feed: [Type], [Size] To use another tray, press OK	452
Moving solenoid	452
Moving solenoid and motor	453
No job to cancel	453
Paused	453
Performing Color Band Test...	453
Performing Paper Path Test...	453
Please wait...	454
Printing CMYK samples...	454
Printing Color Usage Log...	454
Printing Configuration...	454
Printing Demo Page...	454
Printing Diagnostics Page...	454
Printing Engine Test...	455
Printing Event Log...	455
Printing File Directory...	455
Printing Font List...	455
Printing Fuser Test Page...	455
Printing Help Page...	456

Printing Menu Map...	456
Printing PQ Troubleshooting...	456
Printing Registration Page...	456
Printing RGB Samples...	456
Printing stopped	456
Printing Supplies Status Page...	457
Printing Usage Page...	457
Processing duplex job Do not grab paper until job completes	457
Processing job from tray <X>... Do not grab paper until job completes	457
Processing...	457
Processing... copy <X> of <Y>	458
Ready	458
Ready <IP Address>	458
Remove all print cartridges	458
Remove at least one print cartridge	458
Remove shipping lock from Tray 2	459
Replace <supply>	459
Replace Supplies	460
Restore Factory Settings	461
Restricted from printing in color	461
Rotating <color> motor	461
Rotating motor	461
Size mismatch in Tray <X>	462
Sleep mode on	462
Supplies in wrong positions	462
Tray <X> empty: [Type], [Size]	463
Tray <X> open	463
Tray <X> overfilled	464
Troubleshooting	464
Type mismatch Tray <X>	464
Unsupported drive installed To continue, press OK	464
Unsupported supply in use OR Unsupported supply installed To continue, press OK	465
Unsupported tray configuration	465
Unsupported USB accessory detected Remove USB accessory	465
USB accessory needs too much power Remove USB and turn off then on	466
USB accessory not functional	466
Used supply installed To continue, press OK OR Used supply in use	466
Wrong cartridge in <color> slot	467
Event log messages	468
Print an event log	469

View an event log	470
Clear an event log	470
Clear jams	471
Common causes of jams	471
Jam locations	472
Clear jams in Tray 1	473
Clear jams in the output bin area	475
Clear jams in Tray 2	476
Clear jams in the right door	477
Clear jams in the optional 500-sheet paper and heavy media tray (Tray 3)	481
Clear jams in the lower right door (Tray 3)	482
Jam causes and solutions	483
Jams in the output bin	483
Jams in the fuser and transfer area	483
Jams in the duplex area (duplex models)	487
Jams in Tray 1, Tray 2 and internal paper path	488
Jams in Tray 3	490
Change jam recovery	491
Solve paper handling problems	492
Product feeds multiple sheets	492
Paper does not feed automatically	492
Use manual print modes	494
Solve image quality problems	497
Image defects table	497
Clean the product	503
Clean the paper path	503
Set up an auto cleaning page	503
Solve performance problems	504
Solve connectivity problems	505
Solve direct connect problems	505
Solve network problems	505
Service mode functions	507
Service menu	507
Product resets	509
Restore factory-set defaults	509
Product cold reset	510
Clean Disk and Partial Clean functions	510
Active and repository firmware locations	510
Partial Clean	511
Execute a Partial Clean	511
Clean Disk	512

Execute a Clean Disk	512
Preboot menu options	514
Product updates	521
Determine the installed revision of firmware	521
Perform a firmware upgrade	521
Embedded Web Server	521
USB storage device (Preboot menu)	522
USB storage device (control-panel menu)	523
4 Parts and diagrams	525
Order parts, accessories, and supplies	526
Part numbers	527
Accessories	527
Print cartridges and toner collection unit	527
Memory	527
Customer self repair (CSR) and service kits	528
Screws	530
How to use the parts lists and diagrams	530
Covers	532
.....	532
Right-door assembly	534
Internal assemblies	536
Internal assemblies (1 of 5)	536
Internal assemblies (2 of 5)	538
Internal assemblies (3 of 5)	540
Internal assemblies (4 of 5)	542
Internal assemblies (5 of 5)	544
Cassette	546
Paper pickup assembly	548
PCAs	550
Assessories	552
1 x 500-sheet paper feeder	552
Paper feeder covers	554
Paper feeder main body	556
Paper feeder cassette	558
Paper feeder PCA	560
Alphabetical parts list	562
Numerical parts list	568
Appendix A Service and support	575
Hewlett-Packard limited warranty statement	576

HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	578
Color LaserJet Fuser Kit, Toner Collection Unit, and Transfer Kit Limited Warranty Statement	579
Data stored on the print cartridge	580
End User License Agreement	581
OpenSSL	584
Customer self-repair warranty service	585
Customer support	586

Appendix B Product specifications 587

Physical specifications	588
Power consumption, electrical specifications, and acoustic emissions	588
Environmental specifications	588

Appendix C Regulatory information 589

FCC regulations	590
Environmental product stewardship program	591
Protecting the environment	591
Ozone production	591
Power consumption	591
Paper use	591
Plastics	591
HP LaserJet print supplies	591
Return and recycling instructions	592
United States and Puerto Rico	592
Multiple returns (more than one cartridge)	592
Single returns	592
Shipping	592
Non-U.S. returns	593
Paper	593
Material restrictions	593
Disposal of waste equipment by users in private households in the European Union	594
Chemical substances	594
Material Safety Data Sheet (MSDS)	594
For more information	594
Declaration of conformity	595
Certificate of volatility	597
Types of memory	597
Volatile memory	597
Non-volatile memory	597
Mass Storage memory	597
Safety statements	598

Laser safety	598
Canadian DOC regulations	598
VCCI statement (Japan)	598
Power cord instructions	598
Power cord statement (Japan)	598
EMC statement (Korea)	599
Laser statement for Finland	599
GS statement (Germany)	600
Substances Table (China)	600
Restriction on Hazardous Substances statement (Turkey)	600
Restriction on Hazardous Substances statement (Ukraine)	600

Index	601
--------------------	------------

For the complete PDF manual
please visit www.LaserPros.com.