


HP CM8060/CM8050 Color MFP with Edgeline Technology

Parts Manual

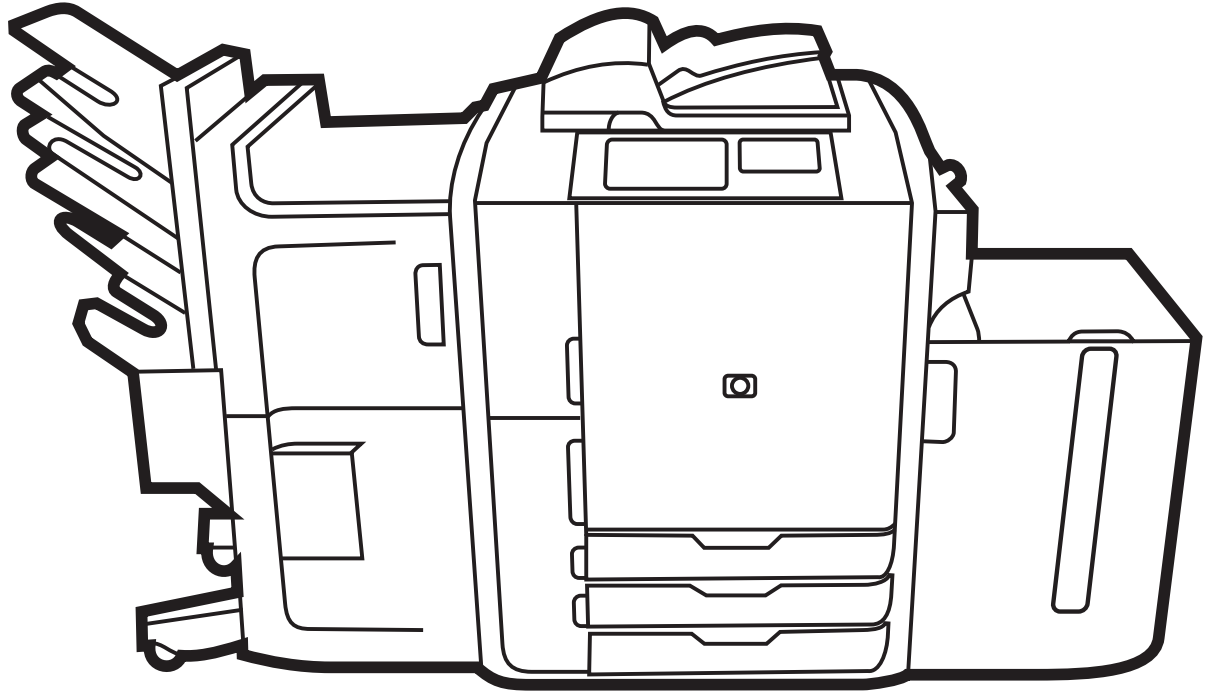

For the complete PDF manual
please visit www.LaserPros.com.



HP CM8060/CM8050 Color MFP with Edgeline
Technology
Parts manual



Copyright and License

© 2009 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 5.0, 2/2009

Trademark Credits

Adobe Photoshop® and PostScript® are trademarks of Adobe Systems Incorporated.

Microsoft®, Windows®, and Windows® XP are U.S. registered trademarks of Microsoft Corporation.

Windows Vista™ is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Safety information

Install the device in a protected location where no one can step on or trip over the power cord, and where the power cord will not be damaged.

Use only a grounded electrical outlet when connecting the device to a power source. If you do not know whether the outlet is grounded, check with a qualified electrician.

When the device is installed in the U.S.A. or Canada, it must be connected to a dedicated 20 Amp circuit.

AC Delta and AC Wye power system statement: The device is designed to use an IT power system.

There is a risk of explosion if the battery is replaced with an incorrect type. Dispose of used batteries according to the instructions.



Warning! Risk of injury from

moving parts. Do not reach into the stapler. Do not reach below moving trays.

Document history

Version	Date	Content changes
1.1	03/16/2007	N/A
1.2	03/23/2007	<ul style="list-style-type: none">• Updated IDO section
1.3	03/30/2007	Completed updates to IDO section Updated the following sections <ul style="list-style-type: none">• Vacuum• Scanner• Covers• Electronics
1.4	04/06/2007	Updated following images: <ul style="list-style-type: none">• Front door lock• Front door switch• IDO door switch• Image Processing PCA• Vacuum assembly• Scanner lock cover• Scanner chamber filter• Scanner service cover
1.5	04/13/2007	Updates to the following sections <ul style="list-style-type: none">• Service kits• Tray 5 part numbers• Accumulator part numbers
1.6	04/20/2007	<ul style="list-style-type: none">• Drum diagrams completed• Dryer heater and fan are no longer FRUs• Update to finisher separator rails FRU
1.7	04/27/2007	Updated the following subsystems: <ul style="list-style-type: none">• Drum• Carriage• Trays 2, 3, and 4

Version	Date	Content changes
1.8	05/04/2007	<p>Updated the following subsystems:</p> <ul style="list-style-type: none"> • Trays 2, 3, and 4 • Tray 1 • Dryer • Horizontal • Covers • HP Multifunction Finisher: input paper path, handle 1, handle 2, handle 3, job separator, front covers, casters, and right side panel assembly
1.9	05/11/2007	<p>Updated the following subsystems:</p> <ul style="list-style-type: none"> • HP Multifunction Finisher • Trays 2, 3, and 4 • IDS • ADF • Horizontal • Covers
1.10	05/18/2007	<p>Updated the following subsystems:</p> <ul style="list-style-type: none"> • HP Multifunction Finisher • Trays 2, 3, and 4 • HP 4-bin Job Separator • Scanner • Vertical • Tray 1 • IDO
2.0	05/25/2007	<p>Updated the following subsystems:</p> <ul style="list-style-type: none"> • HP Multifunction Finisher • HP 4-bin Job Separator • Tray 5 • IDO
3.0	11/2007	<ul style="list-style-type: none"> • Updated all diagrams and parts lists with hardware fasteners (screws, clips, retainers) • Added manufacturing numbers to all cable tables • Updated power cord section

Version	Date	Content changes
4.0	03/2008	<p>Updated diagrams and parts lists for the following items:</p> <ul style="list-style-type: none"> ● IDO media eject assembly ● IDO media eject assembly ● Stapler 1 and Stapler 2 ● Finisher latch assemblies ● Accumulator paper guide and sensor holder assembly ● Accumulator shafts ● Finisher lower-middle cover assembly ● Single output bin ● Finisher front covers ● Single output bin ● Power cords 929 and 930 ● Drop detect assembly ● Drum tube fitting ● Tray 5 front and left covers ● Carriage structure
4.1	06/2008	Updated part numbers
5.0	02/2009	<p>New/updated part numbers:</p> <ul style="list-style-type: none"> ● Updated preventive maintenance kit C5956-67819 ● Tray 5 Elevator motor (M102) - C5956-67299 ● Finisher sheet metal edge protectors - C5959-67397 (Multifunction), C5964-67048 (4-bin separator) ● Finisher Accumulator Alignment Tool - C5959-67314 ● Finisher separator slide - C5959-67300 (SVC Slide-Linear) <p>Replaced existing trunk stock kit (C5957-67068) with HP Direct trunk stock kit (C5957-67187) and Channel Partner trunk stock kit (C5957-67190).</p>

Table of contents

1 How to use the parts manual

How to use the parts diagrams and lists	2
Service part names	3

2 Service kits and tools

Service kits	6
Trunk stock recommendation	12
Edgeline tools	16

3 Hardware

Screws	20
Retainers	23
Wire management	24
ADF and scanner bushings and bearings	26
Tray 5 bearings	27
Multifunction finisher staples	28

4 HP CM8060/CM8050 Color MFP

Accessories	31
Supplies	32
Power cords	33
ADF parts diagrams	40
ADF input tray parts diagram	41
ADF main assembly parts diagram	43
ADF drive system parts diagram	45
ADF front side parts diagram	47
ADF conveying section parts diagram	49
Scanner parts diagrams	52
Scanner top parts diagram	53
Scanner front and rear wires parts diagram	55
Scanner drive and electronics parts diagram	57
Scanner chamber filter parts diagram	59
Cables	61

Aerosol parts diagrams	62
Tray 1 parts diagrams	64
Tray 1 parts diagram	65
Cables	67
Carriage parts diagrams	68
Carriage structure parts diagram	69
Carriage extraction mechanism parts diagram	71
Carriage TOF sensor assembly parts diagram	73
Carriage pen-out-of-cap sensor parts diagram	75
Printheads parts diagram	77
Carriage drive assembly parts diagram	79
Carriage 1 assembly parts diagram	81
Carriage 2 assembly parts diagram	83
Carriage 1 e-chain parts diagram	85
Carriage 2 e-chain parts diagram	87
Carriage PPS assembly parts diagram	89
Carriage Open sensor (SN19) and base parts diagram	91
Cables	93
Control panel parts diagrams	94
Control panel parts diagram	95
Control panel overlays	97
Cables	98
Covers parts diagrams	100
Front door parts diagram	102
Front door lock parts diagram	104
Front Door Open switch (SW3) parts diagram	106
Left-side Upper Panel switch (SW8) parts diagram	108
Left front door parts diagrams	110
IDS door cover parts diagrams	112
Tray 2, 3, and 4 covers parts diagrams	114
Upper inner cover parts diagrams	116
Lower inner cover parts diagrams	118
Scanner left trim parts diagrams	120
Scanner right trim parts diagram	122
Scanner rear trim parts diagram	124
Scanner service cover parts diagram	126
Scanner lock cover parts diagram	128
IDO cover parts diagrams	130
Left-side middle panel parts diagrams	132
Left-side lower panel parts diagrams	134
Lower left cover parts diagrams	136
Output bin door parts diagram	138
Web wipe access cover parts diagram	140
Lower left trim parts diagrams	142

Right-side middle panel parts diagram	144
Right-side lower panel parts diagrams	146
Upper right cover parts diagram	148
Lower right cover parts diagrams	150
Tray 5 input slot cover parts diagram	152
Lower right trim parts diagram	154
Rear covers parts diagram	156
MFP casters	158
ESD jacks parts diagram	160
Cables	162
Drum parts diagrams	164
Drum spittoon parts diagram	165
Drum screen parts diagram	167
Drum encoder parts diagram	169
Drum drive parts diagram	171
Drum vacuum parts diagram	173
Drum LED parts diagram	175
Drum tube fitting parts diagram	177
Poppet A1 assembly parts diagram	179
Poppet A2 assembly parts diagram	181
Poppet B assembly parts diagram	183
Drum guide assembly parts diagram	185
Drop Detect assembly parts diagram	187
Cables	189
Dryer parts diagrams	190
Dryer assembly parts diagram	191
Dryer left assembly parts diagram	193
Dryer right assembly parts diagram	195
Cables	197
Formatter parts diagrams	198
Formatter Main PCA (A26) parts diagram	199
Formatter fan and hard drive parts diagram	201
Formatter PCAs parts diagram	203
Formatter Coprocessor parts diagram	205
Formatter cables	207
Horizontal transport parts diagrams	208
Horizontal transmission parts diagram	209
Horizontal upper assembly parts diagram	211
Horizontal lower assembly parts diagram	213
Cables	215
IDO parts diagrams	216
IDO RM front parts diagram	217
IDO RM internal motors assembly parts diagram	219
IDO paper path rollers parts diagram	221

IDO drive belts parts diagram	223
IDO diverter parts diagram	225
IDO RM rear parts diagram	227
IDO RM core sensors parts diagram	229
IDO media eject assembly parts diagram	231
IDO curler assembly parts diagram	233
IDO decurler internals assembly parts diagram	236
IDO duplex door assembly parts diagram	238
IDO outer guide pinch assembly parts diagram	240
IDO outer lower guide assembly parts diagram	242
IDO secret door assembly parts diagram	244
IDO PI assembly parts diagram	246
IDO H-bar assembly parts diagram	248
Cables	250
IDS parts diagrams	252
IDS main assembly parts diagram	253
IDS APS assembly parts diagram	255
IDS ISS assembly parts diagram	257
Electronics parts diagrams	260
Ink catch pan parts diagram	261
Electronics Bay Cooling fan (FAN4) assembly parts diagram	263
Carriage PSU PCA (A7) assembly parts diagram	265
Main Engine PCA (A5) assembly parts diagram	267
Motion PCA (A2) assembly parts diagram	269
Power supply parts diagram	271
CPSU Cooling fan (FAN3) parts diagram	273
Power distribution PCA parts diagram	275
Image Processing PCA (A6) parts diagram	277
PSU recirculation duct parts diagram	279
Ink Assist PCA (A3) assembly parts diagram	281
Cables	283
Service Station parts diagrams	286
Service Station parts diagram	287
Service station pen cooling fans assembly parts diagram	289
Cables	291
Trays 2, 3, and 4 parts diagrams	292
Trays 2, 3, and 4 main assembly parts diagram	293
Trays 2, 3, and 4 rear parts diagram	295
Trays 2, 3, and 4 left side parts diagram	297
Trays 2, 3, and 4 drawer parts diagram	299
Trays 2, 3, and 4 paper path parts diagram	301
Trays 2, 3, and 4 drive parts diagram	303
Trays 2, 3, and 4 separation unit parts diagram	305
Cables	307

Single output bin parts diagrams	308
Vacuum parts diagrams	310
Vacuum supply assembly parts diagram	311
Cables	313
Vertical transport parts diagrams	314
Vertical outer guide parts diagram	315
Vertical inner guide parts diagram	317
Vertical transmission parts diagram	319
Cables	321
Web wipe parts diagrams	322
Alphabetical parts list	324
Numerical parts list	374

5 Tray 5 parts diagrams

Tray 5 casters parts diagram	426
Tray 5 front and left covers parts diagram	428
Tray 5 top covers parts diagram	430
Tray 5 rear and right covers parts diagram	432
Tray 5 front and left sensors parts diagram	434
Tray 5 elevator transmission assembly parts diagram	436
Tray 5 elevator cables diagram	438
Tray 5 elevator tray diagram	440
Tray 5 paper path assembly parts diagram	442
Tray 5 lower separator assembly parts diagram	444
Tray 5 pick assembly parts diagram	446
Cables	448
Alphabetical parts list	449
Numerical parts list	458

6 HP Multifunction Finisher parts diagrams

HP Multifunction Finisher service kits	469
Finisher front covers parts diagram	470
Finisher rear covers parts diagram	472
Finisher removal guide parts diagram	474
Finisher top covers parts diagram	476
Finisher inner covers parts diagrams	478
Bias spring and clamp parts diagrams	480
Finisher casters parts diagram	482
Finisher latch assemblies parts diagram	484
Finisher Main PCA (A200) assembly parts diagram	486
Right side panel assembly	488
Handle 1 (upper transport)	490
Handle 1 (upper transport) support parts diagrams	492

Handle 2 (upper transport)	494
Handle 3 (lower transport)	496
Input paper path	500
Accumulator parts diagram	504
Accumulator covers parts diagram	505
Accumulator shafts parts diagram	507
Accumulator front parts diagram	509
Accumulator traverse assembly parts diagram	511
Accumulator guide bar assembly parts diagram	513
Accumulator bearing bracket assembly parts diagram	515
Accumulator paper guide and sensor holder assembly parts diagram	517
Accumulator rear-side assembly parts diagram	519
Accumulator rear inside CPL assembly parts diagram	521
Accumulator support CPL assembly parts diagram	523
Finisher Separator diagrams	526
Finisher Separator main assembly parts diagram	527
Finisher Separator offset assembly parts diagram	529
Finisher Separator media path output parts diagram	531
Finisher Separator elevator transmission parts diagram	533
Finisher Separator paper back weldment parts diagram	535
Finisher Separator safety switches parts diagram	537
Finisher Separator paper gate assembly parts diagram	539
Finisher lower-middle cover assembly parts diagram	542
Bin 5 assembly parts diagram	544
Finisher job support assembly parts diagram	546
Stapler parts diagram	548
Stapler 1 parts diagram	549
Stapler 2 diagram	551
Cables	554
Alphabetical parts list	558
Numerical parts list	586

7 HP 4-Bin Job Separator parts diagrams

HP 4-Bin Job Separator service kits	616
Front covers parts diagram	618
Rear covers parts diagram	620
Input media path assembly	622
Input door assembly	623
Input door support assembly	625
Casters parts diagram	628
Latch assemblies parts diagram	630
Separator diagrams	632
Cables	634

Alphabetical parts list 636
Numerical parts list 640

Index 645

For the complete PDF manual
please visit www.LaserPros.com.

