



DESIGNJET T770 & T1200 printer series

Service manual

© 2010 Hewlett-Packard Development
Company, L.P.

1st edition

Legal notices

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Table of contents

- 1 Troubleshooting 1**
 - Using the Front Panel 2
 - General troubleshooting 3
 - Paper-handling troubleshooting 6
 - Print-quality troubleshooting 6
 - Ink-supplies troubleshooting 32
 - Connectivity troubleshooting 48

- 2 System Error Codes 53**
 - Introduction 54
 - Printer logs 54
 - What to do if the Front Panel is blank 55
 - Continuable and Non-Continuable Error Codes 56
 - System Error Code Brief Descriptions 56
 - System Error Codes—Full Descriptions 58
 - Appendix A: How to troubleshoot SE 79:04 77
 - Appendix B: Updating firmware in diagnostics boot mode 89
 - Appendix C: Obtaining the printer log and the diagnostics package 90
 - Appendix D: How to check the display list memory for an HP-GL/2 job 92

- 3 Diagnostics Menu 94**
 - Introduction 95
 - Diagnostic Tests and Utilities 96

- 4 Service Menu 128**
 - Introduction 129
 - Service Utilities 129
 - Service Calibrations 147

- 5 Parts and Diagrams 159**
 - Introduction 160
 - Printer Support 161
 - Center Covers (Front) 162
 - Roll Covers 163
 - Center Covers (Rear) 164
 - Right Cover 165

Left Cover	166
Right Hand Assemblies	167
Left Hand Assemblies	168
Carriage Assembly	169
Scan-Axis Assemblies	170
Paper Path Assemblies (Front)	171
Paper Path Assemblies (Rear)	172
Roll Supports	173
Tools 1	174
Tools 2	175
Miscellaneous Parts	176

6 Removal and Installation 177

Introduction	180
Customer Self Repair parts	182
Service Calibration Guide to Removal and Installation	184
Belt Assembly	187
Bin Assembly	188
Bi-stable Springs (T1200 only)	191
Bumpers, Left and Right	197
Cable Harness	200
Carriage and Cutter Assembly	208
Carriage Bushing, Rear	217
Carriage Cover and Carriage Latch	219
Carriage Rail Oiler	224
Carriage PCA	226
Cleanout	231
Converger	233
Cover, Front	235
Cover, Left	236
Cover, Rear	240
Cover, Right	241
Cover, Top	244
Cutter Assembly	247
Drop Detector	251
EE Box	253
Electronics Module Main PCA and PSU	256
Encoder Disk and Encoder Sensor	260
Encoder Strip	262
Encoder Strip, spring and attachment nut	263
Formatter	266
Freewheel Assembly	267
Front Panel	270
Front Trim, Left	273
Front Trim, Right	275
Full Bleed Foam	277
Hard Disk Drive	278

Ink Cartridge Door, Left	279
Ink Cartridge Door, Right	281
Ink Supply Station, Left	283
Ink Supply Tubes	287
Ink Supply Tubes Support Rail	294
Line Sensor	296
Media Advance Drive	302
Media Lever	309
Media Lever Position Sensor	311
Media Output Assembly	313
Out-of-paper Sensor	315
Panel, Left	318
Pen to Paper Space (PPS) Solenoid	320
Pinch Arm Assembly (T1200 only)	322
Pinchwheel Assembly	325
Print Zone Overdrive	333
PSU	337
Real-time Clock Battery	339
Roll Cover Bumpers, Lower	340
Roll Cover Bumpers, Upper	343
Roll Cover, Lower (T1200 only)	346
Roll Cover, Upper	350
Roll Guide, Left	352
Roll Guide, Right	353
Roll Support, Lower Left (T1200 only)	354
Roll Support, Lower Right (T1200 only)	355
Roll Support Sensor, Lower Left (T1200 only)	357
Roll Support Sensor, Upper Left (T1200 only)	358
Roll Support, Upper Left	359
Roll Support, Upper Right	361
Scan-axis Motor	363
Service Station	367
Single-sheet Sensor	371
Spindle	373
Spittoon, Left	374
Starwheel Assembly	375
Starwheel Lifter, Left	377
Starwheel Lifter, Right	379
Starwheel Motor	382
Trailing Cable	384
Wall Spacers	391
Window	394
Window Position Sensor	398
7 Preventive Maintenance	400
Preventive Maintenance	401
Preventive Maintenance Kits	406

Appendix A Front-panel menu maps 408

HP Designjet T770 409
HP Designjet T770 HD 410
HP Designjet T1200 411

Appendix B CSR installation fliers 412

Cutter assembly 413
Freewheel assembly 415
Freewheel assembly (screwdriver) 417
Left side panel (T1200) 419
Pinch arm assembly 421
Pinch arm assembly (screwdriver) 423
Roll cover upper bumpers 425
Roll cover upper bumpers (screwdriver) 427