


For the complete PDF manual
please visit www.LaserPros.com.

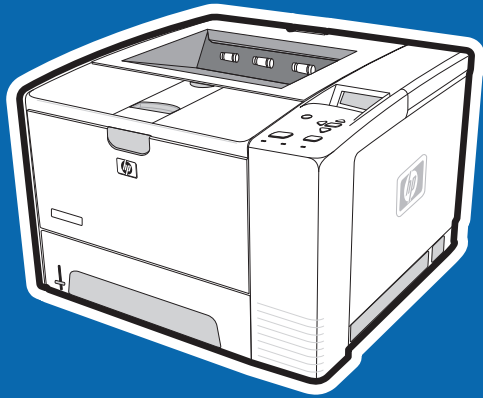

service

hp LaserJet 2400 series

HP LaserJet 2400 Series printer

Service Manual



Copyright information

© 2005 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number Q5956-90940

Edition 2, 8/2005

Safety information

WARNING!

Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

Read and understand all instructions in the user guide.

Observe all warnings and instructions marked on the product.

Use only a grounded electrical outlet when connecting the printer to a power source. If you do not know whether the outlet is grounded, check with a qualified electrician.

Do not touch the contacts on the end of any of the sockets on the printer. Replace damaged cords immediately.

Unplug this product from wall outlets before cleaning.

Do not install or use this product near water or when you are wet.

Install the product securely on a stable surface.

Install the product in a protected location where no one can step on or trip over the power cord and where the power cord will not be damaged.

If the product does not operate normally, see the online user guide.

Refer all servicing questions to qualified personnel.

Information regarding FCC Class B, Parts 15 and 68 requirements can be found in the user guide.

Trademark credits

Adobe®, Acrobat®, PostScript®, and the Acrobat Logo® are trademarks of Adobe Systems Incorporated.

Java™ is a U.S. trademark of Sun Microsystems, Inc.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.



Table of contents

1 Product Information

| | |
|--|----|
| Chapter contents..... | 1 |
| Printer configurations..... | 2 |
| HP LaserJet 2400 Series printer base models..... | 2 |
| Features..... | 4 |
| Specifications..... | 7 |
| Physical specifications..... | 7 |
| Electrical specifications..... | 7 |
| Acoustic emissions..... | 9 |
| Operating environment..... | 9 |
| Media specifications..... | 10 |
| Supported types and sizes of print media | 10 |
| Paper and print media..... | 11 |
| Printing and paper storage environment..... | 12 |
| Envelopes..... | 12 |
| Envelopes with double side seams..... | 13 |
| Envelopes with adhesive strips or flaps..... | 14 |
| Envelope margins..... | 14 |
| Envelope storage..... | 14 |
| Labels..... | 14 |
| Transparencies..... | 14 |
| Print Cartridge Limited Warranty Statement..... | 15 |
| HP LaserJet printing supplies..... | 16 |
| Declaration of conformity..... | 17 |
| Country-/region-specific safety statements..... | 18 |
| Laser safety statement..... | 18 |
| Canadian DOC statement..... | 18 |
| Japanese VCCI statement..... | 18 |
| Korean EMI statement..... | 18 |
| Finnish laser statement..... | 19 |

2 Installation

| | |
|---|----|
| Chapter contents..... | 21 |
| Operating environment | 22 |
| Interface ports | 23 |
| Software..... | 24 |
| Operating systems and printer components..... | 24 |
| Printer drivers..... | 25 |
| Software for Macintosh computers..... | 26 |

| | |
|--------------------------|----|
| PPDs..... | 26 |
| HP LaserJet Utility..... | 26 |

3 Operation

| | |
|--|----|
| Chapter contents..... | 27 |
| Control panel..... | 28 |
| Control-panel layout..... | 28 |
| Control-panel buttons..... | 29 |
| Control-panel lights..... | 29 |
| Control-panel language..... | 30 |
| Printing control-panel menus..... | 30 |
| To print a control-panel menu map..... | 30 |
| Selecting which tray is used for printing | 31 |
| Understanding tray order..... | 31 |
| Customizing tray 1 operation..... | 31 |
| Printing by type and size of media (locking trays)..... | 32 |
| Feeding media from tray 1 manually..... | 33 |
| Selecting the correct fuser mode..... | 34 |
| Using the embedded Web server..... | 35 |
| Opening the embedded Web server..... | 35 |
| Information tab..... | 36 |
| Settings tab..... | 36 |
| Networking tab | 37 |
| Other links..... | 37 |
| Using HP Web Jetadmin software..... | 38 |
| Using the HP Toolbox..... | 39 |
| Supported operating systems..... | 39 |
| Supported browsers..... | 39 |
| To view the HP Toolbox..... | 39 |
| Status tab..... | 40 |
| Troubleshooting tab..... | 40 |
| Alerts tab..... | 41 |
| Set up status alerts page..... | 41 |
| Administrative settings page..... | 41 |
| Documentation tab..... | 41 |
| Device Settings window..... | 41 |
| Toolbox links..... | 42 |
| Other links..... | 42 |
| Uninstalling the HP Toolbox..... | 43 |
| To uninstall the HP Toolbox by using the Windows desktop shortcut..... | 43 |
| Checking the printer configuration..... | 44 |
| Menu map..... | 44 |
| To print a menu map..... | 44 |
| Configuration page..... | 44 |
| To print a configuration page at the control panel..... | 45 |
| Supplies status page..... | 46 |
| To print a supplies status page at the control panel..... | 46 |
| PS or PCL font list..... | 47 |
| To print a PS or PCL font list..... | 47 |
| Managing the print cartridge..... | 48 |

| | |
|---|----|
| HP print cartridges..... | 48 |
| Non-HP print cartridges..... | 48 |
| Print-cartridge authentication..... | 48 |
| Print-cartridge storage..... | 48 |
| Print-cartridge life expectancy..... | 49 |
| Checking the supply level..... | 49 |
| To check the supply level by using the control panel..... | 49 |
| To check the supply level by using the embedded Web server..... | 49 |
| To check the supply level by using the HP Toolbox software..... | 49 |
| To check the supply levels by using HP Web Jetadmin..... | 49 |
| Cartridge-low and cartridge-out conditions..... | 49 |
| When the cartridge is low on toner or drum life..... | 49 |
| When the cartridge is out of toner or drum life..... | 50 |

4 Maintenance

| | |
|---|----|
| Chapter contents..... | 51 |
| Cleaning the printer..... | 52 |
| Cleaning the outside..... | 52 |
| Cleaning the paper path and print-cartridge areas | 52 |
| To clean the inside of the printer..... | 52 |
| Cleaning the fuser..... | 53 |
| To run the cleaning page..... | 53 |

5 Theory of operation

| | |
|------------------------------------|----|
| Chapter contents..... | 55 |
| Introduction..... | 56 |
| Internal components..... | 57 |
| Timing..... | 59 |
| Engine control system..... | 61 |
| Laser/scanner system..... | 63 |
| Pickup/feed/delivery system..... | 64 |
| Image-formation system..... | 66 |
| Step 1: Primary charging..... | 67 |
| Step 2: Laser beam exposure..... | 67 |
| Step 3: Developing..... | 67 |
| Step 4: Transfer..... | 68 |
| Step 5: Separation..... | 68 |
| Step 6: Fusing..... | 68 |
| Step 7: Drum cleaning..... | 69 |
| Print cartridge memory system..... | 70 |

6 Removal and replacement

| | |
|--|----|
| Chapter contents..... | 71 |
| Introduction..... | 72 |
| Removal and replacement strategy | 72 |
| Electrostatic discharge..... | 72 |
| User-replaceable parts..... | 72 |
| Required tools..... | 72 |
| Before performing service..... | 74 |

| | |
|----------------------------------|-----|
| Pre-service procedures..... | 74 |
| Parts removal order..... | 74 |
| Covers..... | 76 |
| Right-side cover..... | 76 |
| Back cover..... | 76 |
| I/O cover..... | 80 |
| Left-side cover..... | 81 |
| Top, right cover..... | 83 |
| Top cover..... | 83 |
| Front, right cover..... | 85 |
| Control panel..... | 87 |
| Formatter..... | 89 |
| Fuser..... | 93 |
| Laser/scanner..... | 98 |
| Right-side handle..... | 101 |
| ECU..... | 103 |
| Access plate..... | 109 |
| Power supply..... | 110 |
| Gear assembly..... | 115 |
| Tray 1 solenoid..... | 119 |
| Tray 2 solenoid..... | 120 |
| E-label reader (memory tag)..... | 121 |
| Face-down-roller shaft..... | 123 |
| Cartridge door..... | 125 |
| Transfer roller..... | 128 |
| Registration assembly..... | 129 |
| Tray 1 pickup roller..... | 132 |
| Tray 2 pickup roller..... | 133 |
| Separation pad..... | 135 |

7 Troubleshooting

| | |
|--|-----|
| Chapter contents..... | 137 |
| Troubleshooting tree..... | 138 |
| Troubleshooting flowchart..... | 139 |
| 1. Does the control-panel display show READY?..... | 139 |
| 2. Can you print a configuration page? | 139 |
| 3. Can you print from a program? | 140 |
| 4. Does the job print as expected?..... | 141 |
| 5. Does the printer select the correct trays?..... | 142 |
| Troubleshooting tools..... | 144 |
| Information pages..... | 144 |
| Menu map..... | 145 |
| Configuration page..... | 146 |
| Supplies status page..... | 148 |
| Embedded Web server | 149 |
| Gaining access to the embedded Web server..... | 149 |
| Information tab..... | 149 |
| Settings tab..... | 150 |
| Networking tab | 150 |
| Other links..... | 150 |

| | |
|--|-----|
| Printer Status and Alerts software | 151 |
| To select status messages..... | 152 |
| To view status messages and information..... | 152 |
| Control-panel menus..... | 153 |
| Using control-panel menus..... | 153 |
| Resets submenu..... | 153 |
| Diagnostics menu..... | 154 |
| Service menu (service PIN codes)..... | 155 |
| Service ID..... | 156 |
| Restoring the Service ID..... | 156 |
| Converting the Service ID to an actual date..... | 156 |
| Printer resets and power-on modes..... | 158 |
| Cold reset | 158 |
| To perform a cold reset..... | 158 |
| NVRAM initialization | 158 |
| To initialize NVRAM..... | 158 |
| Compact Flash initialization | 159 |
| To initialize the Compact Flash card..... | 159 |
| Perform Self test..... | 159 |
| Save + Restore..... | 159 |
| Proper replacement of both the Formatter and the Engine Control Unit (ECU - also known as the DC Controller)..... | 160 |
| Proper replacement of the Formatter only..... | 161 |
| Proper replacement of the Engine Control Unit (ECU) only..... | 161 |
| Test pages | 162 |
| Engine-test page | 162 |
| Formatter test page..... | 162 |
| Interface troubleshooting | 163 |
| Communications checks..... | 163 |
| Computer direct connect (parallel) test | 163 |
| EIO troubleshooting | 163 |
| Jetdirect page..... | 164 |
| Solving general printing problems..... | 165 |
| Clearing jams..... | 166 |
| Avoiding jams | 166 |
| Typical jam locations..... | 167 |
| Clearing jams in the print-cartridge area | 168 |
| Clearing jams in the input trays | 169 |
| Clearing jams in the output areas | 170 |
| Clearing jams in the duplexer area..... | 172 |
| Media handling problems | 174 |
| Multiple pages feed | 174 |
| Pages are wrinkled or folded..... | 174 |
| Pages are skewed | 175 |
| Understanding printer messages..... | 176 |
| Using the printer online Help system..... | 176 |
| Resolving persistent messages..... | 176 |
| Correcting print-quality problems | 191 |
| Print-quality checklist | 191 |
| Image-defect examples..... | 191 |

| | |
|--|-----|
| Light print (partial page) | 193 |
| Light print (entire page) | 193 |
| Specks | 194 |
| Dropouts | 194 |
| Lines | 195 |
| Gray background | 195 |
| Toner smear | 196 |
| Loose toner | 196 |
| Repeating defects | 197 |
| Repeating image | 197 |
| Misformed characters | 198 |
| Page skew..... | 198 |
| Curl or wave | 199 |
| Wrinkles or creases | 199 |
| Vertical white lines | 200 |
| Tire tracks | 200 |
| White spots on black | 201 |
| Scattered lines | 201 |
| Blurred print | 202 |
| Random image repetition | 202 |
| Troubleshooting common Windows problems | 203 |
| Troubleshooting common Macintosh problems..... | 204 |
| Troubleshooting common PostScript problems | 205 |
| General problems..... | 205 |
| Specific errors..... | 205 |
| Printer component locations..... | 206 |
| Main assemblies..... | 206 |
| Main parts..... | 207 |
| Sensors and switches..... | 208 |
| Motors, fans, and solenoids..... | 209 |
| PCAs..... | 210 |
| 500-Sheet paper feeder..... | 211 |
| Wiring diagrams..... | 212 |
| General timing diagrams..... | 215 |

8 Parts and diagrams

| | |
|---|-----|
| Chapter contents..... | 217 |
| Ordering parts and supplies..... | 218 |
| Parts..... | 218 |
| Related documentation and software..... | 218 |
| Supplies..... | 218 |
| Accessories..... | 219 |
| Accessories and supplies..... | 219 |
| Covers..... | 222 |
| Internal components..... | 224 |
| Tray 2 pickup assembly..... | 236 |
| Alphabetical parts list..... | 238 |
| Numerical parts list..... | 246 |

| | |
|------------|-----|
| Index..... | 255 |
|------------|-----|