

hp LaserJet 3300mfp
series



For the complete PDF manual
please visit www.LaserPros.com.



i n v e n t

service



hp LaserJet 3300mfp series

Service

Copyright Information

© 2002 Hewlett-Packard Company

All Rights Reserved.
Reproduction, adaptations, or translation without prior written permission is prohibited except as allowed under copyright laws.

Part number C9124-90948
Second edition, February 2002

Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with respect to this information. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

NOTICE TO U.S. GOVERNMENT USERS: RESTRICTED RIGHTS COMMERCIAL COMPUTER SOFTWARE: "Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1)(ii) of the Rights in Technical Data Clause at DFARS 52.227-7013."

Hewlett-Packard Company
11311 Chinden Boulevard
Boise, Idaho 83714 U.S.A.

Trademark Credits

Microsoft, Windows, and MS-DOS are U.S. registered trademarks of Microsoft Corporation.

TrueType is a U.S. trademark of Apple Computer, Inc.

All other products mentioned herein may be trademarks of their respective companies.



Safety Information

WARNING!

Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

- 1 Read and understand all instructions in the user guide.
- 2 Observe all warnings and instructions marked on the product.
- 3 Use only a grounded electrical outlet when connecting the HP LaserJet 3300mfp product to a power source. If you don't know whether the outlet is grounded, check with a qualified electrician.
- 4 Do not touch the contacts on the end of any of the sockets on the HP LaserJet 3300mfp. Replace damaged cords immediately.

- 5 Unplug this product from wall outlets before cleaning.
- 6 Do not install or use this product near water or when you are wet.
- 7 Install the product securely on a stable surface.
- 8 Install the product in a protected location where no one can step on or trip over the power cord and the power cord will not be damaged.
- 9 If the product does not operate normally, see the online user guide.
- 10 Refer all servicing questions to qualified personnel.

Information regarding FCC Class B, Parts 15 and 68 requirements can be found in the user guide.:

Contents

1 Product information

Chapter contents	15
Introduction	16
Overview of product	16
Front and side view	16
Back and side view	17
Hardware description	18
Firmware description	19
Product Specifications	19
Model and serial numbers	22
Warranty statement	23
Extended warranty	24
Print cartridge information	25
Refilled print cartridges	25
Recycling print cartridges	25
FCC Part 68 Requirements (US)	26
Telephone Consumer Protection Act (US)	27
IC CS-03 requirements	27
Regulatory information for EU countries	28

2 Operation

Chapter contents	29
Operating environment	30
Identifying the control panel components	31
Fax controls	31
To send a fax to one recipient	31
To receive faxes when you hear fax tones	32
Alphanumeric buttons	33
Menu and cancel controls	34
Copy, scan, and start controls	34
Control panel menu structure	35
To print the control panel menu structure	35
To use the control panel keys	35
Control panel error messages	38
Product media specifications	45
Supported media sizes (printer)	45
Guidelines for using media	46
Paper and Transparencies	46
Common media problems table	46
Labels	47

Envelopes	47
Card stock and heavy media	48
Loading media	49
Loading media to print	49
Selecting originals for the ADF	50
Media information for the flatbed	51
Loading originals to copy or scan	51
To load originals onto the flatbed scanner	51
To load originals into the ADF input tray	52
Printer output paths	54

3 Maintenance

Chapter contents	55
Life expectancies of parts that wear	56
Scanner calibration	56
Cleaning the product	57
Cleaning the exterior	57
Cleaning the glass	57
Cleaning the lid backing	58
Cleaning the print path	59
Cleaning the print cartridge area	60
Cleaning the printer pickup roller	61
Cleaning the printer separation pad	62
User-replaceable parts	63
Replacing the printer pickup roller	63
Replacing the printer separation pad	65
Installing a new ADF	67
To install a new or replacement ADF	67
Changing an ADF pick roller assembly	69
Removing and replacing the control panel bezel	71

4 Operational overview

Chapter contents	73
Basic functions	74
Formatter system	76
Central processing unit	76
Line Interface Unit (LIU)	76
Scanner formatter PCA	76
Flash memory or ROM	77
Standard Boot Process	77
RAM	78
Parallel interface or Universal Serial Bus interface	78
Control panel	78
Draft mode	78
MEt	78
Enhanced I/O	79

PJL overview	79
Scanner and ADF functions and operation	80
Scanner Functions	80
Scanner Operation	81
ADF Operation	81
ADF paper path and ADF sensors	82
ADF Jam Detection.	83
Printer functions and operation	84
Engine control unit/power system.	85
Image formation system	91
Printer paper-feed system	94
Jam detection	96
Basic sequence of operation (formatter-to-printer)	98
LIU (fax) functions and operation	100
PSTN operation	100
The fax subsystem	100
Formatter in the fax subsystem	101
LIU in the fax subsystem	101
Fax page storage in flash memory	105

5 Removal and replacement

Chapter contents	107
Removal and replacement strategy.	109
Required tools.	109
Before performing service.	110
Print cartridge	110
Parts removal order	111
Separation of scanner from printer	113
Right side cover	113
Scanner side covers	115
Scanner assemblies	119
Flat lid or ADF assembly.	119
The ADF pick roller assembly.	120
ADF document feed guide	122
ADF separation pad	123
Control panel bezel.	124
Control panel	125
Control panel chassis	126
Scanner formatter.	127
ADF scanner glass	128
Printer covers	129
Left side door	129
Back cover	130
Printer top cover	132
Front cover assembly	133
Printer assemblies.	137

Transfer roller	140
Line Interface Unit (LIU)	141
Formatter	142
Fuser assembly	144
Output rollers	148
Motor.	150
Solenoid	151
Fan assembly	153
Pickup assembly.	155
Paper lift-plate assembly and pickup roller shaft	157
Right plate assembly	160
Left plate assembly.	162
Bottom assemblies	163
Left bottom frame support.	163
ECU fuses and ECU pan	164
Paper-feed assembly	168

6 Troubleshooting

Chapter contents	173
Basic troubleshooting	174
Errors.	178
Control panel messages	178
Critical error messages.	185
Checking the print cartridge	187
Solving image-quality problems	188
Solving paper-feed problems	197
Solving print paper-feed problems	197
Solving scanner (copier) paper-feed problems	199
Functional checks	200
Engine test	200
Half self-test functional check	201
Drum rotation functional check	202
Heating element check	203
High-voltage power supply check.	204
Paper path check	206
Updating or recovering the firmware code	207
Firmware update via flash executable	207
Firmware recovery DIMM	207
Troubleshooting tools	209
Internal reports	209
Printing all fax reports at once	209
T.30 protocol trace	210
Service mode functions.	229
Secondary service menu	229
Developer's menu.	230
NVRAM init	233

PJL software commands	233
Repetitive image defect ruler	236
Main wiring	237
Locations of connectors	239
Locations of connectors and switches.	240

7 Parts and diagrams

Chapter contents	241
Ordering parts and supplies	242
Parts	242
Related documentation and software	242
Parts that wear	242
Accessories	243
Common hardware	244
How to use the parts lists and diagrams	245
Scanner assemblies	246
Scanner and ADF	246
ADF rollers and separation pad	248
Control panel assembly	249
Printer assemblies.	252
Printer covers	252
Paper tray	253
Internal assemblies	254
Internal components (1 of 2).	254
Internal components (2 of 2).	256
Electrical components.	258
Paper pickup assembly (1 of 2)	260
Paper pickup assembly (2 of 2)	262
Fuser assembly	264
Alphabetical parts list	266
Numerical parts list	271

Index

For the complete PDF manual
please visit www.LaserPros.com.