


For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).



**service**

**hp** LaserJet  
4200/4250/4300/4350  
series printers

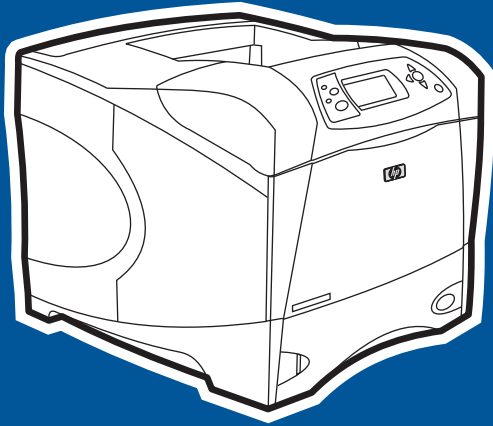

# HP LaserJet 4200, 4250, 4300 and 4350 Series printers

---

Service Manual



## Copyright and License

© 2004 Copyright Hewlett-Packard Development Company, LP

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained in this document is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number Q5400-90932

Edition 1, 11/2004

## Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark of Corel Corporation or Corel Corporation Limited.

Energy Star® and the Energy Star logo® are US registered marks of the United States Environmental Protection Agency.

Linux® is a U.S. registered trademark of Linus Torvalds

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Unix® is a registered trademark of The Open Group.

# Table of contents

## 1 Product information

Chapter contents.....	1
Printer configurations.....	2
Base model.....	2
n model.....	3
tn model.....	4
dtn model.....	5
dtns model.....	6
dtnsl models.....	7
Model and serial numbers .....	8
Printer overview.....	9
Hardware components .....	9
Interface ports.....	11
Software components.....	12
Operating systems and printer components .....	12
Printer drivers.....	13
Drivers included .....	13
Additional drivers.....	14
Select the correct printer driver for your needs.....	14
Printer driver Help.....	14
Using the printer drivers.....	15
Software for Macintosh computers .....	17
PPDs.....	17
HP LaserJet Utility.....	17
Specifications.....	18
Hardware specifications .....	18
Electrical specifications.....	20
Acoustic emissions.....	22
Print speed specifications .....	24
Operating environment.....	24
Media specifications.....	25
General guidelines .....	25
Supported media weights and sizes.....	26
Supported-media specifications tables.....	26
Paper and print media.....	30
Printing and storage environment .....	30
Supported types of media .....	31
Guidelines for using paper.....	32
Envelopes.....	34
Envelope construction.....	34

Envelopes with double side-seams.....	35
Envelopes that have adhesive strips or flaps.....	35
Envelope margins.....	35
Envelope storage.....	35
Labels .....	36
Transparencies.....	36
Card stock and heavy paper .....	37
Card stock construction .....	37
Card stock guidelines.....	37
Types of media to avoid.....	38
Hewlett-Packard limited warranty statement.....	39
Print Cartridge Limited Warranty Statement.....	41
Service approach .....	42
Regulatory information.....	43
FCC regulations.....	43
Environmental product stewardship program.....	44
Protecting the environment.....	44
Ozone production.....	44
Energy consumption.....	44
HP LaserJet printing supplies.....	45
Material safety data sheet.....	46
For more information.....	46
Regulatory statements .....	47
Country-/region-specific safety statements.....	49
Laser safety statement .....	49
Canadian DOC statement.....	49
Japanese VCCI statement.....	49
Korean EMI statement.....	49
Finnish laser statement.....	50

## 2 Installation

Chapter contents.....	51
Operating environment .....	52
Site requirements.....	53
Software installation.....	54

## 3 Operation

Chapter contents.....	55
Using the control panel.....	56
Control-panel layout.....	56
Control-panel lights.....	57
Control-panel buttons.....	58
Using the printer Help system.....	58
Settings and defaults .....	59
Setting the control-panel display language.....	59
Control-panel menus .....	60
Printing control-panel menus.....	60
To print a control-panel menu map.....	60
To change a control-panel setting.....	61
Retrieve Job menu .....	62

Information menu.....	63
Paper-handling menu.....	64
Configure-device menu .....	68
Printing submenu .....	68
Print-quality submenu .....	71
System Setup submenu .....	74
Stapler/stacker submenu .....	77
I/O submenu .....	77
Resets submenu (HP LaserJet 4250/4350 only).....	78
Diagnostics menu (HP LaserJet 4250/4350 only) .....	80

## 4 Maintenance

Chapter contents.....	81
Cleaning the printer and accessories .....	82
Cleaning the fuser.....	83
Running the cleaning page manually.....	83
To run the cleaning page manually.....	83
Running the cleaning page automatically.....	85
To run the cleaning page automatically.....	85
Cleaning spilled toner .....	85
Performing preventive maintenance.....	86
Resetting the maintenance-kit counter (LJ 4200/4300).....	86
Resetting the maintenance-kit counter (LJ 4250/4350).....	87
Maintenance kit part numbers .....	87
Expected life of components .....	88
Maintaining the stapler unit.....	89
To remove and replace the stapler unit.....	89
Loading staples.....	90
To load staples .....	90
Downloading a remote firmware update.....	91
Downloading the new firmware to the printer.....	91
Remote firmware update through a local Windows port .....	92
Windows 95, Windows 98, or Windows Me .....	92
Windows NT 4.0, Windows 2000, Windows XP, or Windows Server 2003.....	93
Remote firmware update through a Windows network.....	93
Remote firmware update for UNIX systems.....	93
Remote firmware update using FTP on a direct network connection .....	93
Windows operating systems .....	94
Mac operating systems.....	95
Remote firmware update using FTP through a browser.....	96
Remote firmware update using Fetch (Mac OS 8.6 and OS 9.x only) .....	97
Remote firmware update using the HP LaserJet utility (Mac OS 8.6 and OS 9.x only).....	98
Remote firmware update using the LPR command .....	99
Using HP Web JetAdmin to download the firmware to the printer.....	100
Printer messages during firmware update.....	101
Troubleshooting a firmware update.....	102

## 5 Theory of operation

Chapter contents.....	103
Introduction .....	104

Basic operation of the printer.....	105
Printer operating sequence.....	105
Control system overview.....	105
Pickup-and-feed system overview.....	106
Laser/scanner system overview.....	106
Image-formation system overview.....	106
General descriptions .....	107
Dc controller PCA.....	108
Motor and fan control.....	109
Power supply.....	110
Fuser-control circuit.....	110
Fuser over-temperature protection .....	111
Overcurrent/overvoltage protection.....	111
Laser/scanner assembly.....	112
Paper-pickup-and-feed system.....	114
Pickup-and-feed block .....	116
Printing from tray 1 .....	117
Printing from tray 2 .....	119
Tray 2, 500-sheet feeder, and 1,500-sheet feeder media-size detection.....	119
Lifter-driver operation.....	120
Multiple-feed prevention.....	121
Media-skew prevention.....	121
Fuser/delivery block.....	122
Jam detection.....	122
Printer pickup delay jam from tray 1.....	123
Printer pickup delay jam from tray 2.....	123
Printer pickup stationary jam.....	123
Printer-delivery wrap jam when feeding regular media.....	123
Printer delivery wrap-jam when feeding irregular media.....	123
Printer delivery-delay jams.....	124
Printer door-open jam .....	124
Printer residual-media jam.....	124
Printing from the 500-sheet feeder.....	125
500-sheet feeder pickup and feeding.....	126
Printing from the 1,500-sheet feeder.....	128
1,500-sheet feeder pickup and feeding.....	129
1,500-sheet feeder lifting mechanism.....	131
Envelope feeder.....	132
Envelope-feeder pickup and feeding.....	132
Envelope feeder jam detection .....	133
Envelope feeder pickup delay jam.....	133
Envelope feeder pickup stationary jam.....	133
Duplexer.....	134
Reversing and duplexer pickup.....	135
Duplexer jam detection .....	136
Stacker and stapler/stacker .....	137
Stacker.....	139
Stacker feed and delivery.....	139
Stacker jam detection.....	141
Stacker-feed jam .....	141

Stacker-feed stationary jam.....	141
Stacker residual-media jam.....	141
Stapler/stacker .....	142
Stapler/stacker feed and delivery.....	142
Staple-mode feed and delivery.....	144
Stapler unit.....	148
Stapler-unit operation .....	149
Staple level-detection.....	151
Stack-mode feed and delivery.....	151
Stapler/stacker jam detection .....	152
Stapler/stacker feed jam .....	152
Stapler/stacker feed stationary jam.....	152
Stapler/stacker delivery jam.....	152
Stapler/stacker residual media jam.....	152
Image-formation system .....	153
Electrostatic latent-image formation.....	155
Primary charging .....	155
Writing the image .....	155
Developing the image .....	156
Transferring the image .....	157
Fusing the image .....	158
Cleaning the transfer charging roller and photosensitive drum.....	159
Print-cartridge memory chip.....	160
Formatter system.....	161
PowerSave (LJ 4200/4200L/4300) or Sleep (LJ 4250/4350) Mode.....	161
Resolution Enhancement technology .....	162
EconoMode .....	162
Input/output.....	162
Parallel interface.....	162
USB (HP LaserJet 4250/4350 Series printers only).....	162
Embedded ethernet print server (HP LaserJet 4250/4350 Series printers only).....	162
Expanded I/O.....	163
Flash (HP LaserJet 4200/4300 Series printers only).....	163
CompactFlash card (HP LaserJet 4250/4350 Series printers only).....	163
Hard-disk accessory.....	163
CPU .....	163
Printer memory .....	163
Read-only memory .....	163
Random-access memory .....	163
DIMM slots .....	164
Firmware DIMM (LJ 4200/4200L/4300 only).....	164
Nonvolatile memory.....	164
Memory Enhancement technology .....	164
PJL overview .....	164
PML.....	165
Control panel .....	165

## 6 Removing and replacing parts

Chapter contents.....	167
-----------------------	-----

Removal and replacement strategy.....	168
Required tools.....	168
Before performing service .....	169
After completing service .....	169
Screws used in the printer .....	170
Parts-removal tree .....	171
Printer input tray, and cabinet wheel locks.....	172
Dc controller PCA diagram.....	173
User-replaceable parts .....	175
Print cartridge .....	175
Transfer roller .....	177
Fuser.....	178
Tray 1 pickup roller .....	179
Tray 1 separation pad.....	181
Tray 2 feed rollers.....	182
Covers, tray 1, and the rear output bin.....	186
Accessory covers and the tray 2 extension door .....	187
Formatter cover.....	191
Top cover.....	192
Right-side cover .....	195
Left-side cover.....	197
Front cover.....	198
Tray 1.....	200
Rear output bin.....	203
Control-panel display.....	204
Control-panel overlay .....	204
Control-panel assembly .....	205
Main assemblies .....	209
Firmware DIMM (LJ 4200/4300 only).....	210
Formatter assembly .....	211
Reinstallation notes, formatter .....	212
Installing a new formatter and a new dc controller (LJ 4250/4350 only).....	213
Output-delivery assembly .....	214
Duplexing-pendulum assembly.....	217
Laser/scanner assembly.....	219
Paper-pickup drive assembly .....	222
Tray 2 lifter-drive assembly.....	227
Dc controller PCA.....	230
Reinstallation tip.....	235
Installing a new formatter and a new dc controller (LJ 4250/4350 only).....	235
Power supply.....	236
Paper-feed belt assembly.....	243
Motors and fans.....	245
Main cooling fan (left side) .....	246
Cooling fan, right side (HP LaserJet 4250/4300/4350 Series printers only) .....	248
Removing the fan without removing the air duct.....	248
Removing the fan and the air duct together.....	251
Print-cartridge motor (HP LaserJet 4250/4300/4350 series printer only).....	253
Main motor .....	255
Pickup and feed assemblies .....	257

Tray 1 paper-pickup assembly .....	257
Paper-feed assembly.....	261
Reinstallation notes for the paper-feed assembly.....	262
Main drive assembly.....	263
Registration assembly.....	266
Sensors and switches.....	268
Tray 2/500-sheet feeder media-size sensor (PS101).....	269
Tray 2 media-size sensor (PS101) .....	269
500-sheet feeder media-size sensor.....	270
Tray 1 paper sensor (PS105).....	272
Door switch (SW101).....	273
Solenoids and clutches.....	274
Tray 2 pickup solenoid (SL101).....	275
Tray 1 pickup solenoid (SL102).....	276
Feed-roller clutch (CL101).....	277
Accessories .....	278
500-sheet feeder assembly.....	278
500-sheet feed rollers.....	278
500-sheet feeder right-side cover.....	278
500-sheet feeder control PCA .....	281
500-sheet feeder lifter-drive assembly .....	282
500-sheet feeder paper-pickup drive assembly.....	283
1,500-sheet feeder assembly.....	288
1,500-sheet feeder feed rollers.....	288
1,500-sheet feeder separation roller .....	288
1,500-sheet feeder door.....	290
1,500-sheet feeder rear cover.....	291
1,500-sheet feeder right-side cover .....	292
1,500-sheet feeder control PCA .....	294
1,500-sheet feeder media-size sensor.....	296
1,500-sheet feeder lifter-drive assembly .....	297
1,500-sheet feeder paper-pickup drive assembly.....	300

## 7 Troubleshooting

Chapter contents.....	301
Introduction .....	302
Troubleshooting process.....	303
Initial troubleshooting checklist.....	303
Troubleshooting flowchart .....	305
Power-on checks.....	306
Overview.....	306
Troubleshooting tools .....	309
Information pages.....	310
Menu map.....	311
Configuration page .....	312
Supplies status page .....	314
Embedded Web server .....	315
Gaining access to the embedded Web server.....	315
Information tab .....	315
Settings tab .....	316

Networking tab .....	316
Other links .....	317
Printer Status and Alerts software .....	317
To select status messages.....	318
To view status messages and information.....	318
Control-panel menus .....	319
Using control-panel menus.....	319
Resets submenu .....	320
Diagnostics menu .....	321
Service menu (service PIN codes).....	323
Service ID .....	324
Converting the Service ID to an actual date.....	324
Restoring the Service ID .....	324
Printer resets and power-on modes.....	325
Cold reset .....	325
To perform a cold reset .....	325
NVRAM initialization .....	326
To initialize NVRAM .....	326
Hard-disk initialization .....	327
To initialize the hard disk.....	327
Power-on bypass.....	328
Skip disk-load .....	328
Self-test.....	328
Test pages .....	329
Engine-test page .....	329
Formatter test page .....	330
Interface troubleshooting .....	331
Communications checks.....	331
Computer direct connect (parallel) test .....	331
EIO troubleshooting .....	331
Jetdirect page/Embedded Jetdirect page (HP LaserJet 4250/4350 Series printers).....	332
Display-message troubleshooting .....	333
Status messages .....	333
Warning messages .....	333
Error messages .....	333
Critical-error messages .....	333
Alphabetical printer messages .....	333
Alphabetical printer messages.....	334
Numerical printer messages .....	348
Numerical printer messages.....	348
Paper-path troubleshooting.....	365
Overview.....	365
Jam recovery .....	366
To disable the jam recovery.....	366
Avoiding jams .....	367
Persistent jams .....	368
Basic troubleshooting for persistent jams.....	368
Data collection .....	368
General paper-path troubleshooting.....	368

Paper-path checklist.....	369
Paper-path test .....	369
To perform a paper-path test.....	370
Jams in tray 1 .....	371
Jams in tray 2 .....	372
Jams in tray 3 or tray 4.....	373
Jams in the paper path .....	374
Jams in the duplex path .....	374
Media transport problems .....	375
Multiple pages feed .....	375
Media is wrinkled or folded.....	375
Media is skewed .....	376
Image-formation troubleshooting .....	377
Media-related print-quality problems .....	377
Overhead transparency defects .....	378
Print-quality problems that are related to the environment.....	378
Print-quality problems that are related to jams.....	378
Image defects .....	379
Image quality .....	379
Check the print cartridge.....	380
EconoMode.....	380
Half self-test functional check .....	381
Drum-rotation functional check.....	381
Image defect tables.....	382
Repetitive-defects troubleshooting .....	400
Troubleshooting the stacker and the stapler/stacker.....	402
Initial checks .....	402
Jam errors .....	403
Stacker and stapler/stacker paper path.....	403
Stacker paper-path test.....	404
Stapler/stacker paper-path test.....	404
Paper-transport errors.....	406
Malfunction errors.....	406
Component errors.....	407
Printer-component locations.....	409
Main printer parts.....	409
Printer switches and sensors.....	413
Printer motors and fans.....	414
Printer PCAs.....	415
Accessory component locations.....	416
500-sheet feeder main parts.....	416
500-sheet feeder switches, sensors, solenoids, and PCAs.....	417
1,500-sheet feeder main parts.....	418
1,500-sheet feeder switches, sensors, solenoids, and PCAs.....	420
Stapler/stacker stapler assembly.....	421
Stacker and stapler/stacker switches and sensors.....	422
Stacker and stapler/stacker motors and solenoids.....	423
Stacker and stapler/stacker PCAs.....	424
Printer and accessory wiring diagrams.....	425
HP LaserJet 4200 wiring diagram .....	426

HP LaserJet 4250 wiring diagram .....	427
HP LaserJet 4300 wiring diagram .....	428
HP LaserJet 4350 wiring diagram .....	429
500-sheet feeder wiring diagram.....	430
1,500-sheet feeder wiring diagram.....	431
Duplex accessory wiring diagram.....	432
Envelope-feeder-accessory wiring diagram.....	433
Stacker-accessory wiring diagram.....	434
Stapler/stacker-accessory wiring diagram.....	435
Dc controller connectors diagram.....	436
General timing diagrams.....	437
HP LaserJet 4200 general timing diagram.....	438
HP LaserJet 4250 general timing diagram.....	439
HP LaserJet 4300 general timing diagram.....	440
HP LaserJet 4350 general timing diagram.....	441
Stapler/stacker timing diagram.....	442

## 8 Parts and diagrams

Chapter contents.....	443
Ordering parts and supplies.....	444
Parts.....	444
Related documentation and software.....	444
HP-authorized resellers and support.....	445
HP service agreements.....	445
HP Partner Portal.....	445
Supplies.....	446
Consumables and accessories.....	447
Consumables.....	447
Accessories.....	448
Memory, fonts, and mass storage .....	450
Cables and connectivity.....	452
Formatters, laser/scanners, power supplies, and fusers.....	453
Assembly locations (1 of 3) .....	454
Assembly locations (2 of 3) .....	455
Assembly locations (3 of 3) .....	456
Covers.....	458
Internal components.....	462
Accessories.....	484
Alphabetical parts list.....	494
Numerical parts list.....	503

Index.....	513
------------	-----

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).