



LASERJET PROFESSIONAL M1130/M1210

MFP SERIES

Service Manual





HP LaserJet Professional M1130/M1210 MFP series

Service Manual

Copyright and License

© 2010 Copyright Hewlett-Packard
Development Company, L.P.

Reproduction, adaptation, or translation
without prior written permission is prohibited,
except as allowed under the copyright laws.

The information contained herein is subject
to change without notice.

The only warranties for HP products and
services are set forth in the express warranty
statements accompanying such products
and services. Nothing herein should be
construed as constituting an additional
warranty. HP shall not be liable for technical
or editorial errors or omissions contained
herein.


Part number: CE841-90985

Edition 1, 4/2010


Trademark Credits

Microsoft®, Windows®, Windows® XP, and
Windows Vista® are U.S. registered
trademarks of Microsoft Corporation.

Conventions used in this guide

 **TIP:** Tips provide helpful hints or shortcuts.

 **NOTE:** Notes provide important information to explain a concept or to complete a task.

 **CAUTION:** Cautions indicate procedures that you should follow to avoid losing data or damaging the product.


 **WARNING!** Warnings alert you to specific procedures that you should follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Removal and replacement	1
Introduction	2
Removal and replacement strategy	2
Electrostatic discharge	3
Required tools	3
Before performing service	4
After performing service	4
Post-service test	5
Print-quality test	5
Parts removal order	6
Pickup roller	9
Product base pickup roller	9
ADF pre-pickup arm and pickup roller	10
Remove the ADF pre-pickup arm and pickup roller	10
Reinstall the ADF pre-pickup arm and pickup roller	12
Separation pad	13
Product base separation pad	13
ADF separation pad	14
Reinstall the ADF separation pad assembly	16
Transfer roller	19
Covers	20
Paper-pickup tray (input tray)	20
Paper-delivery tray (output bin extension)	21
Left cover	22
Remove the left cover	22
Right cover	25
Remove the right cover	25
Front cover	28
Remove the front cover	28
Scanner assembly	30
Remove the scanner assembly	30
Cartridge door	33
Remove the cartridge door	33
Top cover	36

Remove the top cover	36
Rear cover	38
Remove the rear cover	38
Reinstall the rear cover	40
Scanner components	41
White plate (document backing)	41
ADF top cover	43
ADF core	45
Remove the ADF core	45
ADF tray	48
Remove the ADF tray	48
ADF base or scanner assembly lid	51
Remove the ADF base or scanner assembly lid	51
Scanner assembly bezel	53
Remove the scanner assembly bezel	53
Scanner assembly latch	55
Remove the scanner assembly latch	55
CIS scanner-carriage assembly	56
Remove the CIS scanner-carriage assembly	56
CIS scanner motor, gears, and scanner light bar	58
Remove the CIS scanner motor, gears, and scanner light bar	58
CIS scanner drive gears	61
Remove the CIS scanner drive gears	61
Main assemblies	62
Control-panel assembly	62
Remove the control-panel assembly	62
Reinstall the control-panel assembly	64
Power switch assembly	66
Remove the power switch assembly	66
Formatter PCA	68
Remove the formatter PCA	68
Fax PCA	70
Remove the Fax PCA	70
Laser/scanner assembly	71
Remove the laser/scanner assembly	71
Reinstall the laser/scanner assembly	73
Main motor	74
Remove the main motor	74
Reinstall the main-motor drive belt	78
Fuser	79
Remove the fuser	79
Reinstall the fuser	83
Pickup assembly	84
Remove the pickup assembly	84

Reinstall the pickup assembly	88
Pickup solenoid	90
Remove the pickup solenoid	90
Engine controller PCA	94
Remove the engine controller PCA	94
Reinstall the engine controller PCA	98
2 Solve problems	101
Solve problems checklist	102
Troubleshooting process	105
Determine the problem source	105
Power subsystem	106
Power-on checks	106
Tools for troubleshooting	107
Individual component diagnostics	107
Engine diagnostics	107
Engine-test button	107
Components tests	108
Drum rotation functional check	108
Half self-test functional check	108
Diagrams	109
Plug/jack locations	109
HP LaserJet Professional M1130 MFP series	109
HP LaserJet Professional M1210 MFP series	110
Location of connectors	111
Locations of major components	112
General timing charts	115
General circuit diagram	116
Internal print-quality test pages	117
Cleaning page	117
Configuration page	118
Print-quality troubleshooting tools	119
Repetitive defect ruler	119
Interpret control-panel light patterns (HP LaserJet Professional M1130 MFP series only)	120
Interpret control-panel messages (HP LaserJet Professional M1210 MFP series only)	123
Control-panel message types	123
Control-panel messages	123
Clear jams	126
Common causes of jams	126
Jam locations	127
Clear jams from the document feeder (HP LaserJet Professional M1210 MFP series only)	128

Clear jams from the output areas	129
Clear jams from the input tray	131
Clear jams from inside the product	133
Solve repeated jams	135
Change jam recovery	136
Solve paper-handling problems	137
Solve image-quality problems	138
Image defects table	138
General print-quality issues	138
Copy print-quality problems	142
Scan-quality problems	143
Prevent scan-quality problems	143
Solve scan-quality problems	143
Optimize and improve image quality	144
Change print density	144
Manage and configure printer drivers	144
Clean the product	145
Clean the pickup roller	145
Clean the separation pad	149
Clean the paper path	152
Clean the print-cartridge area	154
Clean the exterior	157
Clean the scanner glass strip and platen	158
Solve performance problems	159
Solve connectivity problems	160
Solve direct-connect problems	160
Solve network problems	160
Solve fax problems (HP LaserJet Professional M1210 MFP series only)	162
Fax troubleshooting checklist	162
Fax error messages	163
Alert and warning messages	163
Fax logs and reports	168
Print all fax reports	168
Print individual fax reports	169
Set the fax activity log to print automatically	169
Set the fax error report	169
Set the fax confirmation report	170
Include the first page of each fax on the fax confirmation, fax error, and last call reports	170
Change error correction and fax speed	170
Set the fax-error-correction mode	170
Change the fax speed	171
Problems sending faxes	171
Problems receiving faxes	174

Service mode functions	177
Product resets	177
Product updates	178
3 Parts and diagrams	179
Order parts by authorized service providers	180
Order replacement parts	180
Related documentation and software	180
Supplies part numbers	180
Customer replaceable units (CRU) kit part numbers	181
Whole-unit replacement part numbers	182
How to use the parts lists and diagrams	183
Assembly locations	184
Base product (no optional trays or accessories)	184
Assembly views	186
Assembly view, HP LaserJet Professional M1130 MFP series	186
Assembly view, HP LaserJet Professional M1210 MFP series	188
Scanner and ADF assemblies	190
Scanner assembly (1 of 2); HP LaserJet Professional M1130 MFP series	190
Scanner assembly (2 of 2); HP LaserJet Professional M1130 MFP series	192
Scanner drive assembly; HP LaserJet Professional M1130 MFP series	194
ADF/scanner assembly; HP LaserJet Professional M1210 MFP series	196
Scanner assembly; HP LaserJet Professional M1210 MFP series	198
Scanner drive assembly; HP LaserJet Professional M1210 MFP series	200
ADF assembly; HP LaserJet Professional M1210 MFP series	202
ADF top cover; HP LaserJet Professional M1210 MFP series	204
ADF core; HP LaserJet Professional M1210 MFP series	206
ADF Base; HP LaserJet Professional M1210 MFP series	208
Covers	210
Product base	210
Internal assemblies	212
Internal assemblies (1 of 3)	212
Internal assemblies (2 of 3)	214
Internal assemblies (3 of 3)	216
PCAs	218
Alphabetical parts list	220
Numerical parts list	227
Appendix A Service and support	235
Hewlett-Packard limited warranty statement	236
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	237
End User License Agreement	238
Customer self-repair warranty service	240

Customer support	240
Repack the product	241
Service information form	242
Appendix B Specifications	243
Physical specifications	244
Power consumption	244
Acoustic specifications	244
Environmental specifications	245
Appendix C Regulatory information	247
FCC regulations	248
Declaration of conformity (base model)	249
Declaration of conformity (fax model)	250
Certificate of Volatility	251
Safety statements	253
Laser safety	253
Canadian DOC regulations	253
Power cord instructions	253
EMC statement (Korea)	253
Laser statement for Finland	254
GS statement (Germany)	254
Substances Table (China)	255
Restriction on Hazardous Substances statement (Turkey)	255
Additional statements for telecom (fax) products	256
EU Statement for Telecom Operation	256
New Zealand Telecom Statements	256
Additional FCC statement for telecom products (US)	256
Telephone Consumer Protection Act (US)	257
Industry Canada CS-03 requirements	257
Index	259

List of tables

Table 2-1	Basic problem solving	102
Table 2-2	Status-light legend	120
Table 2-3	Control-panel light patterns	120
Table 3-1	Order parts, accessories, and supplies	180
Table 3-2	Related documentation and software	180
Table 3-3	Supplies part numbers	180
Table 3-4	Customer replaceable units (CRU) kit part numbers	181
Table 3-5	Whole-unit replacement part numbers	182
Table 3-6	Assembly view, HP LaserJet Professional M1130 MFP series	187
Table 3-7	Assembly view, HP LaserJet Professional M1210 MFP series	189
Table 3-8	Scanner assembly (1 of 2); HP LaserJet Professional M1130 MFP series	191
Table 3-9	Scanner assembly (2 of 2); HP LaserJet Professional M1130 MFP series	193
Table 3-10	Scanner drive assembly; HP LaserJet Professional M1130 MFP series	195
Table 3-11	ADF/scanner assembly; HP LaserJet Professional M1210 MFP series	197
Table 3-12	ADF/scanner assembly; HP LaserJet Professional M1210 MFP series	199
Table 3-13	Scanner drive assembly; HP LaserJet Professional M1210 MFP series	201
Table 3-14	ADF assembly; HP LaserJet Professional M1210 MFP series	203
Table 3-15	ADF top cover; HP LaserJet Professional M1210 MFP series	205
Table 3-16	ADF core; HP LaserJet Professional M1210 MFP series	207
Table 3-17	ADF pre-pick arm assembly; HP LaserJet Professional M1210 MFP series	209
Table 3-18	Product base	211
Table 3-19	Internal assemblies (1 of 3)	213
Table 3-20	Internal assemblies (2 of 3)	215
Table 3-21	Internal assemblies (3 of 3)	217
Table 3-22	PCAs	219
Table 3-23	Alphabetical parts list	220
Table 3-24	Numerical parts list	227
Table B-1	Physical specifications ¹	244
Table B-2	HP LaserJet Professional M1130/M1210 MFP series (average in watts) ¹²³	244
Table B-3	HP LaserJet Professional M1130/M1210 MFP series ¹²	244
Table B-4	Environmental specifications	245

List of figures

Figure 1-1	Phillips and pozidrive screwdriver comparison	3
Figure 1-2	Parts removal order; HP LaserJet Professional M1210 MFP series ADF/scanner	6
Figure 1-3	Parts removal order; HP LaserJet Professional M1130 MFP series scanner	7
Figure 1-4	Parts removal order; product base	7
Figure 1-5	Remove the product base pickup roller (1 of 2)	9
Figure 1-6	Remove the product base pickup roller (2 of 2)	9
Figure 1-7	Remove the ADF pre-pickup arm and pickup roller assembly (1 of 4)	10
Figure 1-8	Remove the ADF pre-pickup arm and pickup roller assembly (2 of 4)	10
Figure 1-9	Remove the ADF pre-pickup arm and pickup roller assembly (3 of 4)	11
Figure 1-10	Remove the ADF pre-pickup arm and pickup roller assembly (4 of 4)	11
Figure 1-11	Reinstall the ADF pre-pickup arm and pickup roller assembly gears	12
Figure 1-12	Remove the product base separation pad assembly	13
Figure 1-13	Remove the ADF separation pad assembly (1 of 4)	14
Figure 1-14	Remove the ADF separation pad assembly (2 of 4)	14
Figure 1-15	Remove the ADF separation pad assembly (3 of 4)	15
Figure 1-16	Remove the ADF separation pad assembly (4 of 4)	15
Figure 1-17	Reinstall the ADF separation pad assembly (1 of 5)	16
Figure 1-18	Reinstall the ADF separation pad assembly (2 of 5)	16
Figure 1-19	Reinstall the ADF separation pad assembly (3 of 5)	17
Figure 1-20	Reinstall the ADF separation pad assembly (4 of 5)	17
Figure 1-21	Reinstall the ADF separation pad assembly (5 of 5)	18
Figure 1-22	Remove the transfer roller	19
Figure 1-23	Remove the paper-pickup tray (1 of 2)	20
Figure 1-24	Remove the paper-pickup tray (2 of 2)	20
Figure 1-25	Remove the paper-delivery tray	21
Figure 1-26	Remove the paper-pickup tray (2 of 2)	21
Figure 1-27	Remove the left cover (1 of 6)	22
Figure 1-28	Remove the left cover (2 of 6)	22
Figure 1-29	Remove the left cover (3 of 6)	23
Figure 1-30	Remove the left cover (4 of 6)	23
Figure 1-31	Remove the left cover (5 of 6)	24
Figure 1-32	Remove the left cover (6 of 6)	24
Figure 1-33	Remove the left cover (1 of 5)	25
Figure 1-34	Remove the left cover (2 of 5)	25

Figure 1-35	Remove the right cover (3 of 5)	26
Figure 1-36	Remove the left cover (4 of 5)	26
Figure 1-37	Remove the right cover (5 of 5)	27
Figure 1-38	Remove the front cover (1 of 4)	28
Figure 1-39	Remove the front cover (2 of 4)	28
Figure 1-40	Remove the front cover (3 of 4)	29
Figure 1-41	Remove the front cover (4 of 4)	29
Figure 1-42	Remove the scanner assembly (1 of 5; HP LaserJet Professional M1130 MFP series)	30
Figure 1-43	Remove the scanner assembly (2 of 5; HP LaserJet Professional M1210 MFP series)	30
Figure 1-44	Remove the scanner assembly (3 of 5)	31
Figure 1-45	Remove the scanner assembly (4 of 5)	31
Figure 1-46	Remove the scanner assembly (5 of 5)	32
Figure 1-47	Remove the cartridge door (1 of 5)	33
Figure 1-48	Remove the cartridge door (2 of 5)	34
Figure 1-49	Remove the cartridge door (3 of 5)	34
Figure 1-50	Remove the cartridge door (4 of 5)	35
Figure 1-51	Remove the cartridge door (5 of 5)	35
Figure 1-52	Remove the top cover (1 of 2)	36
Figure 1-53	Remove the top cover (2 of 2)	37
Figure 1-54	Remove the rear cover (1 of 2)	38
Figure 1-55	Remove the rear cover (2 of 2)	39
Figure 1-56	Rear cover and bracket correctly positioned	40
Figure 1-57	Rear cover and bracket incorrectly positioned	40
Figure 1-58	Remove the white plate (1 of 3)	41
Figure 1-59	Remove the white plate (2 of 3)	42
Figure 1-60	Remove the white plate (3 of 3)	42
Figure 1-61	Remove the ADF top cover (1 of 4)	43
Figure 1-62	Remove the ADF top cover (2 of 4)	43
Figure 1-63	Remove the ADF top cover (3 of 4)	44
Figure 1-64	Remove the ADF top cover (4 of 4)	44
Figure 1-65	Remove the ADF core (1 of 5)	45
Figure 1-66	Remove the ADF core (2 of 5)	46
Figure 1-67	Remove the ADF core (3 of 5)	46
Figure 1-68	Remove the ADF core (4 of 5)	47
Figure 1-69	Remove the ADF core (5 of 5)	47
Figure 1-70	Remove the ADF tray (1 of 4)	48
Figure 1-71	Remove the ADF tray (2 of 4)	49
Figure 1-72	Remove the ADF tray (3 of 4)	49
Figure 1-73	Remove the ADF tray (4 of 4)	50
Figure 1-74	Remove the ADF base or scanner assembly lid (1 of 3)	51
Figure 1-75	Remove the ADF base or scanner assembly lid (2 of 3)	52
Figure 1-76	Remove the ADF base or scanner assembly lid (3 of 3)	52
Figure 1-77	Remove the scanner assembly bezel (1 of 2; HP LaserJet Professional M1130 MFP series)	53

Figure 1-78	Remove the scanner assembly bezel (2 of 2; HP LaserJet Professional M1210 MFP series)	54
Figure 1-79	Remove the scanner assembly latch	55
Figure 1-80	Remove the CIS scanner-carriage assembly (1 of 2)	56
Figure 1-81	Remove the CIS scanner-carriage assembly (2 of 2)	57
Figure 1-82	Remove the CIS scanner motor, gears, and scanner light bar (1 of 4)	58
Figure 1-83	Remove the CIS scanner motor, gears, and scanner light bar (2 of 4)	59
Figure 1-84	Remove the CIS scanner motor, gears, and scanner light bar (3 of 4)	59
Figure 1-85	Remove the CIS scanner motor, gears, and scanner light bar (4 of 4)	60
Figure 1-86	Remove the CIS scanner motor and gears	61
Figure 1-87	Remove the control-panel assembly (1 of 5; HP LaserJet Professional M1130 MFP series)	62
Figure 1-88	Remove the control-panel assembly (2 of 5; HP LaserJet Professional M1210 MFP series)	62
Figure 1-89	Remove the control-panel assembly (3 of 5)	63
Figure 1-90	Remove the control-panel assembly (4 of 5)	63
Figure 1-91	Remove the control-panel assembly (5 of 5)	64
Figure 1-92	Reinstall the control-panel assembly (1 of 2)	64
Figure 1-93	Reinstall the control-panel assembly (2 of 2)	65
Figure 1-94	Remove the power switch assembly (1 of 3)	66
Figure 1-95	Remove the power switch assembly (2 of 3)	66
Figure 1-96	Remove the power switch assembly (3 of 3)	67
Figure 1-97	Remove the formatter PCA (1 of 4; HP LaserJet Professional M1130 MFP series)	68
Figure 1-98	Remove the formatter PCA (2 of 4; HP LaserJet Professional M1210 MFP series)	68
Figure 1-99	Remove the formatter PCA (3 of 4; HP LaserJet Professional M1130 MFP series)	69
Figure 1-100	Remove the formatter PCA (4 of 4; HP LaserJet Professional M1210 MFP series)	69
Figure 1-101	Remove the Fax PCA	70
Figure 1-102	Remove the laser/scanner assembly (1 of 3)	71
Figure 1-103	Remove the laser/scanner assembly (2 of 3)	72
Figure 1-104	Remove the laser/scanner assembly (3 of 3)	72
Figure 1-105	Reinstall the laser/scanner assembly	73
Figure 1-106	Remove the laser/scanner assembly (1 of 7)	74
Figure 1-107	Remove the laser/scanner assembly (2 of 7)	75
Figure 1-108	Remove the main motor (3 of 7)	75
Figure 1-109	Remove the main motor (4 of 7)	76
Figure 1-110	Remove the main motor (5 of 7)	76
Figure 1-111	Remove the main motor (6 of 7)	77
Figure 1-112	Remove the main motor (7 of 7)	77
Figure 1-113	Main-motor drive belt: correctly installed	78
Figure 1-114	Main-motor drive belt: incorrectly installed	78
Figure 1-115	Remove the fuser (1 of 6)	79
Figure 1-116	Remove the fuser (2 of 6)	80
Figure 1-117	Remove the fuser (3 of 6)	80
Figure 1-118	Remove the fuser (4 of 6)	81

Figure 1-119	Remove the fuser (5 of 6)	81
Figure 1-120	Remove the fuser (6 of 6)	82
Figure 1-121	Reinstall the fuser; correct wire harness installation	83
Figure 1-122	Reinstall the fuser; incorrect wire harness installation	83
Figure 1-123	Remove the pickup assembly (1 of 6)	84
Figure 1-124	Remove the pickup assembly (2 of 6)	85
Figure 1-125	Remove the pickup assembly (3 of 6)	85
Figure 1-126	Remove the pickup assembly (4 of 6)	86
Figure 1-127	Remove the pickup assembly (5 of 6)	86
Figure 1-128	Remove the pickup assembly (6 of 6)	87
Figure 1-129	Reinstall the pickup assembly (1 of 4; correct ground spring position)	88
Figure 1-130	Reinstall the pickup assembly (2 of 4; incorrect ground spring position)	88
Figure 1-131	Reinstall the pickup assembly (3 of 4; lift plate in raised position)	89
Figure 1-132	Reinstall the pickup assembly (4 of 4; lift plate in lowered position)	89
Figure 1-133	Remove the pickup solenoid (1 of 6)	90
Figure 1-134	Remove the pickup solenoid (2 of 6)	91
Figure 1-135	Remove the pickup solenoid (3 of 6)	91
Figure 1-136	Remove the pickup solenoid (4 of 6)	92
Figure 1-137	Remove the pickup solenoid (5 of 6)	92
Figure 1-138	Remove the pickup solenoid (6 of 6)	93
Figure 1-139	Remove the engine controller PCA (1 of 8)	94
Figure 1-140	Remove the engine controller PCA (2 of 8)	95
Figure 1-141	Remove the engine controller PCA (3 of 8)	95
Figure 1-142	Remove the engine controller PCA (4 of 8)	96
Figure 1-143	Remove the engine controller PCA (5 of 8)	96
Figure 1-144	Remove the engine controller PCA (6 of 8)	97
Figure 1-145	Remove the engine controller PCA (7 of 8)	97
Figure 1-146	Remove the engine controller PCA (8 of 8)	98
Figure 1-147	Reinstall the engine controller PCA (1 of 4)	98
Figure 1-148	Reinstall the engine controller PCA (2 of 4)	99
Figure 1-149	Reinstall the engine controller PCA (3 of 4)	99
Figure 1-150	Reinstall the engine controller PCA (4 of 4)	100
Figure 2-1	Sample engine test page	107
Figure 2-2	Engine controller PCA connectors	111
Figure 2-3	Locations of major components; HP LaserJet Professional M1130 MFP series	112
Figure 2-4	Locations of major components; HP LaserJet Professional M1210 MFP series	113
Figure 2-5	Cross section view	114
Figure 2-6	General timing diagram	115
Figure 2-7	Circuit diagram	116
Figure 3-1	Locations of major components; HP LaserJet Professional M1130 MFP series	184
Figure 3-2	Locations of major components; HP LaserJet Professional M1210 MFP series	185
Figure 3-3	Product base	210
Figure 3-4	Internal assemblies (1 of 3)	212
Figure 3-5	Internal assemblies (2 of 3)	214

Figure 3-6 Internal assemblies (3 of 3)	216
Figure 3-7 PCAs	218