

service

For the complete service manual,
please visit www.LaserPros.com



i n v e n t

A large, white HP LaserJet printer with a scanner/ADF (Automatic Document Feeder) on top. The scanner lid is open. The printer is positioned in an office setting with windows in the background.

Scanner/ADF for the
hp LaserJet
9000mfp/9000Lmfp/9040mfp/9050mfp
and
hp color LaserJet 9500mfp

Scanner/ADF service manual for the HP LaserJet 9000mfp/9000Lmfp/9040mfp/ 9050mfp/9500mfp

service _____

This manual is used in conjunction with the
HP LaserJet 9000 and 9050 Printer Service Manual, and the
HP Color LaserJet 9500/9500mfp Print Engine Service Manual.

© 2004 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Part number: C8549-90955

Edition 1, 9/2004

The information contained in this document is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademark Credits

Adobe® and PostScript® are trademarks of Adobe Systems Incorporated.

Microsoft®, MS-DOS®, and Windows® are U.S. registered trademarks of Microsoft Corporation.

TrueType™ is a U.S. trademark of Apple Computer, Inc.

UNIX® is a registered trademark of The Open Group.

Energy Star® is a U.S. registered service mark of the United States Environmental Protection Agency.



Table of contents

List of tables

List of figures

1

MFP requirements

Space requirements HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp	18
Space requirements HP LJ 9500mfp	20

2

MFP information

MFP specifications	22
MFP features	22
Identification	22
Specifications	23
Interface connections	26
Regulatory information	28
Service approach	28
Parts and supplies	28
Warranty	28
Limited warranty for the print cartridge	28
Service and support	29

3

MFP configuration

Control panel	32
Control panel layout HP LJ 9000mfp/9000Lmfp	32
Touch-screen graphical display layout HP LJ 9000mfp/9000Lmfp	33
Control panel layout HP LJ 9040mfp/9050mfp/9500mfp	34
Touch-screen display layout HP LJ 9040mfp/9050mfp/9500mfp	35
Settings and defaults	36
Setting the display language	36
Setting tray registration	36
E-mail settings	38
FAX settings (HP LaserJet 9040mfp/9050mfp/9500mfp)	39
Color copy settings (HP LaserJet 9500mfp)	40
Control panel menus (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	41
Menu map (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	41
Using a menu map (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	41
Retrieve job menu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	42
If you select PRINT, the printer prompts you to specify the number of copies to print (1 to 32,000)	42
Information menu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	42
Paper handling menu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	43
Configure device menu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	45
Printing submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	45
PCL submenu	47

Print-quality submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	48
System setup submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	50
I/O submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	52
EIO X Jetdirect submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	53
Resets submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	57
Diagnostics menu (HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	58
Service menu (HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	58
Control panel menus (HP CLJ 9500mfp)	59
Menu map (CLJ 9500mfp)	59
Using a menu map (CLJ 9500mfp)	59
Retrieve job menu (CLJ 9500mfp)	60
Information menu (CLJ 9500mfp)	61
Paper handling menu (CLJ 9500mfp)	62
Configure device menu (CLJ 9500mfp)	64
Printing submenu (CLJ 9500mfp)	68
PCL submenu (CLJ 9500mfp)	70
Print quality submenu (CLJ 9500mfp)	72
System setup submenu (CLJ 9500mfp)	74
I/O submenu (CLJ 9500mfp)	77
Resets submenu (CLJ 9500mfp)	81
Diagnostics menu (CLJ 9500mfp)	82
Service menu (CLJ 9500mfp)	85
Installing firmware updates	87
Downloading the new firmware to the MFP	87
Remote firmware update through a local Windows port	88
Remote firmware update through a Windows network	89
Remote firmware update for UNIX systems	89
Remote firmware update by using FTP on a direct network connection	90
Remote firmware update by using FTP through a browser	91
Remote firmware update using the HP LaserJet utility (Mac OS 8.6 and 9.x only)	92
Remote firmware update using the LPR command	93
Using HP Web Jetadmin to download the firmware to the MFP	93
MFP messages during firmware update	94
Troubleshooting a firmware update	95

4 MFP maintenance

Cleaning the MFP and accessories	98
General cleaning	98
ADF cleaning	99
Glass cleaning	105

5 Theory of operation

Differences in MFPs	108
Mechanical structure	110
Motors and fans	112
Basic block diagram	114
Basic system configuration	115
Scanner unit systems	115
Scan mode	116
Power supply assembly	117
PowerSave (sleep) mode (HP LJ 9000mfp/9000Lmfp)	119
Sleep mode (HP LJ 9040mfp/9050mfp/9500mfp)	120
Low-voltage power supply circuit	122
Scanner controller circuit	124

Flatbed operation	125
Flatbed document exposure control	125
Flatbed optical drive control	126
Flatbed optical unit operation	127
Flatbed document size detection	128
ADF operation	131
ADF document exposure control	131
ADF document feed control	132
ADF document size detection	134
ADF feeder sensors	135
ADF document skew detection	136
Scanned data flow	137
Copy processor	138
Scanning process control signals	139
Typical scanning process flow	139
Copy processor LEDs (HP LJ 9000mfp/9000Lmfp)	140
Copy processor LEDs (HP LJ 9040mfp/9050mfp/9500mfp)	142

6 Removal and replacement

Introduction	147
Removal and replacement strategy	147
Electrostatic discharge	147
Required tools	147
External covers	148
Control panel (HP LJ 9000mfp/9000Lmfp)	148
Control panel (HP LJ 9040mfp/9050mfp/9500mfp)	150
ADF feeder cover	151
ADF feeder cover handle	153
ADF back cover	154
ADF front cover	155
Lower delivery roller cover	156
White board cover	157
Copy processor/connect board	158
Flatbed rail cover	159
Flatbed back cover	160
Flatbed right cover	161
Flatbed left cover	162
Flatbed upper front cover	163
Flatbed lower front cover	164
ADF base cover assembly	165
Glass	170
Internal	172
ADF main assembly	172
ADF optical assembly	177
ADF scanning lamp (HP LJ 9000mfp/9000Lmfp)	184
ADF shading filter	187
Flatbed optical unit	188
Flatbed scanning lamp (HP LJ 9000mfp/9000Lmfp)	191
Switch and solenoids	193
ADF feeder cover detection switch	193
Weight solenoid	194
Shutter solenoid	195

Motors and fans	196
Pickup motor	196
Delivery motor	198
Flatbed motor	200
Power supply assembly	202
ADF fan assembly	205
Flatbed fan assembly	206
PCB assemblies	207
ADF analog processor PCB (HP LJ 9000mfp/9000Lmfp only)	207
ADF inverter PCB (HP LJ 9000mfp/9000Lmfp only)	208
ADF intermediate PCB	209
ADF width detection sensor assembly	210
Flatbed inverter PCB (HP LJ 9000mfp/9000Lmfp only)	211
Flatbed intermediate PCB	212
Scanner controller board	214
Intermediate PCB assembly	217
Power supply assembly	219
Rollers and belts	222
Pickup roller (D-roller)	222
Pickup roller assembly	223
Feed roller assembly	224
Lower registration roller assembly	225
Lower delivery roller	231
Upper delivery roller assembly	232
Separation belt assembly	233
Separation belts	236
Scan engine	238

7 Troubleshooting

Troubleshooting process	245
Preliminary operating checks	246
Power on	247
Power-on defects	247
Malfunction troubleshooting	248
Troubleshooting with control panel messages	249
Control panel display	249
Event log page	249
Control panel messages	252
MFP message tables	253
Alphabetic error messages	253
Numeric error messages	255
Troubleshooting with the copy processor	260
HP LJ 9000mfp/9000Lmfp	260
HP LJ 9040mfp/9050mfp/9500mfp	262
User- and service-level diagnostics	264
Diagnostics	264
Service test (HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	265
Service-level diagnostics	266
Service menu	266
Calibrations	268
Control-panel touch screen calibration (HP LJ 9000mfp/9000Lmfp)	268
Control-panel touch screen calibration (HP LJ 9040mfp/9050mfp/9500mfp)	270
Scanner/ADF calibration simplified	271
ADF calibrations	274
Glass calibrations	282

Measurement and adjustment	287
ADF unit height adjustment	287
ADF skew adjustment	289
ADF width sensor adjustment	291
Weight solenoid stroke adjustment	292
Jam troubleshooting	293
Jams	293
Evaluating the information pages	295
Configuration page	295
Jetdirect page	297
Supplies status page	298
Usage page	299
File directory page	300
Image-formation troubleshooting	301
Copy-image defects	302
Scanner controller PCB	309
Connector locations	310
Electrical structure	311
Wiring diagrams	312

8 Parts and diagrams

Introduction	316
Ordering parts	316
Consumables (HP LJ 9000mfp/9000Lmfp9040mfp/9050mfp)	317
Consumables (HP CLJ 9500mfp)	322
Common hardware	326
Illustrations and parts lists	327
MFP system assembly	328
External panels and covers	329
Flatbed scanner assembly	332
Flatbed optical assembly	337
ADF scanner assembly	339
Paper pickup assembly	342
ADF main assembly	347
ADF optical assembly	350
PCB assemblies	352
Alphabetical parts list	353
Numerical parts list	358

Index

List of tables

Table 1. Electrical specifications	23
Table 2. Environmental specifications HP LJ 9000mfp/9000Lmfp	24
Table 3. Environmental specifications HP LJ 9040mfp/9050mfp	24
Table 4. Environmental specifications HP LJ 9500mfp	24
Table 5. Noise level specifications HP LJ 9000mfp/9000Lmfp	24
Table 6. Noise level specifications HP LJ 9040mfp/9050mfp	24
Table 7. Noise level specifications HP LJ 9500mfp	25
Table 8. Skew specifications	25
Table 9. Control panel features, and key functions	32
Table 10. Touch-screen graphical display features and functions	33
Table 11. Touch-screen graphical display features and functions	35
Table 12. Color copy settings (HP LaserJet 9500mfp)	40
Table 13. Information menu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	42
Table 14. Information menu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	43
Table 15. Printing submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	45
Table 16. PCL submenu (LJ9000mfp/9000Lmfp/9040mfp/9050mfp)	47
Table 17. print-quality submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	48
Table 18. System setup submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	50
Table 19. I/O timeout submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	52
Table 20. Parallel input submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	52
Table 21. EIO X Jetdirect submenu (LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	53
Table 22. Diagnostics menu (HP LJ 9000mfp/9000Lmfp9040mfp/9050mfp)	58
Table 23. Service menu (HP LJ 9000mfp/9000Lmfp9040mfp/9050mfp)	58
Table 24. Retrieve job menu (CLJ 9500mfp)	60
Table 25. Information menu (CLJ 9500mfp)	61
Table 26. Paper handling menu settings (CLJ 9500mfp)	62
Table 27. Originals submenu (CLJ 9500mfp)	64
Table 28. Copying submenu (CLJ 9500mfp)	65
Table 29. Enhancement submenu (CLJ 9500mfp)	66
Table 30. Sending submenu (CLJ 9500mfp)	66
Table 31. E-mail submenu (CLJ 9500mfp)	67
Table 32. Printing submenu (CLJ 9500mfp)	68
Table 33. PCL submenu (CLJ 9500mfp)	70
Table 34. Print quality submenu (CLJ 9500mfp)	72
Table 35. System setup submenu (CLJ 9500mfp)	74
Table 36. I/O submenu (CLJ 9500mfp)	77
Table 37. EIO submenu (CLJ 9500mfp)	78
Table 38. Resets submenu (CLJ 9500mfp)	81
Table 39. Diagnostics menu (CLJ 9500mfp)	82
Table 40. Service menu (CLJ 9500mfp)	85
Table 41. MFP messages during firmware update	94
Table 42. Troubleshooting a firmware update (1 of 2)	95
Table 43. Troubleshooting a firmware update (2 of 2)	95
Table 44. Differences between the LJ 9000mfp/9000Lmfp and the LJ 9040mfp/9050mfp	108
Table 45. Differences between the LJ 9000mfp/9000Lmfp and the CLJ 9500mfp	108
Table 46. Differences between the LJ 9040mfp/9050mfp and the CLJ 9500mfp	109
Table 47. Mechanical structure	110
Table 48. Mechanical structure	111
Table 49. Motors and fans	113

Table 50. Electrical specifications	117
Table 51. Powersave mode (HP LJ 9000mfp/9000Lmfp)	119
Table 52. System behavior in sleep mode	120
Table 53. Copy processor LEDs (HP LJ 9000mfp/9000Lmfp)	140
Table 54. Copy processor LEDs (HP LJ 9040mfp/9050mfp/9500mfp)	142
Table 55. Primary steps for troubleshooting	245
Table 56. Power-on defects or blank display	247
Table 57. Malfunction troubleshooting	248
Table 58. Alphabetic error messages	253
Table 59. Numeric error messages	255
Table 60. Troubleshooting copy processor board LEDs	261
Table 61. Copy processor LEDs (HP LJ 9040mfp/9050mfp/9500mfp)	262
Table 62. Replaced components and required calibrations	268
Table 63. Scanner calibration values	273
Table 64. ADF motor speed calibration values	286
Table 65. General jam troubleshooting	293
Table 66. General jam troubleshooting	294
Table 67. Image quality checks	301
Table 68. ADF simplex (front side)	303
Table 69. ADF duplex (second side)	304
Table 70. Flatbed glass	306
Table 71. All scan locations	307
Table 72. Sensors	311
Table 73. Consumables, supplies, accessories, FRUs, and documentation	317
Table 74. Kits and supplies	322
Table 75. Accessories, exchange parts, and documentation	322
Table 76. Hardware table	326
Table 77. Common torque values	326
Table 78. MFP system assembly	328
Table 79. External panels and covers	331
Table 80. Flatbed scanner assembly	335
Table 81. Flatbed optical assembly	338
Table 82. ADF scanner assembly	340
Table 83. Paper pickup assembly	344
Table 84. ADF main assembly	348
Table 85. ADF optical assembly	351
Table 86. PCB assemblies	352
Table 87. Alphabetical parts list	353
Table 88. Numerical parts list	358

List of figures

Figure 1. MFP space requirements with a finishing device (HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	18
Figure 2. MFP space requirements with a finishing device (HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp)	19
Figure 3. MFP space requirements with a finishing device (HP LJ 9500mfp) (top and front view)	20
Figure 4. Sample identification label from an HP LaserJet 9000mfp/9000Lmfp	22
Figure 5. Interface connections HP LJ 9000mfp/9000Lmfp	26
Figure 6. Interface connections HP LJ 9040mfp/9050lmp	26
Figure 7. Interface connections HP LJ 9500mfp	27
Figure 8. Control panel layout HP LJ 9000mfp/9000Lmfp	32
Figure 9. Touch-screen graphical display layout HP LJ 9000mfp/9000Lmfp	33
Figure 10. Control panel layout HP LJ 9040mfp/9050mfp/9500mfp	34
Figure 11. Touch-screen graphical display layout HP LJ 9040mfp/9050mfp/9500mfp	35
Figure 12. Registration page (HP LJ 9000 Series printer shown) (1 of 2)	37
Figure 13. Registration page (HP LJ 9000 Series printer shown) (2 of 2)	37
Figure 14. ADF delivery system (1 of 5)	99
Figure 15. ADF delivery system (2 of 5)	99
Figure 16. ADF delivery system (3 of 5)	100
Figure 17. ADF delivery system (4 of 5)	100
Figure 18. ADF delivery system (5 of 5)	100
Figure 19. Upper ADF glass strip (1 of 4)	101
Figure 20. Upper ADF glass strip (2 of 4)	101
Figure 21. Upper ADF glass strip (3 of 4)	102
Figure 22. Upper ADF glass strip (4 of 4)	102
Figure 23. ADF rollers (1 of 6)	103
Figure 24. ADF rollers (2 of 6)	103
Figure 25. ADF rollers (3 of 6)	103
Figure 26. ADF rollers (4 of 6)	104
Figure 27. ADF rollers (5 of 6)	104
Figure 28. ADF rollers (6 of 6)	104
Figure 29. Mechanical structure (1 of 2)	110
Figure 30. Mechanical structure (2 of 2)	111
Figure 31. Motors and fans	112
Figure 32. Basic block diagram for the HP LJ 9000mfp/9000Lmfp	114
Figure 33. Basic block diagram for the HP LJ 9040mfp/9050mfp and the HP CLJ 9500mfp	114
Figure 34. Basic system configuration	116
Figure 35. Power supply assembly	118
Figure 36. HP LJ 9000mfp/9000Lmfp	119
Figure 37. Low-voltage power supply circuit	122
Figure 38. Printer power supply	123
Figure 39. Scanner controller circuit	124
Figure 40. Flatbed document exposure control	125
Figure 41. Flatbed optical drive control	126
Figure 42. Flatbed optical unit operation	127
Figure 43. Flatbed document size detection	128
Figure 44. Functions operation	129
Figure 45. ADF angle detection	130
Figure 46. ADF document exposure control	131
Figure 47. ADF document feed control	132
Figure 48. ADF document size detection	134
Figure 49. ADF feeder sensors	135

Figure 50. Document skew jam	136
Figure 51. Scanned data flow.	137
Figure 52. Example of a copy processor (HP LJ 9000mfp/9000Lmfp shown)	138
Figure 53. Copy processor LEDs (HP LJ 9000mfp/9000Lmfp)	140
Figure 54. Copy processor LEDs (HP LJ 9040mfp/9050mfp/9500mfp)	142
Figure 55. Control panel (HP LJ 9000mfp/9000Lmfp) (1 of 3)	148
Figure 56. Control panel (HP LJ 9000mfp/9000Lmfp) (2 of 3)	148
Figure 57. Control panel (HP LJ 9000mfp/9000Lmfp) (3 of 3)	149
Figure 58. Control panel (HP LJ 9040mfp/9050mfp/9500mfp) (1 of 3)	150
Figure 59. Control panel (HP LJ 9040mfp/9050mfp/9500mfp) (2 of 3)	150
Figure 60. ADF feeder cover (1 of 3)	151
Figure 61. ADF feeder cover (2 of 3)	151
Figure 62. ADF feeder cover (3 of 3)	152
Figure 63. ADF feeder cover handle (1 of 2)	153
Figure 64. ADF feeder cover handle (2 of 2)	153
Figure 65. ADF back cover (1 of 2)	154
Figure 66. ADF back cover (2 of 2)	154
Figure 67. ADF front cover	155
Figure 68. Delivery roller cover.	156
Figure 69. White board cover	157
Figure 70. Copy processor board (HP LJ 9000mfp/9000Lmfp shown)	158
Figure 71. Flatbed rail cover.	159
Figure 72. Flatbed back cover (1 of 2)	160
Figure 73. Flatbed back cover (2 of 2)	160
Figure 74. Flatbed right cover (1 of 2)	161
Figure 75. Flatbed right cover (2 of 2)	161
Figure 76. Flatbed left cover (1 of 2)	162
Figure 77. Flatbed left cover (2 of 2)	162
Figure 78. Flatbed upper front cover	163
Figure 79. Flatbed lower front cover.	164
Figure 80. ADF base cover assembly (1 of 9)	165
Figure 81. ADF base cover assembly (2 of 9)	165
Figure 82. ADF base cover assembly (3 of 9)	166
Figure 83. ADF base cover assembly (4 of 9)	166
Figure 84. ADF base cover assembly (5 of 9)	167
Figure 85. ADF base cover assembly (6 of 9)	167
Figure 86. ADF base cover assembly (7 of 9)	168
Figure 87. ADF base cover assembly (8 of 9)	168
Figure 88. ADF base cover assembly (9 of 9)	169
Figure 89. Glass (1 of 2).	170
Figure 90. Glass (2 of 2).	170
Figure 91. Register the glass	171
Figure 92. ADF main assembly (1 of 8)	172
Figure 93. ADF main assembly (2 of 8)	173
Figure 94. ADF optical unit (3 of 8).	173
Figure 95. ADF main assembly (4 of 8)	174
Figure 96. ADF main assembly (5 of 8)	174
Figure 97. ADF main assembly (6 of 8)	175
Figure 98. ADF main assembly (7 of 8)	175
Figure 99. ADF main assembly (8 of 8)	176
Figure 100. Remove the ADF optical assembly (1 of 13).	177
Figure 101. Remove the ADF optical assembly (2 of 13).	177
Figure 102. Remove the ADF optical assembly (3 of 13).	178
Figure 103. Remove the ADF optical assembly (4 of 13).	178
Figure 104. Remove the ADF optical assembly (5 of 13).	179
Figure 105. Remove the ADF optical assembly (6 of 13).	179
Figure 106. Remove the ADF optical assembly (7 of 13).	180
Figure 107. Remove the ADF optical assembly (8 of 13).	180
Figure 108. Remove the ADF optical assembly (9 of 13).	181

Figure 109. Remove the ADF optical assembly (10 of 13)	181
Figure 110. Remove the ADF optical assembly (11 of 13)	182
Figure 111. Remove the ADF optical assembly (12 of 13)	182
Figure 112. Remove the ADF optical assembly (13 of 13)	183
Figure 113. ADF scanning lamp (1 of 5)	184
Figure 114. ADF scanning lamp (2 of 5)	184
Figure 115. ADF scanning lamp (3 of 5)	185
Figure 116. ADF scanning lamp (4 of 5)	185
Figure 117. ADF scanning lamp (5 of 5)	186
Figure 118. ADF shading filter (1 of 2)	187
Figure 119. ADF shading filter (2 of 2)	187
Figure 120. Flatbed optical unit (1 of 6)	188
Figure 121. Flatbed optical unit (2 of 6)	188
Figure 122. Flatbed optical unit (3 of 6)	189
Figure 123. Flatbed optical unit (4 of 6)	189
Figure 124. Flatbed optical unit (5 of 6)	190
Figure 125. Flatbed optical unit (6 of 6)	190
Figure 126. Flatbed scanning lamp (1 of 3)	191
Figure 127. Flatbed scanning lamp (2 of 3)	191
Figure 128. Flatbed scanning lamp (3 of 3)	192
Figure 129. ADF feeder cover detection switch	193
Figure 130. Weight solenoid (1 of 2)	194
Figure 131. Weight solenoid (2 of 2)	194
Figure 132. Shutter solenoid	195
Figure 133. Pickup motor (1 of 2)	196
Figure 134. Pickup motor (2 of 2)	196
Figure 135. Delivery motor (1 of 2)	198
Figure 136. Delivery motor (2 of 2)	198
Figure 137. Flatbed motor (1 of 3)	200
Figure 138. Flatbed motor (2 of 3)	200
Figure 139. Flatbed motor (3 of 3)	201
Figure 140. Power supply assembly (1 of 6)	202
Figure 141. Power supply assembly (2 of 6)	202
Figure 142. Power supply assembly (3 of 6)	203
Figure 143. Power supply assembly (4 of 6)	203
Figure 144. Power supply assembly (5 of 6)	204
Figure 145. Power supply assembly (6 of 6)	204
Figure 146. ADF fan	205
Figure 147. Flatbed fan assembly	206
Figure 148. ADF analog processor PCB	207
Figure 149. ADF inverter PCB (1 of 2)	208
Figure 150. ADF inverter PCB (2 of 2)	208
Figure 151. ADF intermediate PCB	209
Figure 152. ADF width detection sensor assembly	210
Figure 153. Flatbed inverter PCB (1 of 2)	211
Figure 154. Flatbed intermediate PCB (1 of 2)	212
Figure 155. Flatbed intermediate PCB (2 of 2)	213
Figure 156. Scanner controller board (1 of 5)	214
Figure 157. Scanner controller board (2 of 5)	214
Figure 158. Scanner controller board (3 of 5)	215
Figure 159. Scanner controller board (4 of 5)	215
Figure 160. Scanner controller board (5 of 5)	216
Figure 161. Intermediate PCB assembly	217
Figure 162. Reinstalling the ADF optic assembly (1 of 2)	217
Figure 163. Reinstalling the ADF optic assembly (2 of 2)	218
Figure 164. Power supply assembly (1 of 6)	219
Figure 165. Power supply assembly (2 of 6)	219
Figure 166. Power supply assembly (3 of 6)	220
Figure 167. Power supply assembly (4 of 6)	220

Figure 168. Power supply assembly (5 of 6)	221
Figure 169. Power supply assembly (6 of 6)	221
Figure 170. Pickup roller.	222
Figure 171. Pickup roller assembly	223
Figure 172. Feed roller assembly	224
Figure 173. Lower registration roller assembly (1 of 10)	225
Figure 174. Lower registration roller assembly (2 of 10)	226
Figure 175. Lower registration roller assembly (3 of 10)	227
Figure 176. Lower registration roller assembly (4 of 10)	227
Figure 177. Lower registration roller assembly (5 of 10)	228
Figure 178. Lower registration roller assembly (6 of 10)	228
Figure 179. Lower registration roller assembly (7 of 10)	229
Figure 180. Lower registration roller assembly (8 of 10)	229
Figure 181. Lower registration roller assembly (9 of 10)	230
Figure 182. Lower registration roller assembly (10 of 10)	230
Figure 183. Lower delivery roller (1 of 2)	231
Figure 184. Lower delivery roller (2 of 2)	231
Figure 185. Upper delivery roller	232
Figure 186. Separation belt assembly (1 of 6)	233
Figure 187. Separation belt assembly (2 of 6)	233
Figure 188. Separation belt assembly (3 of 6)	234
Figure 189. Separation belt assembly (4 of 6)	234
Figure 190. Separation belt assembly (5 of 6)	235
Figure 191. Separation belt assembly (6 of 6)	235
Figure 192. Separation belts (1 of 3)	236
Figure 193. Separation belts (2 of 3)	236
Figure 194. Separation belts (3 of 3)	237
Figure 195. Scan engine (HP LJ 9000mfp/9040mfp/9050mfp shown) (1 of 7)	238
Figure 196. Scan engine (HP LJ 9000/9040mfp/9050mfp shown) (2 of 7)	239
Figure 197. Scan engine (HP LJ 9000/9040mfp/9050mfp shown) (3 of 7)	239
Figure 198. Scan engine (HP LJ 9000/9040mfp/9050mfp shown) (4 of 7)	240
Figure 199. Scan engine (HP LJ 9000/9040mfp/9050mfp shown) (5 of 7)	240
Figure 200. Scan engine (HP LJ 9000/9040mfp/9050mfp shown) (6 of 7)	241
Figure 201. Scan engine (HP LJ 9000/9040mfp/9050mfp shown) (7 of 7)	241
Figure 202. Sample event log page (HP LJ 9000mfp/9000Lmfp shown)	250
Figure 203. Example of events on the event log	251
Figure 204. Copy processor board LEDs	260
Figure 205. Copy processor LEDs (HP LJ 9040mfp/9050mfp/9500mfp)	262
Figure 206. Calibrate the touch screen (HP LaserJet 9000mfp/9000Lmfp) (1 of 3)	268
Figure 207. Calibrate the touch screen (HP LaserJet 9000mfp/9000Lmfp) (2 of 3)	269
Figure 208. Calibrate the touch screen (HP LaserJet 9000mfp/9000Lmfp) (3 of 3)	269
Figure 209. Scanner/ADF test page	271
Figure 210. Control-panel up and down arrows	272
Figure 211. Left side front calibration (1 of 4)	274
Figure 212. Left side front calibration (2 of 4)	275
Figure 213. Left side front calibration (3 of 4)	275
Figure 214. Left side front calibration (4 of 4)	276
Figure 215. ADF motor speed calibration (1 of 2)	285
Figure 216. ADF motor speed calibration (1 of 2)	285
Figure 217. ADF unit height adjustment (1 of 2)	287
Figure 218. ADF unit height adjustment (2 of 2)	288
Figure 219. ADF skew adjustment (1 of 3)	289
Figure 220. ADF skew adjustment (2 of 3)	290
Figure 221. ADF skew adjustment (3 of 3)	290
Figure 222. Weight solenoid stroke adjustment	292
Figure 223. Sample configuration page (HP LJ 9000mfp/9000Lmfp shown)	296
Figure 224. Sample Jetdirect page (HP LJ 9000mfp/9000Lmfp shown)	297
Figure 225. Sample supplies status page (HP LJ 9000mfp/9000Lmfp shown)	298
Figure 226. Sample usage page (HP LJ 9000mfp/9000Lmfp shown)	299

Figure 227. Sample file directory page (HP LJ 9000mfp/9000Lmfp shown)	300
Figure 228. Scanner controller PCB (HP LaserJet 9000mfp/9000Lmfp shown)	309
Figure 229. Connector locations	310
Figure 230. Circuit diagram (1 of 2)	312
Figure 231. Circuit diagram (2 of 2)	313
Figure 232. MFP system assembly (HP LJ 9000mfp/9000Lmfp/9040mfp/9050mfp shown)	328
Figure 233. External panels and covers (1 of 2)	329
Figure 234. External panels and covers (2 of 2)	330
Figure 235. Flatbed scanner assembly (1 of 3)	332
Figure 236. Flatbed scanner assembly (2 of 3)	333
Figure 237. Flatbed scanner assembly (3 of 3)	334
Figure 238. Flatbed optical assembly	337
Figure 239. ADF scanner assembly	339
Figure 240. Paper pickup assembly (1 of 2)	342
Figure 241. Paper pickup assembly (2 of 2)	343
Figure 242. ADF main assembly	347
Figure 243. ADF optical assembly	350
Figure 244. PCB assemblies	352

For the complete service manual,
please visit www.LaserPros.com