



Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark™ W812

4022-XXX

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***
- ***Manuals Menu***

LEXMARK™

*Lexmark and Lexmark with diamond design are
trademarks of Lexmark International, Inc., registered
in the United States and/or other countries.*

Edition: September 7, 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law:
LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark Lexmark with diamond design, and MarkNet are trademarks of Lexmark International, Inc., registered in the United States and/or other countries. Optra Forms is a trademark of Lexmark International, Inc.

PostScript is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

**© Copyright Lexmark International, Inc. 2002,2004.
All rights reserved.**

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550. U.S.A.

U.S.A. P/N 12G9161

Table of Contents

| | |
|--|-------------|
| Laser Notices | ix |
| Safety Information | xvii |
| Preface | xx |
| General Information | 1-1 |
| Maintenance Approach | 1-1 |
| Tools Required | 1-1 |
| Acronyms | 1-2 |
| Preparing for shipping | 1-3 |
| Principles of Operation | 1-4 |
| Overview of Print Process | 1-4 |
| Paper Transfer | 1-8 |
| Generating Print Image | 1-9 |
| Transmission of Driving Power | 1-10 |
| Driving Power Transmission to Paper Feeder | 1-13 |
| Driving Power Transmission to Roll Registration Metal and Rubber | 1-14 |
| Driving Power Transmission to Drum and Transfer Roller | 1-15 |
| Driving Power Transmission to Fuser Assembly | 1-16 |
| Driving Power Transmission to Roll Assembly | 1-17 |
| Printer Component Function | 1-17 |
| 250-Sheet Paper Tray/Cassette Assembly | 1-17 |
| Paper Pick/Feed | 1-19 |
| Fuser | 1-24 |
| Frame and Drive | 1-27 |
| Xerographics | 1-30 |
| Electrical | 1-32 |
| Diagnostic Information | 2-1 |
| Start | 2-1 |
| Operator Panel Messages | 2-1 |
| Status Screen | 2-2 |
| Ready | 2-2 |
| Status Messages | 2-2 |
| User Error Messages | 2-2 |
| Service Messages | 2-2 |
| User Error Messages | 2-3 |
| Service Error Code Table | 2-8 |
| Service Check Table | 2-10 |
| Service Checks Flowchart | 2-11 |
| How to Use the Service Checks Flowchart | 2-11 |

| | |
|--|------------|
| How to Follow a Service Check | 2-11 |
| Notes on Using Service Checks | 2-12 |
| Symptom Service Checks | 2-13 |
| Inoperative Printer Service Check | 2-14 |
| Erratic Printer Operation Service Check | 2-15 |
| Blank, Erratic, or Inoperative Operator Panel Service Check | 2-16 |
| Paper Feed Service Check | 2-17 |
| Print Quality Service Checks | 2-18 |
| Using Diagnostic Test Print | 2-18 |
| Light (Undertoned) Prints Service Check | 2-18 |
| Blank Prints Service Check | 2-20 |
| Black Prints Service Check | 2-21 |
| Vertical Band Deletions Service Check | 2-22 |
| Horizontal Band Deletions Service Check | 2-24 |
| Vertical Streaks Service Check | 2-25 |
| Horizontal Streaks Service Check | 2-26 |
| Spot Deletions Service Check | 2-27 |
| Background Service Check | 2-28 |
| Toner on Back of Print Service Check | 2-29 |
| Skewed Image Service Check | 2-31 |
| Damaged Prints Service Check | 2-32 |
| Unfused Image or Image Easily Rubs Off of Page Service Check | 2-33 |
| Repetitive Marks on Each Page Service Check | 2-34 |
| Lead Edge Registration is Not Correct Service Check | 2-35 |
| Side-to-Side Registration is Not Correct Service Check | 2-36 |
| Electrical Interference | 2-37 |
| Diagnostic Aids | 3-1 |
| Using the Operator Panel Diagnostics Menu | 3-1 |
| Entering Diagnostic Mode | 3-1 |
| Exiting Diagnostic Mode | 3-1 |
| Print Tests | 3-4 |
| Print Quality Pages | 3-6 |
| Hardware Tests | 3-7 |
| LCD Hardware Test | 3-7 |
| Button Test | 3-7 |
| DRAM Memory Test | 3-7 |
| DRAM Error | 3-8 |
| ROM Memory Test | 3-8 |
| Parallel Wrap Test | 3-8 |
| Serial Wrap Test | 3-10 |
| Duplex Tests | 3-12 |
| Duplex Quick Test | 3-12 |
| Duplex Sensor Test | 3-12 |

| | |
|---|------------|
| Input Tray Tests | 3-13 |
| Input Tray Feed Test | 3-13 |
| Base Sensor Test | 3-14 |
| Storage Device Tests | 3-15 |
| Quick Disk Test | 3-15 |
| Disk Test/Clean | 3-15 |
| Flash Test | 3-16 |
| Printer Setup | 3-17 |
| Defaults | 3-17 |
| Setting the Page Count | 3-17 |
| Viewing the Permanent Page Count | 3-17 |
| Serial Number | 3-17 |
| Configuration ID | 3-18 |
| Error Log | 3-19 |
| Viewing the Error Log | 3-19 |
| Clearing the Error Log | 3-20 |
| Configuration Mode | 3-20 |
| Viewing and Resetting the Maintenance Page Count | 3-22 |
| Setting Printer Registration | 3-23 |
| Repair Information | 4-1 |
| Removals | 4-1 |
| Notations in the Removals and Replacement Procedures | 4-1 |
| Front Cover Assembly Removal | 4-3 |
| Left Cover Assembly Removal | 4-4 |
| Rear Cover Removal | 4-5 |
| Right Cover Removal | 4-6 |
| Top Cover Assembly Removal | 4-7 |
| Card Cage Cover Removal | 4-8 |
| Duplex Output Feed Roller Assembly and Clutch Removal | 4-9 |
| Engine Card Removal | 4-10 |
| Fan Removal | 4-11 |
| Fuser Assembly Removal | 4-12 |
| HVPS Removal | 4-13 |
| HVPS Cover Removal | 4-14 |
| Left Cartridge Guide Assembly Removal | 4-15 |
| Lower Duplex Out Guide Assembly Removal | 4-16 |
| LVPS Removal | 4-17 |
| Main Drive Assembly Removal | 4-18 |
| MPF Input Paper Feed Assembly Removal | 4-19 |
| MPF Paper Present Flag Removal | 4-20 |
| MPF Pick Roll Removal | 4-21 |
| MPF Pick Roll Assembly Removal | 4-22 |
| MPF Separator Pad Assembly Removal | 4-23 |

| | |
|---|------------|
| MPF Solenoid Removal | 4-24 |
| MPF Tray Assembly Removal | 4-25 |
| Operator Panel Removal | 4-26 |
| Optional 250-Sheet Pick Roller Removal | 4-27 |
| Optional 500-Sheet Pick Roller Removal | 4-27 |
| Optional 500-Sheet Separator Pad/Lift Plate Assembly Removal | 4-28 |
| Paper Size Dial and Card Assembly Removal | 4-30 |
| Paper Tray Lift Plate Removal | 4-31 |
| Printhead Assembly Removal | 4-32 |
| Rear Plate Removal | 4-33 |
| Right Cartridge Guide Assembly Removal | 4-34 |
| RIP Controller Card Removal | 4-34 |
| Toner Sensor Removal | 4-35 |
| Transfer Guide Assembly Removal | 4-36 |
| Transfer Roller Removal | 4-38 |
| Tray 1 Present Switch Removal | 4-39 |
| Tray 1 Pick Roll Removal | 4-40 |
| Tray 1 Pick Roller Assembly Removal | 4-41 |
| Tray 1 Solenoid Removal | 4-42 |
| Upper Duplex Out Guide Assembly Removal | 4-43 |
| Upper Card Cage Cover Removal | 4-44 |
| 250-Sheet Separator Pad Assembly Removal | 4-45 |
| Connector Locations | 5-1 |
| P/J Location Table | 5-1 |
| Harness Route Diagram | 5-10 |
| Printer Wiring Diagrams | 5-15 |
| Wiring Diagram Notations | 5-15 |
| General Wiring Diagram | 5-16 |
| Engine Board <-> LVPS <-> Interlock SW and Fan (1/3) | 5-18 |
| Engine Board <-> LVPS <-> Interlock SW and Fan (1/3) | 5-19 |
| Engine Board <-> LVPS <-> Interlock SW and Fan (3/3) | 5-20 |
| Engine Board <-> Fuser Assembly and LVPS (1/2) | 5-20 |
| Engine Board <-> Printhead and Toner Cartridge (1/3) | 5-22 |
| Engine Board <-> Printhead and Toner Cartridge (3/3) | 5-24 |
| Engine Board <-> HVPS <-> Toner Cartridge (BCR and Mag. Roll), Transfer Roller and Detack Saw (1/3) | 5-24 |
| Engine Board <-> HVPS <-> Toner Cartridge (BCR and Mag. Roll), Transfer Roller and Detack Saw (3/3) | 5-26 |
| Engine Board <-> HVPS <-> Clutch Registration, Sensor Registration and Sensor Option1 (1/1) | 5-26 |
| Engine Board <-> Solenoid T1/MPF, Sensor LP/MPF NP/FDR LP/FDR NP, Clutch Turn, and SW D2X (1/3) | 5-28 |
| Engine Board <-> Solenoid T1/MPF, Sensor LP/MPF NP/FDR LP/FDR NP, Clutch Turn, and SW D2X (3/3) | 5-30 |
| Engine Board <-> LVPS <-> Main Motor (1/1) | 5-31 |
| Engine Board <-> Sensor Toner (1/1) | 5-32 |

| | |
|-------------------------------------|------------|
| Preventive Maintenance | 6-1 |
| Safety Inspection Guide | 6-1 |
| Scheduled Maintenance | 6-1 |
| Parts Catalog | 7-1 |
| Index | I-1 |

For the complete PDF manual
please visit www.LaserPros.com.