



Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

**Lexmark™ W820, X820e, X830e, X832e
Printers**

4025-XXX

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***
- ***Manuals Menu***

LEXMARK™

Lexmark and Lexmark with diamond design are
trademarks of Lexmark International, Inc., registered
in the United States and/or other countries.

Edition: February 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law:
LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

PostScript is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

**© Copyright Lexmark International, Inc. 2001, 2005.
All rights reserved.**

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY

Table of Contents

Notices and Safety Information	ix
Laser Advisory and Caution Labels	ix
Class 1 Laser Statement Label	x
Laser Notices	xi
Safety Information	xiv
Preface	xvii
General Information	1-1
Options	1-1
Maintenance Approach	1-1
Tools Required For Service	1-1
Serial Number Locations	1-2
Symbols Used in this Manual	1-3
Safety Details	1-3
Power Supply and Electrical Components	1-3
Mechanical Components	1-4
Laser Components	1-4
Fuser Components	1-4
Safety Components	1-4
Caution Labels	1-5
Service Flowchart	1-5
Printer Overview	1-6
Schematic Diagram of Printer Operation	1-7
Printer Power	1-9
Power Supply Components	1-11
Electrical Safety Circuits	1-13
Printer Control	1-15
Control Functions of the Machine Control Unit (MCU)	1-24
Mechanical Drive	1-28
Mechanical Drive Components	1-29
Printer Motor Control	1-32
Paper Path	1-33
Paper Path Components	1-35
Paper Path Mechanical Drive	1-36
Paper Path Component Control	1-45

Printhead	1-46
Printhead Components	1-47
Printhead Operation	1-48
Image Resolution	1-49
Printhead Control	1-50
Printhead Safeguards	1-51
Xerographics	1-52
Xerographics Overview	1-53
Xerographic Components	1-54
Xerographic Process During a Print Cycle	1-56
Mechanical Drive for Xerographics	1-61
Xerographic Control	1-61
Image Quality Control - The Toner Sensor	1-62
Fuser Components	1-64
Mechanical Drive for the Fuser Assembly	1-65
Fuser Control	1-67
General Specifications	1-69
Image Registration and Reproduction Tolerances	1-71
Paper Handling Devices	1-72
Face Down Tray (standard)	1-72
Finisher - option	1-72
Mailbox - option	1-72
Duplex - option	1-72
Envelope Feeder - option	1-72
MP Feeder (standard)	1-72
Glossary of Terms, Acronyms, and Abbreviations	1-73
Diagnostic Information	2-1
Start	2-1
Operator Panel Messages	2-1
Status Screens	2-2
Status Messages	2-2
Service Messages	2-2
Attendance Messages	2-2
Accessing Additional Debug Information for Service Errors	2-3
Service Error Code Table	2-3
Symptom Service Check Table	2-7
Attendance Message Table	2-8

Service Checks Flowchart	2-9
How to Use the Service Checks Flowchart	2-9
How to Follow a Service Check	2-9
General Notes on Using Service Checks	2-10
Service Checks	2-11
Error Code Service Checks	2-11
Attendance Messages	2-33
Symptom Service Checks	2-54
Print Quality Service Checks	2-59
Electrical Interference	2-78
Diagnostic Aids	3-1
Analyzing the Test Print	3-1
Using Test Print to Locate a Feed or Paper Transport Problem	3-1
Using Test Print to Analyze a Print Quality Problem	3-1
Using the Operator Panel Diagnostics Menu	3-2
Entering Diagnostic Mode	3-2
Exiting Diagnostic Mode	3-2
Print Tests	3-7
Print Quality Pages	3-8
Hardware Tests	3-9
LCD Hardware Test	3-9
Button Test	3-9
DRAM Memory Test	3-9
DRAM Error	3-10
ROM Memory Test	3-10
Parallel Wrap Test	3-10
Serial Wrap Test	3-12
Duplex Tests	3-14
Duplex Quick Test	3-14
Duplex Sensor Test	3-14
Input Tray Tests	3-15
Input Tray Feed Test	3-15
Input Tray Sensor Test	3-16
Output Bin Tests	3-16
Output Bin Feed Test	3-16
Feed All Bins Test	3-17
Output Bin Sensor Test	3-18

Finisher Tests	3-19
Staple Test	3-19
Finisher Sensor Test	3-19
Base Sensor Test	3-21
Storage Device Tests	3-22
Quick Disk Test	3-22
Disk Test/Clean	3-22
Flash Test	3-23
Printer Setup	3-24
Configuration ID	3-24
Setting the Page Count	3-26
Viewing the Permanent Page Count	3-27
Setting Configuration ID	3-27
EP Setup	3-27
Restoring EP Factory Defaults	3-27
Error Log	3-28
Viewing the Error Log	3-28
Clearing the Error Log	3-29
Configuration Mode	3-29
Viewing and Resetting the Maintenance Page Count	3-31
Setting Printer Registration	3-32
Repair Information	4-1
Removal and Replacement Procedures	4-2
Fuser Full Cover	4-2
Top Cover Assembly	4-4
Front Cover Assembly	4-6
Front Inner Cover	4-8
Rear Cover Assembly	4-9
Right Cover	4-10
Operator Panel	4-11
Rear Cover 1TM	4-12
Tray 1 Lift Motor	4-13
Tray 1 Feed Clutch	4-14
Tray 1 Feed Rolls	4-16
Feeder, Nudger, and Retard Rolls	4-17
Tray 1 Take Away Roll Assembly	4-19
Tray 1 Feeder Assembly	4-22
Support Assembly Spring	4-24
Tray 1 Retard Assembly	4-25
Tray 1 & Tray 2 Front Chute Assemblies	4-26

4025-XXX

Tray 1 & 2 Level Sensors	4-27
Tray 1 & Tray 2 Paper Size Sensors	4-29
Tray 1 & 2 No Paper Sensors	4-31
Actuator Assembly	4-33
Tray 2 Lift Motor	4-34
Tray 2 Feed Clutch	4-35
Tray 2 Feeder Assembly	4-36
Tray 2 Take Away Roll Assembly	4-38
Tray 2 Retard Assembly	4-39
MP Feeder Assembly	4-40
MP Feeder Tray Assembly	4-41
MP Feeder Support Assembly	4-43
L/H Low Cover Assembly	4-44
Left Lower Cover Assembly	4-46
Left Lower Cover Pinch Roll Assembly	4-47
Left Lower Cover Interlock Switch	4-49
Tray 2 Take Away Sensor	4-50
Registration Clutch	4-51
Left Upper Cover Assembly	4-52
Registration Chute	4-54
Registration Roll Assembly	4-55
Registration Sensor	4-56
Printhead Assembly	4-57
EP Cartridge	4-59
BTR Assembly	4-61
Toner Sensor	4-63
CRU Interlock Switch	4-64
Fuser Assembly	4-65
Fuser Drive Assembly	4-66
Fuser Fan	4-68
Offset/Exit Assembly	4-69
Exit Drive Assembly	4-71
Exit Gate Solenoid	4-72
Offset Motor	4-73
Inverter Clutches	4-74
Full Stack Sensor	4-76
Face Up Exit Sensor	4-77
Flywheel Assembly	4-78
Main Drive Assembly	4-79
Low Voltage Power Supply (LVPS) Assembly	4-82
Fan Assembly	4-84
AC Driver PWB 120/230 VAC	4-86
High Voltage Power Supply (HVPS) Assembly	4-88

I/O PWB	4-89
Left Cover Interlock Switch Assembly	4-90
Engine Board (MCU PWB)	4-92
Controller Board (ESS PWB)	4-94
ESS Cover	4-96
220VAC Transformer	4-97
ESS Assembly	4-98
Connector Locations	5-1
P/J Location Table	5-1
P/J Location Maps	5-6
Printer Wiring Diagrams	5-14
Preventative Maintenance	6-1
Parts Catalog	7-1
How to Use This Parts Catalog	7-1
Assembly 1: Top Cover Assembly	7-2
Assembly 2: Front Cover	7-4
Assembly 3: Rear, Left, and Right Covers	7-6
Assembly 4: Tray Unit - Paper Stack	7-8
Assembly 5: Tray Interface	7-10
Assembly 6: Paper Pick Up	7-12
Assembly 7: Retard and Take Away - Tray 1	7-14
Assembly 8: Retard and Take Away - Tray 2	7-16
Assembly 9: Feed Drive Transmission	7-18
Assembly 10: Multi Purpose Feeder and MPF/Duplex Support	7-20
Assembly 11: Tray 1 Frame and Left Cover	7-22
Assembly 12: Tray 2 Frame and Left Cover	7-24
Assembly 13: Registration	7-26
Assembly 14: Left Upper Cover Assembly	7-28
Assembly 15: Printhead Assembly	7-30
Assembly 16: Xerography and Development	7-32
Assembly 17: Fuser Assembly	7-34
Assembly 18: Exit Lower Chute	7-36
Assembly 19: Exit Drive Assembly	7-38
Assembly 20: Main Drive Assembly	7-40
Assembly 21: Fuser Drive Assembly	7-42
Assembly 22: Power Unit	7-44
Assembly 23: HVPS and I/O PWB	7-46
Assembly 24: ESS Assembly	7-48
Assembly 25: Harness	7-50
Assembly 26: Miscellaneous	7-52
Index	I-1

For the complete PDF manual
please visit www.LaserPros.com.