



Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark™ W820 Finisher

4025-XXX

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***
- ***Manuals Menu***

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: May 2001

The following paragraph does not apply to any country where such provisions are inconsistent with local law:
LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

PCL is a registered trademark of the Hewlett-Packard Company.

PostScript is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

**© Copyright Lexmark International, Inc. 2001.
All rights reserved.**

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer

Contents

Preface	ix
Safety Information	x
Introduction	1-1
Maintenance Approach	1-1
Tools Required For Service	1-1
Symbols Used in this Manual	1-1
Safety Details	1-1
Printer Power Supply and Electrical Components	1-2
Mechanical Components	1-2
Printer Laser Components	1-2
Printer Fuser Components	1-3
Safety Components	1-3
Caution Labels	1-3
Principles of Operation	1-4
Finisher Power	1-4
Finisher Control	1-5
Mechanical Drive	1-7
Drive for Jogging	1-19
Finisher Paper Path	1-26
H-Tra Section	1-27
Punch Section	1-28
Shift Section	1-32
Compiler & Jogger Section	1-33
Stapler Section	1-36
Exit Sections	1-37
Paper Stack Sections	1-39
Top Tray Exit Sections	1-43
Glossary of Terms, Acronyms, and Abbreviations	1-44
Diagnostic Information	2-1
Start	2-1
Operator Panel Messages	2-1
Accessing Additional Debug Information for Service Errors	2-3
Service Error Code Table	2-4

4025-Finisher

Attendance Message Table	2-5
Service Checks Flowchart	2-9
How to Use the Service Checks Flowchart	2-9
How to Follow a Service Check	2-9
General Notes on Using Service Checks	2-10
Service Checks	2-11
Attendance Message Service Checks	2-12
Service Error Code Service Checks	2-29
Diagnostic Aids	3-1
Entering Diagnostic Mode	3-1
Exiting Diagnostic Mode	3-1
Analyzing the Test Print	3-1
Using Test Print to Locate a Feed or Paper Transport Problem	3-1
Finisher Tests	3-2
Staple Test	3-2
Finisher Sensor Test	3-2
Removal and Replacement Procedures	4-1
Notations in the text	4-1
Cover, Rear Removal	4-2
Spring Tension 80, Sensor and Harness Earth Removal	4-3
Belt-Sync Removal	4-5
Bracket Assembly Removal	4-6
Tray Harness Assembly Removal	4-7
Transport Gear Kit Removal	4-9
Solenoid Assembly-Gate In Removal	4-11
Cover Top H-Tra Assembly Removal	4-13
Roll Transport and Aligner Roll Kit Removal	4-14
Entrance Roll Removal	4-16
Sensor and Sensor Full Removal	4-18
Sensors Removal	4-20
Shaft Transport Removal	4-22
Cover-Jogging Removal	4-23
Tray-Lower Removal	4-24
Cover-Top, Front and Rear Removal	4-25
Cover-Open, Cover-Front and Kit Stud Cover Removal	4-26
Switch Cover Front Removal	4-28
Latch Assembly and Switch Docking Removal	4-29
Kit H-Tra Bracket and Screw Removal	4-31
Cover-Rear Removal	4-32
Cover-Top Left Removal	4-33
Top Center Cover Assembly Removal	4-34

4025-Finisher

Kit Bracket Assembly and Screw Removal	4-35
Frame Post Removal	4-36
Cap-End Removal	4-38
Caster Assembly Removal	4-39
Lever Assembly Removal	4-40
Sensor, Input Path Removal	4-41
Sensor, Exit Path Removal	4-42
Roll Assembly-REGI Removal	4-43
Roll Transport Removal	4-44
Kit Drive Assembly Removal	4-46
Chute Assembly-Inlet Removal	4-48
Kit Invert Guide Removal	4-49
Kit Buffer Chute Removal	4-51
Knob, Regi Roller Removal	4-53
Transport Motor Assembly Removal	4-54
Puncher Removal	4-55
Kit Roll Pinch Removal	4-57
Sensor, Path Removal	4-58
Guide Assembly-Dust Removal	4-59
Bottle Assembly-Dust Removal	4-60
Sensor Dust-Assembly Removal	4-61
Inner Cover Removal	4-62
Sensor Bottle Kit Removal	4-64
Kit Motor Jogging Removal	4-66
Sensor, Jogger Home Position Removal	4-68
Plate-Jogger Removal	4-70
Kit Shift Assembly Removal	4-71
Knob, Shift Unit Removal	4-75
Kit Shift Motor Removal	4-76
Motor Assembly-MP2 Removal	4-77
Sensor, Exit Path Removal	4-79
Compiler Roll and Roll Shaft Removal	4-80
Sensor, Exit Roller Open/Close Home Position Removal	4-81
Exit Roll Sensor Removal	4-82
Kit Gear Front Removal	4-83
Motor Removal	4-84
Kit Gear Rear Removal	4-85
Motor Assembly-MP4 Removal	4-87
Staple Stage Assembly, Stack Roll Shaft, No Paper Sensor Stapler Removal	4-88
Stack Arm Assembly, No Paper Sensor Tray Lower Removal	4-90
Stapler I Assembly Removal	4-92
Stapler II Assembly Removal	4-97
Stapler Harness Assembly Removal	4-98

4025-Finisher

Cartridge Removal	4-101
Traverse Motor Assembly Removal	4-102
Motor Assembly-Swing Removal	4-104
Sensor Assembly Swing Removal	4-106
Belt Removal	4-110
Cable, Flat Removal	4-111
Sensor, Stapler Home Position Traverse Removal	4-113
Kit Bearing Removal	4-114
Holder Assembly Removal	4-116
Blade Assembly Removal	4-118
Sensor Tray Height Front Removal	4-119
Shaft Assembly ELEV U Removal	4-120
Shaft Assembly ELEV L Removal	4-121
Drive Assembly-ELEV, Motor Assembly-MD11 Removal	4-124
Right Cover Removal	4-126
Encoder Assembly Removal	4-128
Power Supply Removal	4-130
PWB Assembly-Main Removal	4-132
Port Harness Assembly Removal	4-135
No Paper Sensor Assembly Removal	4-136
Face Up Tray Removal	4-138
Top Cover Interlock Switch Removal	4-139
Gate Solenoid Removal	4-140
Full Stack Sensor Assembly Removal	4-141
Pinch Roll Removal	4-142
Exit Sensor Removal	4-143
Exit Assembly Removal	4-145
Upper Roll and Roll Transport Removal	4-147
Stepping Motor, Upper Tray Removal	4-149
Gear Kit Removal	4-150

Connectors

5-1

Location Table

5-2

Location Map 1	5-6
Location Map 2	5-7
Location Map 3	5-8
Location Map 4	5-9
Location Map 5	5-10
Location Map 6	5-11
Wiring Diagram Notations	5-12
Master Wiring Diagram	5-13

Preventative Maintenance

6-1

Parts Catalog

7-1

4025-Finisher

How to Use This Parts Catalog	7-1
Assembly 1: Top Cover	7-2
Assembly 2: Frame Transport Assembly	7-4
Assembly 3:	7-6
Assembly 4: Docking Parts, Front Cover, Top Tray	7-8
Assembly 5: Rear Cover	7-10
Assembly 6: Chute 1	7-12
Assembly 7: Chute 2	7-14
Assembly 8: Top Exit	7-16
Assembly 9: Frame	7-18
Assembly 10: Guide	7-20
Assembly 11: Puncher Assembly	7-22
Assembly 12: Jogging Assembly	7-24
Assembly 13: Shift Assembly	7-26
Assembly 14: Stacker Unit	7-28
Assembly 15: Stacker Tray	7-30
Assembly 16: Stapler Assembly	7-32
Assembly 17: Elevator Unit	7-34
Assembly 18: Finisher Main PWB, Power Supply	7-36
Assembly 19: Harness	7-38
Index	I-1

For the complete PDF manual
please visit www.LaserPros.com.