

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).



## *Service Manual*

**Lexmark Optra™ M410/M412**  
**4045-XXX**

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***
- ***Manuals Menu***

**LEXMARK™**

*Lexmark and Lexmark with diamond  
design are trademarks of Lexmark  
International, Inc., registered in the  
United States and/or other countries.*

**Edition: May 2000**

**The following paragraph does not apply to any country where such provisions are inconsistent with local law:** LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

A form for reader's comments is provided at the back of this publication. If the form has been removed, comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Optra are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Color Jetprinter is a trademark of Lexmark International, Inc.

Other trademarks are the property of their respective owners.

**© Copyright Lexmark International, Inc. 2000.**

**All rights reserved.**

#### **UNITED STATES GOVERNMENT RESTRICTED RIGHTS**

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

# Table of Contents

<b>Notices and Safety Information</b> .....	<b>vii</b>
Laser Notices .....	vii
Safety Information .....	xv
<b>General Information</b> .....	<b>1-1</b>
Options .....	1-2
Printer Specifications .....	1-3
<b>Diagnostic Information</b> .....	<b>2-1</b>
Start .....	2-1
Service Error Codes .....	2-2
User Status Messages .....	2-5
User Error Messages .....	2-9
Power-On Self Test (POST) .....	2-14
Symptom Tables .....	2-15
Charge Roll Service Check .....	2-17
Cover Open Switch/Cable Service Check .....	2-19
Dead Machine Service Check .....	2-20
Erase Lamp Service Check .....	2-22
Fan Service Check .....	2-23
Fuser Service Check .....	2-23
Input Sensor Service Check .....	2-25
Input Tray(s) Option Service Check .....	2-26
Main Drive Service Check .....	2-29
Operator Panel Service Check .....	2-30
Options Service Check .....	2-32
Paper Feed Service Check .....	2-33
Parallel Port Service Check .....	2-35
Printhead Service Check .....	2-36
Print Quality Service Check .....	2-37
Serial Port Service Check .....	2-47
Transfer Roll Service Check .....	2-48
<b>Diagnostic Aids</b> .....	<b>3-1</b>
Configuration Mode .....	3-1
Print Quality Test Pages .....	3-2
Panel Menus .....	3-2
PPDS Emulation .....	3-3
Discard Buffered Jobs .....	3-3
Download Emulation .....	3-3

Demo Mode . . . . .	3-4
Restore Factory Defaults. . . . .	3-4
Narrow Media . . . . .	3-5
Exiting the Configuration Mode . . . . .	3-5
Diagnostic Mode . . . . .	3-5
Exiting the Diagnostic Mode . . . . .	3-5
Print Registration. . . . .	3-6
Print Tests . . . . .	3-6
Hardware Tests . . . . .	3-8
Input Tray Tests . . . . .	3-13
Base Sensor Test . . . . .	3-14
Printer Setup . . . . .	3-14
Error Log . . . . .	3-17
Device Tests . . . . .	3-17
Hardware Test Mode . . . . .	3-20
Operator Panel Test . . . . .	3-21
Main Motor Test . . . . .	3-22
Solenoid Test . . . . .	3-22
Tray 2 Motor Test . . . . .	3-23
Mirror Motor Test. . . . .	3-23
Sensor Monitor Test . . . . .	3-24
Cooling Fan / Fuser Control Test . . . . .	3-25
Erase Lamp Test. . . . .	3-26
Reset Test Mode. . . . .	3-26
Engine Firmware . . . . .	3-26
Printer Operation . . . . .	3-27
Electrophotographic Process . . . . .	3-27
Paper Feeding, Transferring and Fusing . . . . .	3-27
Paper Path/Sensor Locations . . . . .	3-28
Cable Locations . . . . .	3-29
<b>Repair Information . . . . .</b>	<b>4-1</b>
Handling ESD-Sensitive Parts . . . . .	4-1
Adjustment Procedures . . . . .	4-2
Printhead Assembly . . . . .	4-2
Paper Alignment . . . . .	4-3
Removal Procedures . . . . .	4-4
Covers . . . . .	4-4
Charge Roller . . . . .	4-8
Controller Board . . . . .	4-9
Cooling Fan. . . . .	4-11
Developer Drive Assembly . . . . .	4-13
Engine Board. . . . .	4-14

Fuser ..... 4-15  
HVPS ..... 4-17  
Inner Deflector ..... 4-18  
Left Side Frame ..... 4-20  
LVPS ..... 4-21  
Main Drive Assembly ..... 4-23  
Multipurpose Tray ..... 4-24  
Paper Alignment Assembly ..... 4-25  
Pick Roll ..... 4-27  
Printhead ..... 4-28  
Redrive Assembly ..... 4-29  
Right Side Frame ..... 4-30  
Transfer Roller ..... 4-30

**Connector Locations** ..... 5-1

Low Voltage Power Supply ..... 5-1  
High Voltage Power Supply ..... 5-2  
Engine Board ..... 5-4  
Interconnect Board ..... 5-10  
Option Tray Board ..... 5-12

**Parts Catalog** ..... 6-1

Assembly 1: Covers ..... 6-2  
Assembly 2: Frame ..... 6-6  
Assembly 3: Printhead ..... 6-8  
Assembly 4: Paper Feed - Multipurpose Unit ..... 6-10  
Assembly 5: Paper Feed - Alignment ..... 6-12  
Assembly 6: Paper Feed - Output ..... 6-14  
Assembly 7: Main Drive ..... 6-16  
Assembly 8: Developer Drive ..... 6-18  
Assembly 9: Fuser ..... 6-20  
Assembly 10: Transfer ..... 6-24  
Assembly 11: Charging ..... 6-26  
Assembly 12: Electronics ..... 6-28  
Assembly 13: 250-Sheet Tray ..... 6-34  
Assembly 14: 500-Sheet Tray ..... 6-36  
Assembly 15: Options ..... 6-40

**Index** ..... I-1

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).