

Revised: February 2005



Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark™ T430

4048-1xx

- ***Table of contents***
- ***Start diagnostics***
- ***Safety and notices***
- ***Trademarks***
- ***Index***

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: February 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark, Lexmark with diamond design, MarkNet, and MarkVision are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick, Opra Forms, and PrictureGrade are trademarks of Lemark International, Inc.

PCL[®] is a registered trademark of the Hewlett-Packard Company.

PostScript[®] is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

© 2004 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

Table of Contents

Laser notices	vii
Safety information	xvii
Preface	xxii
Definitions	xxii
General information	1-1
Models	1-1
Maintenance approach	1-1
Special tools	1-2
Printer identification	1-2
Printer features and specifications	1-3
Operator panel	1-3
Resolution and print quality	1-4
Memory and user flash memory	1-5
Printer data streams	1-5
Print area	1-6
Supplies	1-6
Fonts	1-6
Media and paper handling	1-7
Media	1-7
Standard and optional paper sources	1-8
Input media sources	1-9
Output media	1-10
Acronyms	1-11
Diagnostic information	2-1
Start	2-1
Power-On Reset (POR) sequence	2-2
Symptom tables	2-3
POST symptom table	2-3
Printer symptom table	2-4
Messages and error codes	2-6
Service error codes	2-6
User attendance messages	2-11
Paper jam messages	2-22
Sub error codes	2-24
Disconnects on the controller card	2-34

- Service checks2-36
 - Cooling fan service check2-36
 - Cover interlock switch service check.....2-37
 - Controller card service check2-38
 - Dead machine service check.....2-39
 - Low voltage power supply (LVPS) service check2-39
 - High voltage power supply (HVPS) service check.....2-40
 - Fuser service check.....2-40
 - Main motor service check2-42
 - Operator panel service check2-43
 - Transfer roll service check2-44
 - Paper feed service checks.....2-45
 - Parallel port service check.....2-49
 - Print quality service checks.....2-50
- Solving print quality problems2-56
- Diagnostic aids3-1**
 - Additional service menus3-1
 - Diagnostics Mode3-2
 - Entering Diagnostic Mode3-2
 - REGISTRATION3-4
 - PRINT TESTS3-5
 - HARDWARE TESTS.....3-6
 - DUPLEX TESTS3-9
 - INPUT TRAY TESTS.....3-12
 - BASE SENSOR TEST.....3-14
 - DEVICE TESTS.....3-14
 - PRINTER SETUP3-15
 - EP SETUP.....3-17
 - ERROR LOG.....3-18
 - Configuration Menu3-21
 - Entering CONFIG MENU.....3-21
 - Maint Cnt Value3-22
 - Reset Maint Cnt.....3-22
 - Prt Quality Pgs.....3-23
 - Panel Menus3-23
 - PPDS Emulation3-23
 - Download Emuls3-24
 - Demo Mode.....3-24
 - Factory Defaults.....3-24
 - Energy Conserve.....3-25
 - ERROR LOG.....3-25
 - Paper Prompts.....3-26
 - Env Prompts3-26
 - Reduced Curl.....3-26
 - Exit Config Menu3-26
 - Paper jams3-27

Repair information	4-1
Handling ESD-sensitive parts	4-1
Adjustments	4-2
Printhead assembly adjustment	4-2
Adjusting paper feed alignment (skew)	4-5
Lubrication	4-6
Reassembly	4-7
Removal procedures	4-8
MPF door cover removal	4-8
Front cover removal	4-9
Top cover assembly removal	4-11
Right side cover removal	4-12
Left side cover removal	4-14
Rear cover removal	4-15
Rear exit door removal	4-17
Output tray full flag removal	4-18
Operator panel cable removal	4-20
Operator panel assembly removal	4-22
Duplex tray assembly removal	4-24
Bottom pan removal	4-25
Fuser assembly removal	4-26
Fuser paper exit guide assembly removal	4-29
Fuser exit sensor removal	4-33
Cartridge contact assembly removal	4-34
Tray damper and spring removal	4-35
Door latch removal	4-36
Paper guide roller removal	4-37
Charge roll removal	4-38
Right guide removal	4-39
Left guide removal	4-40
Cartridge signature button sensor removal	4-42
Transfer roll assembly	4-43
Bracket, paper detect (input sensor) removal	4-44
D-roll feed removal, tray 1	4-44
D-roll shaft assembly removal, tray 1	4-45
3-pin and 2-pin connectors removal	4-46
Printhead removal	4-46
Controller card cage (with card in place) removal	4-48
Controller card assembly removal	4-50
MPF gear removal	4-52
Main drive motor assembly removal	4-53
Main drive assembly removal	4-55
Exit drive motor removal	4-58
Exit drive assembly removal	4-59
Ratchet drive removal	4-60
Reference feed assembly removal	4-62

- Cartridge coupling assembly removal 4-65
- Upper MPF housing assembly (with paper flag) removal 4-66
- MPF paper sensor removal 4-67
- Lower MPF housing assembly removal. 4-70
- Backup feed roller assembly removal 4-72
- MPF pick roller assembly removal. 4-73
- HVPS card removal. 4-75
- LVPS fan removal 4-76
- LVPS card removal 4-77
- Inner link and outer link assembly removal 4-78
- Cooling fan removal. 4-82
- Locations and connections 5-1**
 - Exterior locations 5-1
 - Connectors 5-2
 - Controller card assembly. 5-2
 - Low voltage power supply (LVPS) 5-7
 - High voltage power supply (HVPS) 5-8
- Preventive maintenance 6-1**
 - Safety inspection guide 6-1
 - Lubrication specifications 6-1
 - Scheduled maintenance 6-2
 - Maintenance kits 6-2
 - Maintenance kit parts group 6-3
- Parts catalog 7-1**
 - How to use this parts catalog 7-1
 - Assembly 1: Covers 7-2
 - Assembly 2: Paper feed 7-4
 - Assembly 3: Frame 7-6
 - Assembly 4: Multipurpose feeder (MPF) 7-8
 - Assembly 5: Fuser. 7-9
 - Assembly 6: Charging 7-10
 - Assembly 7: Electronics and cables 1 7-12
 - Assembly 8: Electronics and cables 2 7-14
 - Assembly 9: Sensors 7-18
 - Assembly 10: Options 7-20
- Index I-1**
- Part number index I-7**

For the complete PDF manual
please visit www.LaserPros.com.