

Revised: 7/12/05

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Lexmark™ E23x, E33x

4505-100

4505-200

4505-300

4505-310

4505-400

4505-410

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: July 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time. Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark, Lexmark with diamond design, and MarkVision are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Optra Forms is a trademark of Lexmark International, Inc.

PCL[®] is a registered trademark of the Hewlett-Packard Company.

PostScript[®] is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

© 2004 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

U.S.A. P/N 12G9399

Table of contents

Laser notices	vii
Safety information	xv
Preface	xx
Definitions	xx
General information	1-1
Overview of the operator panel	1-3
Paper jams—how to clear	1-4
Tips on preventing jams	1-5
Tools	1-6
Types of print media	1-7
Abbreviations	1-8
Diagnostic information	2-1
Start	2-1
POST (power-on self test)	2-1
Overview of the operator panel	2-2
Understanding the operator panel lights	2-3
Common light sequences	2-3
Secondary errors	2-6
Operator panel codes	2-8
Primary codes	2-8
Secondary error codes	2-19
Service information with secondary and tertiary light patterns	2-29
Secondary error codes	2-30
Tertiary service error codes	2-31
Symptom tables	2-44
POST symptom table	2-44
Printer symptom table	2-45
Service checks	2-47
Cold fuser service check	2-47
Cooling fan service check	2-48
Controller card service check	2-49
Cover interlock switch service check	2-51
Dead machine service check	2-52
Fuser service check	2-53
Hot fuser service check	2-56
LVPS/HVPS service check	2-57
Main motor service check	2-58

Operator panel service check	2-59
Printhead service check	2-61
Paper feed service checks	2-61
Parallel port service check	2-65
Print quality service checks	2-66
Using print quality test pages	2-66
Transfer roll service check	2-79
Diagnostic aids	3-1
Configuration and diagnostic groups	3-1
Configuration	3-1
Diagnostic	3-1
Power-On operations	3-2
Configuration menu selections	3-6
Diagnostics menu selections	3-12
Repair information	4-1
Removals	4-1
Covers	4-2
Fan removal	4-6
Feed rollers (auto comp tires) removal	4-7
Fuser idle gear links removal	4-7
Fuser power cable removal	4-8
Fuser removal	4-8
Input roller clutch and lever removal (ACM clutch CBM)	4-9
Input sensor #1 removal	4-9
Input sensor #2 (manual) removal	4-10
LVPS / HVPS card assembly removal	4-10
LVPS / HVPS to controller card cable removal	4-11
Manual feed clutch assembly removal	4-11
Operator panel removal	4-11
Paper exit guide assembly removal	4-12
Printhead removal	4-12
Toner level sensor cable removal	4-12
Toner level sensor removal	4-13
Transfer roll removal	4-13
Transport motor cable removal	4-14
Connector locations	5-1
Front and rear views	5-1
Power supply board	5-2
Controller board	5-3
Wiring diagram	5-4

Preventive maintenance	6-1
Parts catalog	7-1
How to use this parts catalog	7-1
Index	I-1
Part number index	I-5

For the complete PDF manual
please visit www.LaserPros.com.