

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Lexmark E210

4510-001

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

LEXMARK™

*Lexmark and Lexmark with diamond
design are trademarks of Lexmark
International, Inc., registered in the
United States and/or other countries.*

4510-001

Edition: June 2001

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Other trademarks are the property of their respective owners.

© Copyright Lexmark International, Inc. 2001.

All rights reserved.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

P/N 12G6119

Table of Contents

Laser Notices	1-v
Safety Information	1-xiii
Preface	1-xviii
General Information	1-1
Printer Side View - Locations	1-1
Maintenance Approach	1-2
Tools Required for Service	1-2
Abbreviations	1-2
Diagnostic Aids	2-1
Print Quality	2-1
Vertical Black Line and Band	2-1
Vertical White Line	2-1
Horizontal Black Band	2-1
Black/White Spots	2-2
Light Image	2-2
Dark or Black Image	2-2
Uneven Density	2-3
Background	2-3
Residual Image at 75 mm Intervals (1)	2-3
Residual Image at 75 mm Intervals (2)	2-4
Residual Image at 32 mm Intervals	2-4
Residual Image at 57 mm Intervals	2-4
Toner on Front of Page	2-5
Toner on Back of Page	2-5
Blank Page Printout (1)	2-5
Blank Page Printout (2)	2-6
Repeated marks or voids down page	2-6
Paper Feed	2-7
Printing in wrong position	2-7
Paper stopping, jamming, or feeding multiple sheets	2-7
Paper Path Jam 0	2-9
Paper Path Jam 1	2-9
Paper Path Jam 2	2-10

Service2-10

- All LEDs blinking (Printhead Error) during a print job.....2-10
- All LEDs blinking (Fuser Error) at power up.....2-11
- The LED blinks once then all other LEDs blink
(Over Heat Error)2-11
- The LED blinks once then all other LEDs blink
(Low Heat Error).....2-12
- The LED blinks once then all other LEDs blink (Open Fuser Error)
2-13
- False Paper Empty Indication2-13
- False Paper Present Indication2-14
- False Cover Open Indicator2-14
- Error LED Off When Cover Open.....2-15
- Drive Motor Does Not Operate.....2-15
- No Power2-16

Repair Information3-1

- Handling ESD-Sensitive Parts3-1
- Front Cover3-2
- Other Covers3-5
- Operator Panel.....3-6
- Printhead3-8
- Transfer Roller3-10
- Motor Assembly3-11
- Pick Roller Clutch Solenoid3-11
- HVPS Board.....3-12
- Fuser Assembly3-13
- Fuser Thermostat and Lamp3-15
- LVPS Board3-17
- Main Board and Input/Exit Sensor Board.....3-20
- Pre-Transfer LED Assembly (PTL).....3-21
- Pick Roller3-22

Parts Catalog4-1

Index I-1

For the complete PDF manual
please visit www.LaserPros.com.