

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).



## *Service Manual*

**Lexmark™ T52x**

**4520-xxx**

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

**LEXMARK™**

*Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.*

**Edition: July 2002**

**The following paragraph does not apply to any country where such provisions are inconsistent with local law:** LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at [ServiceInfoAndTraining@Lexmark.com](mailto:ServiceInfoAndTraining@Lexmark.com). Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Lexmark with diamond design and MarkNet are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick and Opra Forms are trademarks of Lexmark International, Inc.

Other trademarks are the property of their respective owners.

**© Copyright Lexmark International, Inc. 2001, 2002.**

**All rights reserved.**

**UNITED STATES GOVERNMENT RESTRICTED RIGHTS**

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

# Contents

<b>Notices and Safety Information</b> .....	<b>ix</b>
Laser Notices .....	ix
Safety Information .....	xxiii
<b>Preface</b> .....	<b>xxiii</b>
<b>General Information</b> .....	<b>1-1</b>
Options .....	1-2
Maintenance Approach .....	1-3
Tools Required for Service .....	1-3
Acronyms .....	1-4
<b>Diagnostic Information</b> .....	<b>2-1</b>
Start .....	2-1
Service Error Codes .....	2-2
User Status Messages .....	2-22
User Error Messages .....	2-25
Power-On Self Test (POST) .....	2-35
Symptom Tables .....	2-36
Service Checks .....	2-39
Charge Roll Service Check .....	2-40
Cover Open Switch/Cable Service Check .....	2-42
Dead Machine Service Check .....	2-43
Duplex Unit Service Check .....	2-45
Envelope Feeder Service Check .....	2-48
Fuser Service Check .....	2-56
Fuser Solenoid Service Check .....	2-60
Input Sensor Service Check .....	2-61
Input Tray(s) Service Check .....	2-62
High-Capacity Feeder Input Tray Service Check .....	2-66
Main Drive Service Check .....	2-77
Operator Panel Service Check .....	2-79
Options Service Check .....	2-81
Output Bin Sensor Standard Tray Service Check .....	2-83
Paper Feed Service Check .....	2-84
Parallel Port Service Check .....	2-86
Printhead Service Check .....	2-87
Print Quality Service Check .....	2-88
Smart Contact Assembly Service Check .....	2-100
Serial Port Service Check .....	2-101
Toner Sensor Service Check .....	2-102

Transfer Roll Service Check . . . . .	2-103
<b>Diagnostic Aids . . . . .</b>	<b>3-1</b>
Diagnostic Mode . . . . .	3-1
Device Tests . . . . .	3-2
Quick Disk Test . . . . .	3-2
Disk Test/Clean . . . . .	3-3
Flash Test . . . . .	3-4
Disabling Download Emulations . . . . .	3-5
Duplex Tests . . . . .	3-6
Duplex Quick Test . . . . .	3-6
Duplex Sensor Test . . . . .	3-7
Duplex Motor Test . . . . .	3-8
Duplex Feed 1 Test . . . . .	3-9
Duplex Feed 2 Test . . . . .	3-9
Error Log . . . . .	3-10
Viewing the Error Log . . . . .	3-10
Clearing the Error Log . . . . .	3-10
Hardware Tests . . . . .	3-11
LCD Test . . . . .	3-11
Button Test . . . . .	3-11
SDRAM Memory Test . . . . .	3-12
ROM Memory Test . . . . .	3-13
Parallel Wrap Test . . . . .	3-13
Serial Wrap Test . . . . .	3-13
Input Tray Tests . . . . .	3-15
Input Tray Feed Test . . . . .	3-15
Input Tray Sensor Test . . . . .	3-15
Output Bin Test - Standard Bin . . . . .	3-16
Base Sensor Test . . . . .	3-16
Print Registration . . . . .	3-17
Printer Setup . . . . .	3-18
Setting the Page Count . . . . .	3-18
Viewing the Permanent Page Count . . . . .	3-18
Maintenance Page Count . . . . .	3-19
Setting Configuration ID . . . . .	3-20
Restore EP Factory Defaults . . . . .	3-21
Print Tests . . . . .	3-22
Print Quality Test Pages . . . . .	3-23
Print Test with RIP (Controller Board) Removed . . . . .	3-24
Printing Menu Settings Page . . . . .	3-24
Autocompensator Operation . . . . .	3-25
Autoconnect System, Paper Tray Options, Envelope Feeder . . . . .	3-26

**4520-xxx**

Fuser Operation . . . . . 3-27  
Paper Feed Jams . . . . . 3-28

**Repair Information . . . . . 4-1**

Handling ESD-Sensitive Parts . . . . . 4-1  
Adjustment Procedures . . . . . 4-2  
    Duplex Motor Drive Belts . . . . . 4-2  
    Fuser Solenoid Adjustment . . . . . 4-3  
    Gap Adjustment . . . . . 4-3  
    Printhead Assembly Adjustment. . . . . 4-4  
    Paper Alignment Assembly Adjustment . . . . . 4-5  
Screw Identification Table . . . . . 4-7  
Removal Procedures . . . . . 4-12  
    Covers Removals . . . . . 4-12  
    Center Pan Assembly Removal . . . . . 4-16  
    Controller Board Removal . . . . . 4-17  
    Developer Drive Assembly Removal . . . . . 4-18  
    Duplex Board Removal. . . . . 4-19  
    Duplex Front Cover Assembly Removal. . . . . 4-19  
    Duplex Front Cover Door Removal . . . . . 4-19  
    Duplex Motor Removal . . . . . 4-20  
    EMC Shields Removals . . . . . 4-21  
    Engine Board Removal. . . . . 4-23  
    Main Fan Removal . . . . . 4-24  
    Frames Removals . . . . . 4-25  
    Fuser Removal . . . . . 4-28  
    Fuser Board Removal. . . . . 4-29  
    Fuser Cover Removal. . . . . 4-30  
    Fuser Detack Housing Assembly Removal . . . . . 4-32  
    Fuser Transfer Plate Removal . . . . . 4-32  
    Fuser Envelope Conditioner Solenoid Removal. . . . . 4-33  
    Fuser Narrow Media Sensor/Flag Assembly Removal. . . . . 4-34  
    Fuser Exit Sensor Flag Assembly Removal . . . . . 4-34  
    Fuser Lamp Removal . . . . . 4-35  
    Fuser Lower Exit Guide Assembly Removal . . . . . 4-35  
    High Voltage Power Supply Removal. . . . . 4-36  
    Integrated Tray Compensator Assembly Removal. . . . . 4-37  
    Integrated Tray Compensator Pick Roll Assembly  
    Removal . . . . . 4-38  
    Interconnect Board Assembly Removal . . . . . 4-39  
    Low Voltage Power Supply Removal . . . . . 4-40  
    Main Drive Assembly Removal. . . . . 4-43  
    Main Drive Motor Removal . . . . . 4-44

Multipurpose Tray/Lower Deflector Assembly Removal . . . . .	4-45
Operator Panel Assembly Removal. . . . .	4-47
Operator Panel Cable/Cover Switch Removal. . . . .	4-48
Optional 250/500 Paper Tray Assembly Removal. . . . .	4-49
Paper Alignment Assembly Removal . . . . .	4-50
Paper Deflectors Removals. . . . .	4-52
Paper Input Sensor Removal. . . . .	4-53
Paper Size Sensing Board Removal . . . . .	4-53
Pick Roll Removal . . . . .	4-53
Printhead Removal . . . . .	4-54
Redrive Assembly Removal. . . . .	4-55
Smart Contact Assembly Removal . . . . .	4-56
Toner Sensor Removal . . . . .	4-57
Transfer Roll Assembly Removal . . . . .	4-58
Upper Paper Deflector Assembly Removal . . . . .	4-58
Upper Front Cover Hinge Assembly Removal. . . . .	4-59
Upper Front Cover Interlock Switch Assembly Removal. . . . .	4-60
Pick Roller Replacement . . . . .	4-61
<b>Connector Locations . . . . .</b>	<b>5-1</b>
Low Voltage Power Supply . . . . .	5-1
High Voltage Power Supply. . . . .	5-3
Engine Board. . . . .	5-4
Engine Board. . . . .	5-9
Controller Board - Non Network. . . . .	5-10
Controller Board - Network . . . . .	5-11
Fuser Board. . . . .	5-12
Interconnect Board . . . . .	5-14
Envelope Feeder Board. . . . .	5-16
Duplex Unit Board . . . . .	5-18
<b>Preventive Maintenance. . . . .</b>	<b>6-1</b>
Safety Inspection Guide . . . . .	6-1
Lubrication Specifications . . . . .	6-1
Scheduled Maintenance . . . . .	6-2
<b>Parts Catalog . . . . .</b>	<b>7-1</b>
How to Use This Parts Catalog. . . . .	7-1
Assembly 1: Covers. . . . .	7-2
Assembly 2: Frame . . . . .	7-4
Assembly 3: Printhead. . . . .	7-8
Assembly 4: Paper Feed (Autocompensator) . . . . .	7-10
Assembly 5: Paper Feed - Multipurpose Unit . . . . .	7-12
Assembly 6: Paper Feed - Alignment . . . . .	7-14

**4520-xxx**

Assembly 7: Paper Feed - Output ..... 7-16  
Assembly 8: Integrated Paper Tray - 500 Sheet ..... 7-18  
Assembly 9: Main Drive ..... 7-20  
Assembly 10: Developer Drive ..... 7-22  
Assembly 11: Hot Roll Fuser ..... 7-24  
Assembly 12: Transfer ..... 7-26  
Assembly 13: Charging ..... 7-28  
Assembly 14: Electronics 1 ..... 7-30  
Assembly 15: Electronics II ..... 7-34  
Assembly 16: Electronics III ..... 7-36  
Assembly 17: Electronics IV ..... 7-38  
Assembly 18: Electronics V ..... 7-40  
Assembly 19: Electronics VI ..... 7-42  
Assembly 20: 250-Sheet Tray ..... 7-44  
Assembly 21: Integrated Paper Tray - 250 Sheet ..... 7-48  
Assembly 22: 500-Sheet Tray ..... 7-50  
Assembly 23: Duplex Unit ..... 7-54  
Assembly 24: Envelope Feeder ..... 7-60  
Assembly 25: High-Capacity Feeder ..... 7-62  
Assembly 26: Kiosk - Vertical Paper Adapter ..... 7-72  
Assembly 27: Kiosk - Horizontal Paper Adapter ..... 7-74  
Assembly 28: Options ..... 7-76  
Assembly 29: Miscellaneous ..... 7-78

**Index..... I-1**

For the complete PDF manual  
please visit [www.LaserPros.com](http://www.LaserPros.com).