



Maintenance Reset Instructions - HP LJ Monochrome Printers

Note: If kit is replaced before the message appears, service mode will need to be entered to reset the counter.

HP LJ 5si

When printer displays PERFORM PRINTER MAINTENANCE:

- Scroll to CONFIGURATION MENU
- Scroll to SERVICE MESSAGE =
- Set to OFF

Service mode:

- Hold ITEMS and (+) buttons at power up until the three lights remain solid, release, then press SELECT
- Printer should display SERVICE MODE
- Make a note of the printer PAGE COUNT
- Use ITEM button until the MAINTENANCE COUNT is displayed
- Set to equal exactly 350,000 higher than the page count

HP LJ 4000-4050-4100-5000-5100-5200-8000-8100-8150

When printer displays PERFORM PRINTER MAINTENANCE

- Hold down the left side (-) of both ITEM and VALUE keys
- Printer will display RESETTING MAINT COUNT

Service mode:

- Hold JOB CANCEL and SELECT buttons at power up until the three lights remain solid
- Release, then press MENU (right side) then SELECT
- Printer should display SERVICE MODE
- Make a note of the printer PAGE COUNT
- Use MENU button until the MAINTENANCE COUNT is displayed
- Set to zero unless 4000 or 5000 (see below)

HP 4000: Must change MAINTENANCE COUNT to equal 200,000 higher than PAGE COUNT

HP 5000: Change MAINTENANCE COUNT to equal 150,000 higher than PAGE COUNT

HP LJ 2300-2400-P3005-4200-4300-4250-4350-5200-9000-9050

When printer displays PERFORM PRINTER MAINTENANCE:

- Power off/on printer
- Wait until memory count starts, then press hold down the (✓) key until the three lights remain solid, then release
- Printer will display SELECT LANGUAGE use (↑) or (↓) keys until NEW MAINT KIT is highlighted
- Press (✓)

HP LJ P4515 Series

When printer displays PERFORM PRINTER MAINTENANCE:

- Power off/on printer
- Wait until memory count starts
- Press/hold down the (OK) button until three lights remain solid, then release
- Use (↑) or (↓) keys until NEW MAINT KIT is highlighted
- Press (OK)

