




RM1-3161/Q7504A ETB Assembly Installation Instructions

Step 1: If using the new ETB assembly with a simplex (non-duplex) printer, turn off printer and proceed to step 3.

Step 2: If using the new ETB assembly in a duplex printer, the installer must remove the duplex feed assembly from the old ETB assembly and transfer to the new ETB assembly. Turn off printer and remove the old ETB assembly. Remove the two screws (shown below) and gently lift up on the duplex feed assembly to remove. Transfer duplex feed assembly to the new ETB assembly and replace screws to secure. Proceed to step 3.

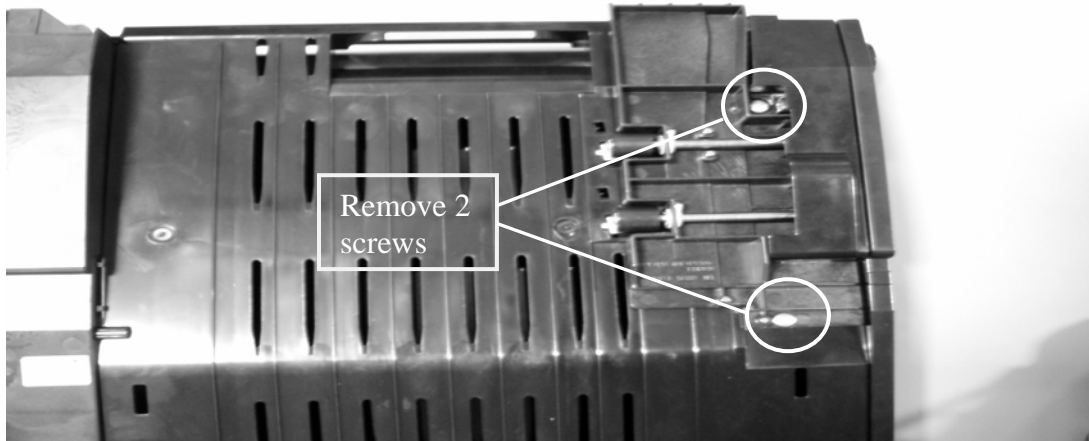

Step 3: Installation Instructions

With printer **off**, install new ETB assembly, turn on printer, and let the printer come to a full ready.

Warning

Failure to install the new ETB assembly using the above steps may prematurely trip the electronic maintenance reset, prevent the reset of the printer maintenance count, and may void the part warranty.