



~ This assembly contains an electronic maintenance reset.

~ The printer MUST be powered OFF for the reset to work correctly.

~ Do not replace any two components at the same time containing electronic resets.
(The printer may only reset one component)

~ If two or more components are to be replaced, be sure to cycle power (turn off/on) with each component being replaced.

****Warning****

Failure to install the new component using the above steps may prematurely trip the electronic maintenance reset, prevent the reset of the printer maintenance count, and may void the part warranty.

| Model | Component |
|---------------------------------------|--|
| CLJ 4700/CP4005/CLJ 4730MFP/CM4730MFP | RM1-3161/Q7504A RM1-3131/Q7502A |
| CP4025/CP4525/CM4540MFP/M651/M680MFP | CE249A/RM1-5575 CC493-67911/CE246A/RM1-5550 |
| M806/M830MFP | CF367-67928/C2H67-67901 |
| CP6015/CM6040MFP | CB457A/CB463A |
| M855/M880MFP | C1N54-67901/RM2-5012/D7H14A |