



Frequently Asked Menu Setting Location Cheat Sheet

FutureSmart 3, FutureSmart 4, and FutureSmart 5 Models

| | FutureSmart 3 | FutureSmart 4 or 5 |
|--|--|--|
| Fax send confirmation | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Administration ▪ Fax settings ▪ Fax receive setting ▪ Default job options ▪ Notification | <p>*Must be done from EWS*</p> <ul style="list-style-type: none"> ▪ Fax ▪ Fax send settings ▪ Default job options ▪ Notification |
| Fax receive confirmation | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Administration ▪ Fax settings ▪ Fax receive settings ▪ Default job options ▪ Notification | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Administration ▪ Fax settings ▪ Fax receive settings ▪ Default job options ▪ Notification |
| Default copy image adjust setting | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Administration ▪ Copy Settings ▪ Image Adjust | <p>*Must be done from EWS*</p> <ul style="list-style-type: none"> ▪ Copy/Print ▪ Copy Settings ▪ Default job options ▪ Image Adjust |
| Clean roller count reset | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Device maintenance ▪ Calibration/Cleaning ▪ Clean rollers count ▪ Reset | <p>*Resets from Service Mode*</p> <ul style="list-style-type: none"> ▪ Support tools ▪ Service ▪ Cycle counts ▪ Clean roller count |
| Fuser mode adjustment | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Administration ▪ General Settings ▪ Print Quality ▪ Adjust Paper Types (select default) ▪ Print Modes | <p>*Can be done from printer*</p> <ul style="list-style-type: none"> ▪ Settings ▪ Print ▪ Print Quality ▪ Adjust Paper Types (select default) ▪ Print Modes |